
Operating instructions

51151902

03.13

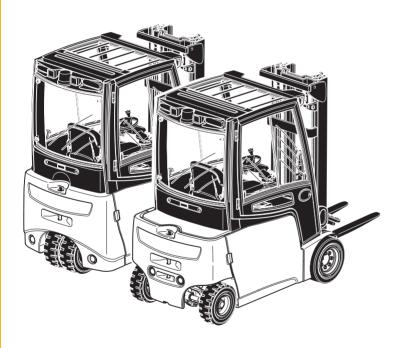

(GB)

EFG 213 EFG 215 EFG 216k EFG 216 EFG 218k EFG 220 EFG 316k EFG 316 EFG 318k EFG 318



Declaration of Conformity



Jungheinrich AG, Am Stadtrand 35, D-22047 Hamburg Manufacturer or agent acting in the European Union

Туре	Option	Serial no.	Year of manufacture
EFG 213			
EFG 215			
EFG 216k			
EFG 216			
EFG 218k			
EFG 218			
EFG 220			
EFG 316k			
EFG 316			
EFG 318k			
EFG 318			
EFG 320			

Additional information

On behalf of

Date

(GB) EU Conformity Declaration

The undersigned hereby declare that the powered industrial truck described below in detail complies with the European Directives 2006/42/EC (Machinery Directive) and 2004/108/EEC (Electromagnetic Compatibility - EMC) including amendments as well as the legislative decree to incorporate the directives in national law. The signatories are in each case individually authorized to compile the technical documents.

Foreword

Notes on the operating instructions

The present ORIGINAL OPERATING INSTRUCTIONS are designed to provide sufficient instruction for the safe operation of the industrial truck. The information is provided clearly and concisely. The chapters are arranged by letter and the pages are numbered continuously.

The operator manual details different industrial truck models. When operating and servicing the industrial truck, make sure that the particular section applies to your truck model.

Our trucks are subject to ongoing development. Jungheinrich reserves the right to alter the design, equipment and technical features of the system. No guarantee of particular features of the truck should therefore be assumed from the present operating instructions.

Safety notices and text mark-ups

Safety instructions and important explanations are indicated by the following graphics:

Λ

DANGER!

Indicates an extremely hazardous situation. Failure to comply with this instruction will result in severe irreparable injury and even death.

A

WARNING!

Indicates an extremely hazardous situation. Failure to comply with this instruction may result in severe irreparable injury and even death.

Λ

CAUTION!

Indicates a hazardous situation. Failure to comply with this instruction may result in slight to medium injury.

NOTE

Indicates a material hazard. Failure to comply with this instruction may result in material damage.

- →
- Used before notices and explanations.
- Indicates standard equipment
- Indicates optional equipment

Copyright

Copyright of these operating instructions remains with JUNGHEINRICH AG.

Jungheinrich Aktiengesellschaft

Am Stadtrand 35 22047 Hamburg - Germany

Tel: +49 (0) 40/6948-0

www.jungheinrich.com

Contents

Α	Correct Use and Application	11
1 2 3	General Correct application Approved application conditions	11 11 12
4	Proprietor responsibilities	13
5	Adding attachments and/or optional equipment	13
5	Adding attachments and/or optional equipment	13
В	Truck Description	15
1	Application	15
1.1	Truck models and rated capacity	15
2	Assemblies and Functional Description	16
2.1	Travel direction definition	16
2.2	Assembly Overview	17
2.3	Functional Description	18
3	Technical Specifications	19
3.1	Performance data	20
3.2	Dimensions	22
3.3	Weights	28
3.4		29
3.5	Mast versions	30
	Tyre type	
3.6	Engine Data	31
3.7	EN norms	32
3.8	Conditions of use	33
3.9	Electrical requirements	33
4	Identification points and data plates	34
4.1	Indication Points	34
4.2	Data plate	36
4.3	Truck capacity plate	37
4.4	Attachment capacity plate	38
5	Stability	38
С	Transport and Commissioning	39
1	Transport	39
2		39
	Truck laden	
2.1	Centre of gravity of the truck	39
2.2	Lifting the truck by crane	40
2.3	Loading with another industrial truck	42
3	Securing the truck during transport	43
4	Using the Truck for the First Time	45

D Battery - Servicing, Recharging, Replacement	47
1 Safety Regulations Governing the Handling of Lead-Acid Batteries	47
1.1 General notes on handling batteries	49
2 Battery types	50
2.1 Battery dimensions	51
3 Exposing the battery	52
4 Charging the battery	53
4.1 Charging the battery with a stationary charger	53
4.2 Charging the battery with an on-board charger	54
5 Battery removal and installation	
5.1 Battery holder assembly	59
5.2 Removal and installation using an EJE pallet truck with Snapfit battery	04
holder (O)	61
5.3 Removal and installation using a hand pallet truck with Snapfit battery	6.4
holder (O)	64
 5.4 Removal and installation using a multi-adapter (○) 5.5 Removal and installation using a worktable for crane loading (○) 	
	69 71
3	
5.7 Removal and installation using a roller conveyor (○)5.8 Hook-on battery door removal and installation (○)	
5.6 Floor-on battery door removal and installation ()	74
E Operation	75
Safety Regulations for the Operation of the Forklift Truck	75
2 Displays and Controls	77
2.1 Control panel with display unit	81
2.2 Armrest control panel switch (O)	
2.3 Side compartment control panel switch (○)	
2.4 Display	87
Preparing the Truck for Operation	90
3.1 Checks and operations to be performed before starting daily operation.	90
3.2 Entry and exit	93
3.3 Trucks with reduced headroom (O)	93
3.4 Setting up the operator position	94 98
	100
4 Industrial Truck Operation	
4.2 Preparing the truck for operation	103
4.3 Setting the time	
4.4 Parking the truck securely	104
4.5 Emergency Disconnect	
4.6 Travel	107
4.7 Steering	107
4.8 Brakes	
4.9 Adjusting the forks	
4.10 Replacing the forks	
4.11 Lifting, transporting and depositing loads	
4.12 Operating the lift mechanism and integrated attachments	118
4.12 Operating the lift mechanism and integrated attachments	

4.15	Operating additional attachments for the Multi Pilot	131
4.16	Fitting additional attachments	133
5	Towing trailers	135
6	Optional equipment	137
6.1	CanCode keypad	137
6.2	Assistance systems	141
6.3	Steel cab	143
6.4	Sliding windows	144
6.5	Automatic / mechanical folding gate	145
6.6	Panel door	146
6.7	Operator position extension	146
6.8	Adjusting the driver's seat	147
6.9	Heating	148
6.10	Removable load backrest	149
6.11	Lift cutout override	149
6.12	Fire extinguisher	150
6.13	Tilt angle display	150
6.14	Rockinger coupling with hand lever or remote control	151
6.15	Camera system	152
6.16	Control layout "N"	153
7	Troubleshooting	154
7.1	Troubleshooting	154
7.2	Operating the truck without its own drive system	156
7.3	Emergency lowering	159
F	Industrial Truck Maintenance	161
1	Operational Safety and Environmental Protection	161
2	Maintenance Safety Regulations	162
2.1	Canarymaphia and used newto	102
2.2	Consumables and used parts	163
2.3	Wheels	
2.4	WheelsLift Chains	163
	WheelsLift Chains	163 163
3	WheelsLift ChainsHydraulic systemLubricants and Lubrication Schedule	163 163 164
3 3.1	WheelsLift ChainsHydraulic system	163 163 164 165
	WheelsLift ChainsHydraulic systemLubricants and Lubrication Schedule	163 163 164 165 166
3.1 3.2	Wheels	163 164 165 166 166
3.1	Wheels	163 163 164 165 166 166
3.1 3.2 3.3 4	Wheels	163 163 164 165 166 166 168 169
3.1 3.2 3.3	Wheels	163 163 164 165 166 166 168 169
3.1 3.2 3.3 4 4.1 4.2	Wheels	163 163 164 165 166 168 169 171
3.1 3.2 3.3 4 4.1 4.2 4.3	Wheels	163 163 164 165 166 166 168 169 171 171
3.1 3.2 3.3 4 4.1 4.2 4.3 4.4	Wheels	163 163 164 165 166 168 169 171 172 173
3.1 3.2 3.3 4 4.1	Wheels	163 164 165 166 166 169 171 171 172 173
3.1 3.2 3.3 4 4.1 4.2 4.3 4.4 4.5 4.6	Wheels Lift Chains Hydraulic system Lubricants and Lubrication Schedule Handling consumables safely Lubrication Schedule Consumables Maintenance and repairs Preparing the truck for maintenance and repairs Lifting and jacking up the truck safely Opening the rear panel Checking the wheel attachments Replacing wheels Hydraulic system Replacing the hydraulic oil filter	163 163 164 165 166 168 169 171 171 172 173 174
3.1 3.2 3.3 4 4.1 4.2 4.3 4.4 4.5 4.6 4.7	Wheels Lift Chains Hydraulic system Lubricants and Lubrication Schedule Handling consumables safely Lubrication Schedule Consumables Maintenance and repairs Preparing the truck for maintenance and repairs Lifting and jacking up the truck safely Opening the rear panel Checking the wheel attachments Replacing wheels Hydraulic system	163 164 165 166 166 168 171 171 172 173 174 175
3.1 3.2 3.3 4 4.1 4.2 4.3 4.4 4.5 4.6 4.7	Wheels Lift Chains Hydraulic system Lubricants and Lubrication Schedule Handling consumables safely Lubrication Schedule Consumables Maintenance and repairs Preparing the truck for maintenance and repairs Lifting and jacking up the truck safely Opening the rear panel Checking the wheel attachments Replacing wheels Hydraulic system Replacing the hydraulic oil filter	163 164 165 166 166 168 171 171 172 173 174 175 177
3.1 3.2 3.3 4 4.1 4.2 4.3 4.4 4.5	Wheels	163 164 165 166 166 168 171 171 172 173 174 175 177 179
3.1 3.2 3.3 4 4.1 4.2 4.3 4.4 4.5 4.6 4.7 4.8	Wheels	163 164 165 166 166 168 169 171 172 173 174 175 177 179 180
3.1 3.2 3.3 4 4.1 4.2 4.3 4.4 4.5 4.6 4.7 4.8 4.9 4.10	Wheels	163 164 165 166 166 168 171 171 172 173 174 175 179 180 181
3.1 3.2 3.3 4 4.1 4.2 4.3 4.4 4.5 4.6 4.7 4.8 4.10 4.11	Wheels	163 163 164 165 166 168 169 171 172 173 174 175 177 179 180 181 181

4.15	Restoring the truck to service after maintenance and repairs	190
5	Decommissioning the industrial truck	191
5.1	Prior to decommissioning	192
5.2	During decommissioning	192
5.3	Restoring the truck to service after decommissioning	193
6	Safety tests to be performed at intervals and after unusual incidents	194
7	Final de-commissioning, disposal	195
8	Human vibration measurement	195
9	Servicing and Inspection	196
10	Maintenance checklist EFG 213-220	197
10.1	Operating company	197
10.2	Customer service	200
11	Maintenance checklist EFG 316-320	208
11.1	Operating company	208
11.2	Customer service	211

Appendix

JH Traction Battery Operating Instructions

These operating instructions apply only to Jungheinrich battery models. If using another brand, refer to the manufacturer's operating instructions.

A Correct Use and Application

1 General

The truck must be used, operated and serviced in accordance with the present instructions. All other types of use are beyond its scope of application and may result in damage to personnel, the industrial truck or property.

2 Correct application

NOTE

The maximum load and load distance are indicated on the capacity plate and must not be exceeded.

The load must rest on the load handler or be lifted by an attachment approved by the manufacturer.

The load must be fully raised, see "Lifting, transporting and depositing loads" on page 116.

- Lifting and lowering loads.
- Transporting lowered loads over short distances.
- Do not travel with a raised load (>30 cm).
- Do not carry or lift passengers.
- Do push or pull load units.
- Occasional towing of trailer loads.
- When towing trailer loads the load must be secured on the trailer.
- The permissible trailer load must not be exceeded.

3 Approved application conditions

- Operation in industrial and commercial environments.
- Permissible temperature range -20°C to 40°C.
- Operation only on secure, level surfaces with sufficient capacity.
- Do not exceed the permissible surface and spot load limits on the travel routes.
- Operation only on routes that are visible and approved by the operating company.
- Negotiating inclines up to a maximum of 15 %.
- Do not travel across or at an angle on inclines. Travel with the load facing uphill.
- Operation in partially public traffic.

MARNING!

Use under extreme conditions

Using the truck under extreme conditions can result in malfunctions and accidents.

- ▶ Special equipment and authorisation are required if the truck is to be constantly used in extreme conditions, especially in dusty or corrosive atmospheres.
- ▶The truck cannot be used in areas at risk of explosion.
- ▶ In adverse weather conditions (thunder, lightning) the industrial truck must not be operated outside or in endangered areas.

4 Proprietor responsibilities

For the purposes of the present operating instructions the "operating company" is defined as any natural or legal person who either uses the industrial truck himself, or on whose behalf it is used. In special cases (e.g. leasing or renting) the proprietor is considered the person who, in accordance with existing contractual agreements between the owner and user of the industrial truck, is charged with operational duties. The proprietor must ensure that the industrial truck is used only for the purpose it is intended for and that danger to life and limb of the user and third parties are excluded. Furthermore, accident prevention regulations, safety regulations and operating, servicing and repair guidelines must be followed. The operating company must ensure that all users have read and understood these operating instructions.

NOTE

Failure to comply with the operating instructions invalidates the warranty. The same applies if improper work is carried out on the truck by the customer or third parties without the permission of the manufacturer.

5 Adding attachments and/or optional equipment

The mounting or installation of additional equipment which affects or enhances the performance of the industrial truck requires the written permission of the manufacturer. Local authority approval may also need to be obtained. Local authority approval however does not constitute the manufacturer's approval.

B Truck Description

1 Application

The EFG 213-320 is a three- or four-wheel electric sit-down counterbalanced truck. It is a cantilever counterbalanced truck which can lift, transport and deposit loads using the load handler attached in front.

Closed bottom pallets can also be lifted.

1.1 Truck models and rated capacity

The rated capacity depends on the model. The rated capacity can be derived from the model name.

EFG213


E	FG	Model name
	2	Series
_	13	Rated capacity x 100 kg

The rated capacity is not generally the same as the permissible capacity. The capacity can be found on the capacity plate attached to the truck.

2 Assemblies and Functional Description

2.1 Travel direction definition


The following determinations have been made for travel direction specification:

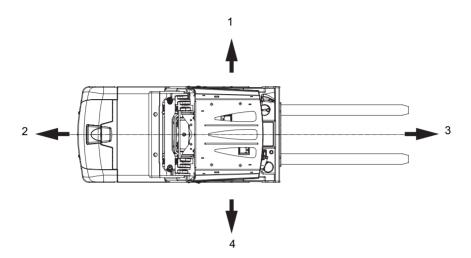

The following conventions have been agreed for travel direction specification:

Item	Travel direction
1	Links
2	Reverse
3	Forward
4	Right

2.2 Assembly Overview

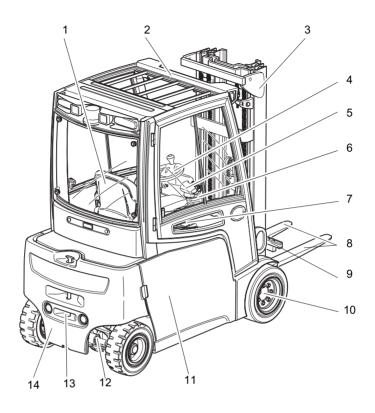

ltem		Component	Item		Component
1	•	Driver's seat	8	•	Fork tines
2	•	Overhead guard	9	•	Fork carriage
3	•	Mast	10	•	Drive system
4	•	Steering wheel	11	•	Battery door
5	•	Lifting mechanism control	12	•	Steer axle
6	•	Control and display unit	13	•	Trailer coupling
7	•	Emergency Disconnect switch	14	•	Counterweight
	•	Standard equipment			

2.3 Functional Description

Chassis

The chassis, in conjunction with the counterweight, forms the supporting base structure of the truck. It is used to support the main components.

Operator position and overhead guard

The overhead guard comes in a range of models and protects the operator from falling objects and other external

influences. All the controls are ergonomically arranged. The steering column and driver's seat can be adjusted individually.

The controls and warnings on the control and display unit enable the system to be monitored during operation, thereby ensuring a very high level of safety.

Steering

The electric steering offers a high level of efficiency and ergonomics. The height and tilt angle of the steering column are adjustable and can be set to suit all operators. The low cross-section means the operator has maximum legroom at all times. The steering is particularly smooth, offering a high level of efficiency. As a result the overall energy consumption is reduced significantly. The steer angle is shown in the display.

Wheels

There is a choice of super elastic or fully rubber tyres as well as optional pneumatic tyres.

Drive and brake system

The 2 motor front drive provides maximum traction to the drive wheels at all times. When cornering, the exact speed required for the wheel on the inside or outside of the bend respectively is set in proportion to the steer angle.

The service brake is a maintenance-free disk brake. The truck also brakes regeneratively via the drive motors. The energy recovered in the process is fed back to the battery.

The parking brake operates both automatically and manually.

Emergency Stop safety feature

If the system recognises a fault in the steering, an emergency stop is automatically introduced. The truck brakes to a halt, the travel direction does not change.

An event message is shown in the control and display unit. The truck performs a self-test

whenever it is switched on. Travel is only enabled again when the truck is operational and the parking brake (= emergency stop) released.

Hydraulic system

A multi-pilot valve allows for sensitive operation of the functions via the controls. A speed-controlled hydraulic pump ensures a proportionate and efficient supply to the hydraulic functions.

Mast

Two or three-stage masts, optionally with free lift function; narrow mast sections ensure excellent visibility of the forks and attachments. Fork carriage and mast run on permanently lubricated and hence maintenance-free support rollers.

Attachments

The trucks can be optionally fitted with mechanical and hydraulic attachments.

3 Technical Specifications

All technical details refer to standard trucks. Values indicated with *) may vary, depending on the types of equipment used (e.g. mast, cabin, tyres etc.).



The technical specifications comply with the German "Industrial Truck Data Sheet" Guidelines.

Technical modifications and additions reserved.

3.1 Performance data

EFG 213-220

	Description	EFG						
		213 2 ⁻	215	216k	218k	220		
			213	216	218	220		
Q	Rated capacity (where C = 500 mm) ¹)	1300	1500	1600	1800	2000	kg	
С	Load centre	500	500	500	500	500	mm	
	Travel speed	16/16	16/16	16/16	16/16	16/16	km/ h	
	Lift speed with / without load	0.48/0.60	0.46/0.60	0.49/0.60	0.44/0.55	0.40/0.55	m/s	
	Lowering speed with / without load	0.55/0.55	0.55/0.55	0.55/0.55	0.55/0.55	0.55/0.55	m/s	
	Gradeability			7.3/12.3	6.2/10.7			
	(30 min) with / without load	7.6/12.5	7.3/12.3	7.0/11.5	5.9/10.5	5.7/10.4	%	
	Max. gradeability				26.0/35.0			
	²) (5 min) with / without load	28.0/35.0	27.0/35.0	27.0/35.0	25.0/35.0	24.0/35.0	%	
	Acceleration (10 m) with / without load	3.6/3.2	3.8/3.4	3.8/3.4	3.9/3.5	4.0/3.5	s	
	Max. operating pressure	200	200	200	200	200	bar	
	Oil flow for attachments	25	25	25	25	25	l/ min	

¹⁾ for vertical mast.

²⁾ The values shown represent the maximum gradeability to overcome short differences in height and surface unevenness (surface edges). The truck must not operate on inclines of more than 15%.

EFG 316-320

	Description	EFG					
		316k	316	318k	318	320	
Q	Rated capacity (where C = 500 mm)1)	1600	1600	1800	1800	2000	kg
С	Load centre	500	500	500	500	500	mm
	Travel Speed *	17/17	17/17	17/17	17/17	17/17	km/ h
	Lift speed w / w.o. load	0.49/0.60	0.49/0.60	0.44/0.55	0.44/0.55	0.40/0.55	m/s
	Lowering speed w / w.o. load	0.55/0.55	0.55/0.55	0.55/0.55	0.55/0.55	0.55/0.55	m/s
	Gradeability (30 min) w./w.o. load	7.3/12.3	7.0/11.5	6.2/10.7	5.9/10.5	5.7/10.4	%
	Max. gradeability 2) (5 min) w./w.o. load	27.0/35.0	27.0/35.0	26.0/35.0	25.0/35.0	24.0/35.0	%
	Acceleration (10 m) w./w.o. load	3.8/3.4	3.8/3.4	3.9/3.5	3.9/3.5	4.0/3.5	s
	Max. operating pressure	200	200	200	200	200	bar
	Oil flow for attachments	25	25	25	25	25	l/ min


¹⁾ for vertical mast.

 $^{^{2)}}$ The values shown represent the maximum gradeability to overcome short differences in height and surface unevenness (surface edges). The truck must not operate on inclines of more than 15%.

3.2 Dimensions


EFG 213-220

	Description			EFG			
		213	215	216k	218k	220	
		213	213	216	218	220	
a/2	Safety distance	100	100	100	100	100	mm
h ₁	Mast height retracted	2000	2000	2000	2000	2000	mm
h ₂	Free lift	150	150	150	150	150	mm
h ₃	Lift	3000	3000	3000	3000	3000	mm
h ₄	Mast height extended	3560	3560	3560	3587	3587	mm
h ₆	Overhead guard height	2040	2040	2040	2040	2040	mm
h ₇	Seat height	920	920	920	920	920	mm
h ₁₀	Coupling height	560	560	560	560	560	mm
α	Mast tilt, fwd.	7	7	7	7	7	٥
β	Mast tilt, back	7	7	7	7	7	٥
L ₁	Length including	2024	2024	3037	3037	2445	mm
	forks	2924	2924	3145	3145	3145	mm
L ₂	Headlength	1774	1774	1887	1887	1005	
		1774	1774	1995	1995	1995	mm

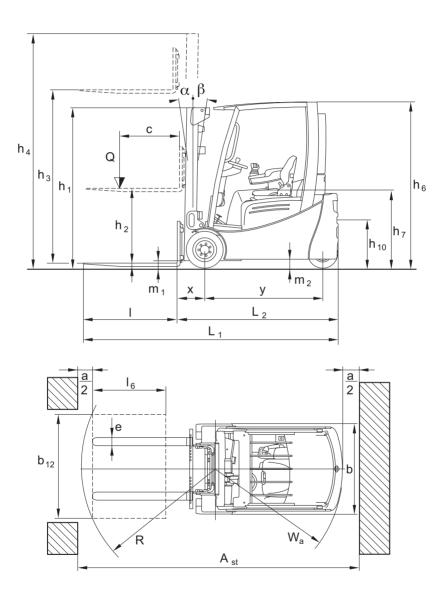


EFG 213-220

	Description			EFG			
		242	245	216k	218k	220	
		213	215	216	218	220	
b	Overall width	1060	1060	1060	1120	1120	mm
е	Fork width	100	100	100	100	100	mm
m ₁	Ground clearance with load below mast	80	80	80	80	80	mm
m ₂	Centre wheel base ground clearance	100	100	100	100	100	mm
Ast	Working aisle			3339	3339	3446	mm
	width for pallet 800x1200 longit.	3226	3226	3446	3446		
Ast	Aisle width for			3216	3216		
	pallet 1000x1200 diag.	3104	3104	3323	3323	3323	mm
Wa	Turning radius	1110	1440	1548	1548	1055	
		1440	1440	1655	1655	1655	mm
х	Load distance	335	335	340	340	340	mm
у	Wheel distance	1240	4040	1357	1357	1465	mana
		1249	1249	1465	1465	1465	mm

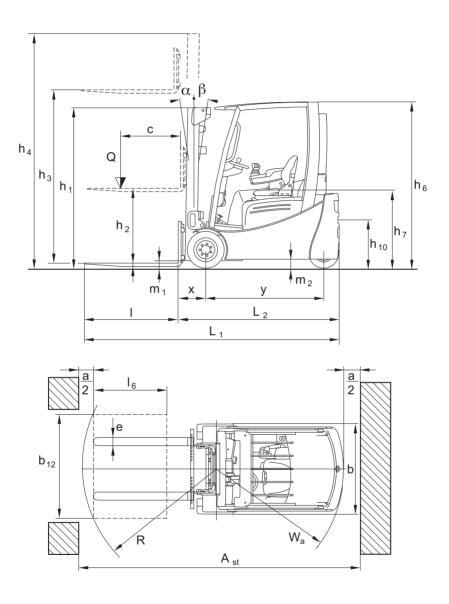

EFG 316-320

	Description	EFG					
		316k	316	318k	318	320	
a/2	Safety distance	100	100	100	100	100	mm
h ₁	Mast height retracted	2000	2000	2000	2000	2000	mm
h ₂	Free lift	150	150	150	150	150	mm
h ₃	Lift	3000	3000	3000	3000	3000	mm
h ₄	Mast height extended	3560	3560	3587	3587	3587	mm
h ₆	Overhead guard height	2040	2040	2040	2040	2040	mm
h ₇	Seat height	920	920	920	920	920	mm
h ₁₀	Coupling height	410/580	410/580	410/580	410/580	410/580	mm
α	Mast tilt, fwd.	7	7	7	7	7	٥
β	Mast tilt, back	7	7	7	7	7	٥
L ₁	Length including forks	3140	3248	3140	3248	3248	mm
L ₂	Headlength	1990	2098	1990	2098	2098	mm
b	Overall width	1060	1060	1120	1120	1120	mm
е	Fork width	100	100	100	100	100	mm
m ₁	Ground clearance with load below mast	80	80	80	80	80	mm
m ₂	Centre wheel base ground clearance	100	100	100	100	100	mm
Ast	Working aisle width for pallet 800x1200 longit.	3599	3725	3599	3725	3725	mm
Ast	Aisle width for pallet 1000x1200 transv.	3403	3526	3403	3526	3526	mm
Wa	Turning radius	1859	1985	1859	1985	1985	mm
Х	Load distance	340	340	340	340	340	mm
у	Wheel distance	1400	1508	1400	1508	1508	mm

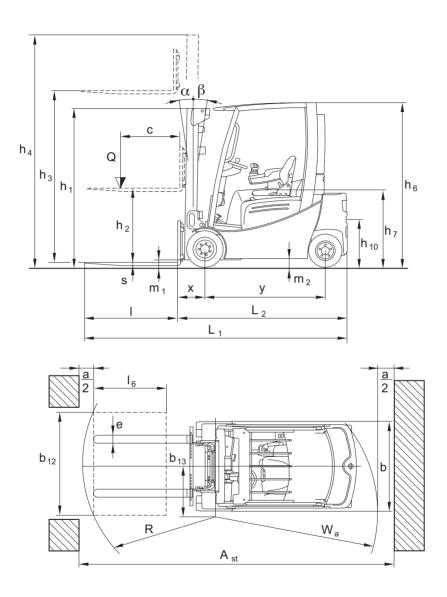

3.3 Weights



All dimensions in kg.

EFG 213-220

Description	EFG				
	213	215	216k	218k	220
	213		216	218	220
Net weight	2733	2978	3000	3256	2202
(including battery)	2133	2978	3057	3207	3382
Front axle load (without lifting	1326	1310	1411	1409	1501
load)	1320		1496	1520	
Front axle load (with lifting	3545	3870	4052	4380	4706
load)			4060	4405	
Rear axle load (without lifting	1407	1668	1589	1846	1881
load)	1407	1000	1561	1686	1001
Rear axle load (with lifting	488	608	548	675	676
load)	400	000	597	602	070

EFG 316-320

Description	EFG				
	316k	316	318k	318	320
Net weight (including battery)	3035	3001	3175	3141	3306
Front axle load (without lifting load)	1380	1493	1385	1499	1489
Front axle load (with lifting load)	4004	4043	4336	4367	4676
Rear axle load (without lifting load)	1655	1508	1790	1642	1817
Rear axle load (with lifting load)	631	558	638	574	630

3.4 Mast versions



All dimensions in mm.

EFG 216-220 and 316-320

VDI 3596 Description	Lift h ₃	Free lift h ₂		Retracted height h ₁	Extended	height h ₄
		EFG				
		213/215/ 216k/216/ 316/316k	218k/218/ 220/318/ 318k/320		213/215/ 216k/216/ 316/316k	218k/218/ 220/318/ 318k/320
	2300			1650	2850	2885
	3000			2000	3550	3585
	3100			2050	3650	3685
	3300			2150	3850	3885
ZT	3600	1:	50	2300	4150	4185
	4000			2500	4550	4585
	4500				5050	5085
	5000				5550	5585
	5500			3400	6050	6085
ZZ	2300	1055	990	1605	2850	2915
	3000	1405	1340	1955	3550	3615
	3100	1455	1390	2005	3650	3715
	3300	1555	1490	2105	3850	3915
	3600	1705	1640	2255	4150	4215
	4000	1905	1840	2455	4550	4615
DZ	4350	1405	1340	1955	4900	4965
	4500	1455	1390	2005	5050	5115
	4800	1555	1490	2105	5350	5415
	5000	1630	1565	2180	5550	5615
	5500	1805	1740	2355	6050	6115
	6000	2005	1940	2555	6550	6615
	6500	2255	2190	2805	7050	7115

Special trucks are not included in this overview.

3.5 Tyre type

NOTE

When replacing tyres/rims fitted at the factory, always use original spare parts or tyres approved by the manufacturer. Otherwise the manufacturer's specification cannot be guaranteed.

If you have any queries please contact the manufacturer's customer service department.

EFG 213-220

	Description	EFG				
		213/215 216k/216	218k 218	220		
	SE *)	18x7-8	200/50-10	200/50-10		
	Full rubber*)	18x7x12⅓				
Front tyres	Pneumatic*)	180/70-8 - LI125	not available	not available		
	Tyre pressure bar	10,0	-	-		
	Torque (Nm)	240	240	240		
	SE *)	140/55-9	140/55-9	140/55-9		
	Full rubber*)	15x5x11¼	15x5x11¼	15x5x11¼		
Rear tyres	Pneumatic*)	125/75-8 - LI100	not available	not available		
	Tyre pressure bar	10,0	-	-		
	Torque (Nm)	240	240	240		

^{*)} The models listed in the table correspond to the standard version. Other tyres can be used depending on the truck's equipment.

EFG 316-320

]	Description	EFG			
		316k 316	318k 318	320	
	SE *)	18x7-8	200/50-10	200/50-10	
	Full rubber*)	18x7x121/8	18x7x121/8	18x7x121/8	
Front tyres	Pneumatic*)	180/70-8 - LI125 (PR 16)	not available	not available	
	Tyre pressure bar	10,0	-	-	
	Torque (Nm)	240	240	240	
	SE *)	16x6-8	16x6-8	16x6-8	
	Full rubber*)	15x5x11¼	15x5x11¼	15x5x11¼	
Rear tyres	Pneumatic*)	150/75-8 - LI113 (PR 16)	not available	not available	
	Tyre pressure bar	10,0	-	-	
	Torque (Nm)	240	240	240	

^{*)} The models listed in the table correspond to the standard version. Other tyres can be used depending on the truck's equipment.

3.6 Engine Data

EFG 216-220 and 316-320

Description	E	EFG			
	213 / 215 / 216k / 216 218k / 218 / 220	316k / 316 / 318k / 318 320			
Drive motor	2 x 4.5kW	2 x 4.5kW			
Lift motor	11.5kW	11.5kW			
Steer motor	0.9kW	0.9kW			

3.7 EN norms

Noise emission level

- EFG 213-220: 68 dB(A)

- EFG 316-320: 67 dB(A)

*+/- 3 dB(A) depending on the truck's equipment

in accordance with EN 12053 as harmonised with ISO 4871.

The noise emission level is calculated in accordance with standard procedures and takes into account the noise level when travelling, lifting and when idle. The noise level is measured at the level of the driver's ear.

Vibration

EFG 213-220: 0,53m/s²
 EFG 316-320: 0,51 m/s²

in accordance with EN 13059.



The vibration acceleration acting on the body in the operating position is, in accordance with standard procedures, the linearly integrated, weighted acceleration in the vertical direction. It is calculated when travelling over thresholds at constant speed (standard truck version). These recordings were taken on a single occasion and must not be confused with the human vibrations of the "2002/44/EC/Vibrations" operator directive. The manufacturer offers a special service to measure these human vibrations, see "Human vibration measurement" on page 195.

Electromagnetic compatibility (EMC)

The manufacturer confirms that the truck adheres to the limits for electromagnetic emissions and resistance as well as the static electricity discharge test in accordance with EN 12895 as well as the standardised instructions contained therein.



No changes to electric or electronic components or their arrangement may be made without the written agreement of the manufacturer.



WARNING!

Medical equipment can be damaged by non-ionised radiation

Electrical equipment on the truck emitting non-ionised radiation (e.g. wireless data transmission) can affect operators' medical equipment (pacemakers, hearing aids etc.) and result in malfunctions. Consult with a doctor or the medical equipment manufacturer to clarify whether it can be used near the industrial truck.

3.8 Conditions of use

Ambient temperature

- operating at -20°C to 40°C



Special equipment and authorisation are required if the truck is to be used continually in conditions of extreme temperature or condensing air humidity fluctuations.


Electrical requirements 3.9

The manufacturer certifies compliance with the requirements for the design and manufacture of electrical equipment, according to EN 1175 "Industrial Truck Safety -Electrical Requirements", provided the truck is used according to its purpose.

4 Identification points and data plates

4.1 Indication Points

Warnings and notices such as capacity charts, strap points and data plates must be legible at all times. Replace if necessary.

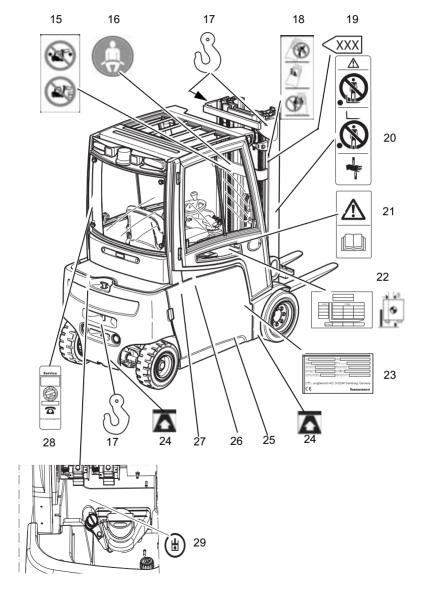


Item	Component
15	Do not drive, or operate the forward tilt, with the load in the raised position
16	Wear seat belt
17	Strap points for crane lifting
18	Tipover caution, no passengers
19	Lift limit
20	Do not step onto or beneath the load, risk of trapping with moving mast
21	Read operating instructions
22	Capacity (or reduced capacity)
23	Data plate, behind the battery door
24	Jack contact points
25	Model description
26	Risk of trapping, in chassis behind the battery door
27	Serial number, on chassis behind the battery door
28	Test plaque (○)
29	Add hydraulic oil

4.2 Data plate

→

The illustration shows the standard version for EU member states. The data plate may differ in other countries.

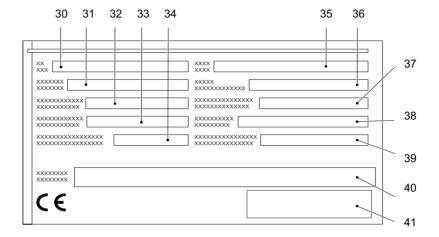

Item	Description	Item	Description
30	Туре	36	Year of manufacture
31	Serial number	37	Load centre (mm)
32	Rated capacity (kg)	38	Output
33	Battery voltage (V)	39	Min./max. battery weight (kg)
34	Net weight w.o. battery (kg)	40	Manufacturer
35	Option	41	Manufacturer's logo

→

For queries regarding the truck or ordering spare parts always quote the truck serial number (31).

4.3 Truck capacity plate

Δ

CAUTION!

Accident risk from fork replacement

 
If you replace the forks with ones that differ from the originals, the capacity will change.

- ▶ When replacing the forks you must attach an additional capacity plate to the truck.
- ► Trucks supplied without forks are given a capacity plate for standard forks (length: 1150 mm).

The capacity plate (22) gives the capacity (Q in kg) of the truck for a vertical mast. The maximum capacity is shown as a table with a given load centre of gravity D (in mm) and the required lift height H (in mm).

The capacity plate (22) of the truck indicates the truck's capacity with the forks as originally supplied.


Example of how to calculate the maximum capacity:



For a load centre of gravity D of 600 mm and a max. lift height h_3 of 3600 mm the maximum capacity Q is 1105 kg.

Lift height restriction

The arrow shaped markings (42 and 43) on the inner and outer masts show the operator when the prescribed lift limits have been reached.

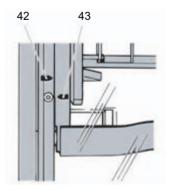

4.4 Attachment capacity plate

The attachment capacity plate is next to the truck's capacity plate and gives the truck's capacity Q (in kg) in conjunction with the respective attachment. The serial number for the attachment indicated on the capacity plate must match the data plate of the attachment.

5 Stability

The truck's stability has been tested according to latest technological standards. These take into account the dynamic and static tipover forces that can occur if used correctly.

Stability can also be affected by the following factors:

- Tyre type
- Mast
- Attachment
- Transported load (size, weight and centre of gravity)

A

WARNING!

Loss of stability can cause accidents

Changing the components can alter the stability.

C Transport and Commissioning

1 Transport

Transport can be carried out in two different ways, depending on the height of the mast and the local conditions.

- Vertically, with the mast assembled (for low heights)
- Vertically, with the mast dismantled (for large heights), all mechanical connections and hydraulic lines between the basic truck and the mast separated.

2 Truck laden

2.1 Centre of gravity of the truck

↑ WARNING!

An altered centre of gravity can result in tipovers when cornering.

The overall centre of gravity can vary depending on the truck's equipment (especially the mast version).

For trucks without a mast the centre of gravity will move significantly in the direction of the counterweight.

▶ Drive carefully and with modified speed to avoid tipping over.

The picture shows the approximate centre of gravity location.



2.2 Lifting the truck by crane

↑ WARNING!

All persons involved in loading by crane must be trained

Incorrect crane loading procedures due to untrained personnel can cause the truck to fall. There is a risk of injury to personnel and a risk of material damage to the truck.

▶ Loading must only be performed by specialist personnel trained for this purpose. The specialist personnel must be instructed in securing loads on road vehicles and handling load securing devices. In each case correct measurements must be taken and appropriate safety measures applied.

▲ DANGER!

Crane slings can tear, resulting in accidents

- ▶ Only use crane lifting gear with sufficient capacity.
- ▶ Loading weight = Net weight of truck (+ battery weight for electric trucks).
- ▶The mast must be tilted back fully.
- The crane lifting gear on the mast must have a minimum clear length of 2 m.
- ► Crane slings should be fastened in such a way that they do not come into contact with any attachments or the overhead guard when lifting.
- ▶ Do not stand under a swaying load.
- ►The truck should only be handled by people who are trained in using lifting slings and tools.
- ▶ Wear safety shoes when lifting the truck by crane.
- ▶ Do not walk into or stand in a hazardous area.
- ► Always attach the crane lifting gear to the prescribed strap points and prevent them from slipping.
- Truck net weight: see "Data plate" on page 36.

Lifting the truck by crane


Requirements

 Park the truck securely, see "Parking the truck securely" on page 105.

Procedure

- Secure the crane slings to the attachment points (44) and (45.
- · Raise and load the truck.
- Lower and deposit the truck carefully (see "Parking the truck securely" on page 105).
- Secure the truck with wedges to prevent it from rolling away.

This concludes the loading by crane.

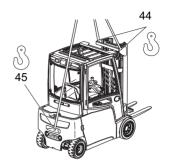

2.3 Loading with another industrial truck

↑ WARNING!

The truck can be damaged

The truck to be loaded can be damaged when loading with another industrial truck.

- ▶ Only trained specialist personnel should load the truck.
- ► Use only trucks with sufficient capacity for loading.
- ▶ Only for loading and unloading.
- ▶The forks of the second industrial truck must be sufficiently long
- ▶ Transporting over long distances prohibited.

Loading the truck with a second industrial truck

Requirements

- Park the truck securely, see "Parking the truck securely" on page 105.

Procedure

- · Raise the truck with the forks at the side between the axles.
- Raise the truck slightly and make sure it is securely positioned on the forks. If necessary adjust or secure the forks with stops.
- Carefully load/unload the truck, see "Lifting, transporting and depositing loads" on page 116.
- Lower the truck slowly onto the ground and prevent it from rolling away.

The truck is now loaded.

3 Securing the truck during transport


MARNING!

Accidental movement during transport


Improper fastening of the truck and mast during transport can result in serious accidents.

- ▶ Loading must only be performed by specialist personnel trained for this purpose. The specialist personnel must be instructed in securing loads on road vehicles and handling load securing devices. In each case correct measurements must be taken and appropriate safety measures applied.
- ▶ The truck must be securely fastened when transported on a lorry or a trailer.
- ▶The lorry or trailer must have fastening rings.
- ► Use wedges to prevent the truck from moving.
- ► Use only fastening belts with sufficient strength.
- ► Use non-slip materials to securing the load aids (pallet, wedges, ...) e. g. non-slip mats.

Securing with a mast

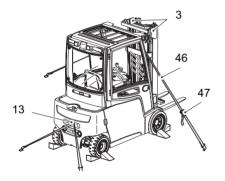

Securing without a mast

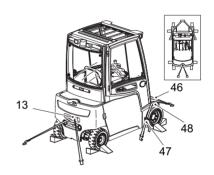

Securing the industrial truck for transport

Requirements

 Position the industrial truck securely on a lorry or trailer, see "Parking the truck securely" on page 105.

Tools and Material Required

- 2 fastening belts with a tensioner
- Retaining wedges.

Procedure

- Secure the truck with the fastening belt (46) at the top cross member of the mast (3) and the trailer coupling (13) or over the mud guard (48) and the trailer coupling (13).
- Tighten the fastening belt (46) with the tensioner (47).

The truck is now secured for transport.

4 Using the Truck for the First Time

Safety Instructions for Assembly and Commissioning

Δ

WARNING!

Incorrect assembly can result in accidents

The assembly of the truck at the application site, commissioning and operator training must only be performed by the manufacturer's customer service representatives who have been specially trained for these tasks.

- ► The hydraulic lines may only be connected to the basic truck / mast interface when the mast has been properly assembled.
- ▶Only then can the truck be started.
- ▶ If several trucks have been delivered, make sure that the serial numbers of the load handlers, masts and basic trucks always match.

A

WARNING!

The use of unsuitable energy sources can be hazardous

Rectified AC current will damage the assemblies (controllers, sensors, motors etc.) of the electronic system.

Unsuitable cable connections (too long, insufficient wire cross-section) to the battery (tow cables) can overheat, setting the truck and battery on fire.

- ▶The truck must only be operated with battery current.
- ► Cable connections to the battery (tow leads) must be less than 6 m long and have a minimum cross-section of 50 mm².

Preparing the truck for operation after delivery or transport

Procedure

- Check the equipment is complete.
- Check the hydraulic oil level, see "Hydraulic system" on page 177.
- Check the transmission oil level, see "Check the gear oil level" on page 180.
- Install the battery if necessary, see "Battery removal and installation" on page 58.
- Charge the battery, see "Charging the battery" on page 53.

The truck can now be started, see "Preparing the Truck for Operation" on page 90.



To operate the truck without its own drive system, see "Operating the truck without its own drive system" on page 156.

D Battery - Servicing, Recharging, Replacement

1 Safety Regulations Governing the Handling of Lead-Acid Batteries

Maintenance personnel

Batteries may only be charged, serviced or replaced by trained personnel. This operator manual and the manufacturer's instructions concerning batteries and charging stations must be observed when carrying out the work.

Fire Protection

Do not smoke and avoid naked flames when handling batteries. Wherever an industrial truck is parked for charging there must be no inflammable material or consumables capable of creating sparks within a minimum distance of 2 m from the truck. The room must be ventilated. Fire protection equipment must be available.

Λ

CAUTION!

The use of unsuitable fire protection equipment can result in scalding

Extinguishing fires with water can cause a reaction with the battery acid. This can result in scalding from the acid.

- ▶Use powder extinguishers.
- ▶ Never extinguish a burning battery with water.

Battery maintenance

The battery cell covers must be kept dry and clean. Terminals and cable shoes must be clean, lightly greased with terminal grease and must be securely tightened. Batteries with non insulated terminals must be covered with a non slip insulating mat.

Δ

CAUTION!

Before closing the battery panel make sure that the battery cable cannot be damaged. There is a risk of short circuits with damaged cables.

Battery disposal

Batteries may only be disposed of in accordance with national environmental protection regulations or disposal laws. The manufacturer's disposal instructions must be followed.

1.1 General notes on handling batteries

↑ WARNING!

Batteries can be hazardous

Batteries contain an acid solution which is poisonous and corrosive. Avoid contact with battery acid at all times.

- ▶ Dispose of used battery acid in accordance with regulations.
- ▶ Always wear protective clothing and goggles when working with batteries.
- ▶ Do not let battery acid come into contact with skin, clothing or eyes. If necessary, rinse with plenty of clean water.
- ▶ In the event of physical damage (e.g. skin or eye contact with battery acid) call for a doctor immediately.
- ▶ Spilled battery acid should be neutralised immediately with plenty of water.
- ▶ Only batteries with a sealed battery container may be used.
- ► Follow national guidelines and legislation.

MARNING!

Unsuitable batteries that have not been approved for the truck by the manufacturer can be hazardous

The design, weight and dimensions of the battery have a considerable effect on the operational safety of the truck, in particular its stability and capacity. The use of unsuitable batteries that have not been approved for the truck by the manufacturer can lead to a deterioration of the braking system during energy recovery operations and also cause considerable damage to the electrical control system. The use of batteries that have not been approved by the manufacturer can therefore affect the health and safety of personnel.

- ▶ Only manufacturer-approved batteries may be used on the truck.
- ▶ Battery equipment may only be replaced with the agreement of the manufacturer.
- ▶When replacing/installing the battery make sure the battery is securely located in the battery compartment of the truck.
- ▶ Do not use batteries that have not been approved by the manufacturer.

Park the truck securely before carrying out any work on the batteries (see "Parking the truck securely" on page 105).

2 Battery types

↑ CAUTION!

Always use batteries with insulated covers or live components.


The battery weights are indicated on the battery data plate.

The truck will be equipped with different battery models, depending on the application. The following table shows which combinations are included as standard:


Truck model	Description	Capacity	
EFG 213	48V - 4PzS	460 Ah	
EFG 215	48V - 4PzS	460 Ah	
EFG 216k	48V - 5PzS	575 Ah	
EFG 216	48V - 6PzS	690 Ah	
EFG 218k	48V - 5PzS	575 Ah	
EFG 218	48V - 6PzS	690 Ah	
EFG 220	48V - 6PzS	690 Ah	
EFG 316k	48V - 5PzS	575 Ah	
EFG 316	48V - 6PzS	690 Ah	
EFG 318k	48V - 5PzS	575 Ah	
EFG 318	48V - 6PzS	690 Ah	
EFG 320	48V - 6PzS	690 Ah	


2.1 Battery dimensions

Battery 48 V									
	Dimension (mm)				Rated weight				
Truck model	L max. W max.		H1 +/-	H2 +/-					
			2mm	2mm	(-5/+8%)in kg				
EFG 213/215	830	522	612	627	715				
EFG 216k/									
218k/	830	630	612	627	855				
316k/318k									
EFG 216/									
218/220/	830	738	612	627	1025				
316/318/320									

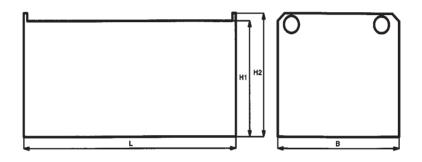

3 Exposing the battery

 

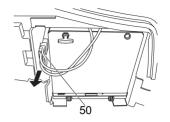

Requirements

- Park the truck securely, see "Parking the truck securely" on page 105.
- Load handler lowered.
- Key switch set to OFF.
- Key removed.
- Set the Emergency Disconnect OFF.

Procedure

- Open the battery door (49) as far as the stop.
- Pull the battery connector (50) and let it drop down from the battery.

The battery is now exposed.

4 Charging the battery

⚠ WARNING!

The gases produced during charging can cause explosions

The battery produces a mixture of nitrogen and hydrogen (electrolytic gas) during charging. Gassing is a chemical process. This gas mixture is highly explosive and must not be ignited.

- ► Switch the charging station and truck off first before connecting/disconnecting the charging cable of the battery charging station to/from the battery connector.
- ▶The charger must be adapted to the battery in terms of voltage and charge capacity.
- ▶ Before charging, check all cables and plug connections for visible signs of damage.
- ▶ Ventilate the room in which the truck is being charged.
- ▶The battery cell surfaces must be exposed during charging to ensure adequate ventilation.
- ▶ Do not smoke and avoid naked flames when handling batteries.
- ► Wherever an industrial truck is parked for charging there shall be no inflammable material or lubricants capable of creating sparks within 2 m around the truck.
- ► Fire protection equipment must be on hand.
- ▶ Do not lay any metallic objects on battery.
- ▶It is essential to follow the safety regulations of the battery and charger station manufacturers.

4.1 Charging the battery with a stationary charger

When charging, the battery door must be exposed by at least 200 mm to provide sufficient ventilation.


Requirements

- Park the truck securely, see "Parking the truck securely" on page 105.
- Battery exposed.
- Charger switched off.
- Disconnect the battery connector (50) from the truck connector (51).

Procedure

 Connect the battery connector (50) to the charging lead (52) of the stationary charger and turn on the charger.

The battery is now charged.

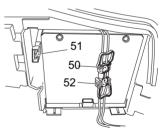

4.2 Charging the battery with an on-board charger

NOTE

Improper use of the on-board charger can cause material damage

The on-board charger consisting of a battery charger and battery controller must not be opened. If faulty, contact the manufacturer's customer service department.

- ▶The charger must only be used for batteries supplied by Jungheinrich or other approved batteries provided it has been adapted by the manufacturer's customer service department.
- ▶ Batteries must never be swapped from truck to truck.
- ▶ Do not connect the battery to two chargers simultaneously.

Mains connection

The mains lead may vary depending on the size of the on-board charger.

- On-board charger with 65 Ah: 16 A; 230 V; 3 pin
- On-board charger with 130 Ah: 16 A; 400 V; 5 pin

↑ DANGER!

Risk of electric shock and burning

Damaged and unsuitable wires can cause electric shocks and can overheat, resulting in fires.

- ▶ Only use mains cables with a maximum length of 30 m.
- Fully unreel the cable reel when using it.
- ► Always use original manufacturer's mains cables.
- ▶ Insulation safety, acid and caustic ratings must comply with the manufacturer's mains cable.

→

When charging, the battery door must be exposed by at least 200 mm to provide sufficient ventilation.

Charge the battery

Requirements

- Park the truck securely, see "Parking the truck securely" on page 105.
- Battery exposed.
- Charger switched off.
- Disconnect the battery connector (50) from the truck connector (51).


Procedure

- · Connect the on-board charger to the mains socket using the mains cable.
- · Charging begins automatically.
- When the truck is switched on the charging status and the residual capacity are shown on the display unit, see "Display" on page 87.

The battery is now charged.

→

If the battery warning indicator (53) lights up after charging the battery, the battery must be topped up with water when the truck is switched off.

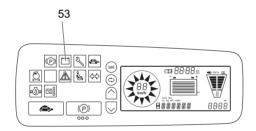

Battery charger LED displays

Green LED Meaning Flashing Charging

Lit Charging complete

Red LED Meaning Flashing Error

Battery controller LED displays

White LED Meaning

Flashing Radio network activated

Blue LED Meaning

Lit Electrolyte level too low (measured

after each charge)

Yellow LED Meaning
Flashing rolling Charging
Lit Charge status

Red LED Meaning Flashing Error

Float charge:

The compensation charge starts automatically when charging is complete.


Partial charging:

The charger is designed to automatically adapt to partially charged batteries. This keeps battery wear to a minimum.



If a charging operation has to be interrupted, press the button (54). Only remove the mains connector when the green LED goes out.

Charging starts again when the mains cable is reconnected to the mains socket.

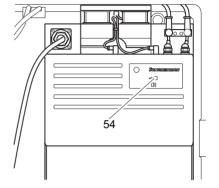

5 Battery removal and installation

↑ WARNING!

Accident risk during battery removal and installation

Due to the battery weight and acid there is a risk of trapping or scalding when the battery is removed and installed.

- ▶ Note the "Safety regulations for handling acid batteries" section in this chapter.
- ▶ Wear safety shoes when removing and installing the battery.
- ► Use only batteries with insulated cells and terminal connectors.
- ▶ Park the truck on a level surface to prevent the battery from sliding out.
- ▶ Make sure the crane slings have sufficient capacity to replace the battery.
- ► Use only approved battery replacement devices (battery roller stand, replacement trolley etc.).
- ▶ Make sure the battery is securely located in the truck's battery compartment.

5.1 Battery holder assembly




CAUTION!


The battery holder can only be fitted to Jungheinrich AG pallet trucks (EJE) or hand pallet trucks with notice signs.

Requirements


 EJE or hand pallet truck available with holes in accordance with assembly instructions, see "Assembly instructions" on page 60.

- Open the safety catch (55).
 - To do this press the pedals (56).
- Insert bent pins (57) into the forks of the EJE or hand pallet truck.
- Push the battery holder down and fit the bolts (58) in the holes.
- · Close the safety catch (55).
 - To do this press the pedals (56).
- Secure the locking plate (59) against theft with 4 screws (○).

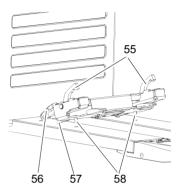


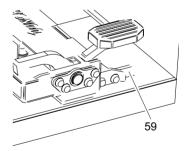

5.1.1 Assembly instructions

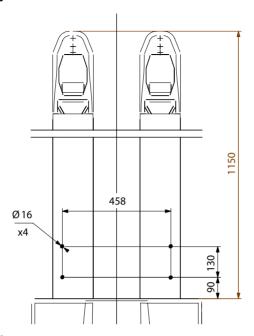

- Drill 4 holes with a 16 mm diameter into the EJE or hand pallet truck according to the drill patterns.
- Make sure there is sufficient distance between the connecting rod and the bottom of the forks.
- Attach safety notices to the EJE.

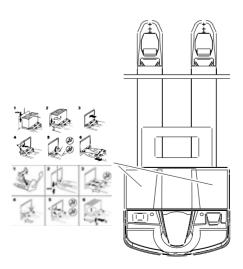

5.2 Removal and installation using an EJE pallet truck with Snapfit battery holder (O)

↑ CAUTION!

Trapping hazard

Trapping hazard when replacing the battery.

▶When replacing the battery do not reach between the battery and the chassis.

60

►Wear safety shoes.

Removing the battery

Requirements

- Truck parked securely, see "Parking the truck securely" on page 105.
- Battery exposed, see "Exposing the battery" on page 52.


Tools and Material Required

- Battery trolley with four wheels
- EJE pallet truck with Snapfit battery holder
- Charging station intended for the battery type (60) (○)

- · Close the safety catch (55).
 - To do this press the pedals (56).
- Bring the EJE pallet truck approx. 7,9 in (200 mm) underneath the truck base so that it is central with the battery.
- Raise the fork tines of the EJE pallet truck until they are just under the truck base.




- Push the ramps (61) into the plate recess and align them with the chassis (62).
- Bring the EJE pallet truck up to the battery at crawl speed.

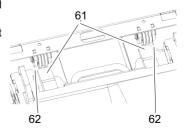

- Engage the safety catch (55) on the battery trolley.
 - Make sure the safety catch (55) is firmly engaged in the battery trolley.

Do not raise the fork tines.

• Undo the battery lock (63).

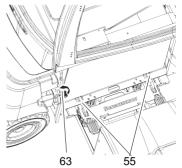

- Remove the the battery with the EJE pallet truck at crawl speed as far as the stop (64).
- Raise the fork tines until the battery can be pulled clear of the battery compartment.

NOTE


→

 
Risk of material damage

Risk of material damage to the truck chassis while the battery is being pulled out.

- ▶ Raise the fork tines. While pulling out the battery, do not allow it to strike the truck chassis on the top or bottom.
- Bring the battery to the charging station for charging.
- Place the battery carefully onto the charging station (60).
- Undo the safety catch (55) and remove the EJE pallet truck.

The battery is now removed and positioned securely for charging.

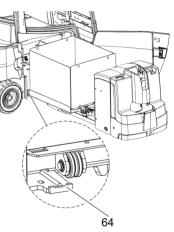



Battery installation

Procedure

- Drive the EJE pallet truck and battery to the truck.
- Deposit the battery replacement trolley with the rollers (65) on the rails of the truck base.
- Lower the forks of the EJE pallet truck until the battery is horizontal.
- Align the heights and push the forks of the EJE pallet truck underneath the truck base.





Risk of material damage

Inserting the battery can cause material damage to the truck chassis.

- ► Lower the forks and avoid striking the top or bottom parts of the chassis when inserting the battery.
- · Insert the battery in the truck.
- Close the battery lock (63).
- · Undo the safety catch (55).
 - To do this press the pedals (56).
- Move the EJE pallet truck away from the truck.
- · Close the battery door.

The battery is now inserted.

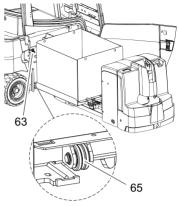

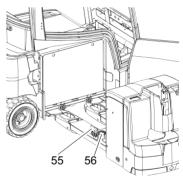

5.3 Removal and installation using a hand pallet truck with Snapfit battery holder (O)

↑ CAUTION!

Trapping hazard

Trapping hazard when replacing the battery.

- ▶When replacing the battery do not reach between the battery and the chassis.
- ►Wear safety shoes.

Removing the battery

Requirements


- Truck parked securely, see "Parking the truck securely" on page 105.
- Battery exposed, see "Exposing the battery" on page 52.

Tools and Material Required

- Battery trolley with four rollers
- Hand pallet truck with Snapfit battery holder
- Charging station intended for the battery type (60) (○)


Procedure

- Close the safety catch (55).
 - To do this press the pedals (56).
- Fully lower the hand pallet truck.
- Move the hand pallet truck up to the centre of the battery until Snapfit contacts the truck chassis.

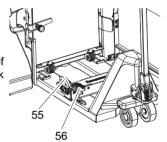

60

- Raise the forks of the hand pallet truck until the recess (66) is exposed.
- Move the hand pallet truck into the battery compartment until the safety catches lock the battery trolley.
 - Make sure both safety catches (55) are securely engaged in the battery replacement trolley.

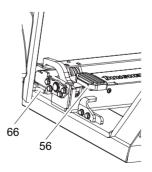

- Open the battery lock (63).
- Raise the hand pallet truck (approx. 20 mm) until the battery can be freely pulled out of the battery compartment.


NOTE

 
Risk of material damage

Removing the battery can cause material damage to the truck chassis.

- ► Raise the forks and avoid striking the top or bottom parts of the chassis when removing the battery.
- · Remove the battery.
- Bring the battery to the charging station for charging.
- Place the battery carefully onto the charging station (60)

The battery is now removed and positioned securely for charging.

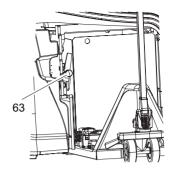





Battery installation

Procedure

- Move the hand pallet truck and battery to the truck.
- Raise and move the hand pallet truck into the battery compartment until the forks contact the truck chassis.
- Deposit the battery trolley with the rollers (65) on the base of the truck.
- Lower the forks of the hand pallet truck until the battery is horizontal.
- · Insert the battery in the truck.

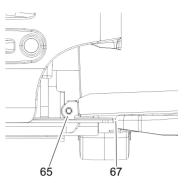


- Close the battery lock (63).
- · Lower the hand pallet truck.

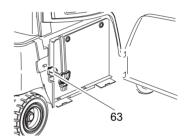

- · Undo the safety catch (55).
 - To do this press the pedals (56).
- Move the hand pallet truck away from the truck.
- · Close the battery door.

The battery is now inserted.

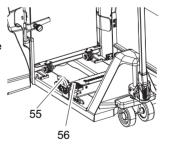

5.4 Removal and installation using a multi-adapter (O)

↑ CAUTION!

Trapping hazard

Trapping hazard when replacing the battery.

- ▶When replacing the battery do not reach between the battery and the chassis.
- ►Wear safety shoes.

Battery removal and installation

Requirements


- Park the truck securely, see "Parking the truck securely" on page 105.
- Battery exposed, see "Exposing the battery" on page 52.
- Battery disconnected.

Tools and Material Required


- Multi-adapter
- Battery trolley with six rollers
- Pallet truck with a fork length of 1150 mm

Procedure

- Push the pallet truck and the multi-adapter up to the stop (68) under the battery.
- Set the multi-adapter to the straight ahead position using the alignment device (69).

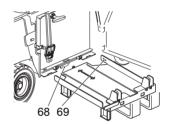


- Raise the multi-adapter with the pallet truck as far as the height stop (70).
- · Prevent the pallet truck from rolling away.
- · Undo the battery lock (63).

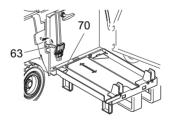

- Pull the battery (71) out by its handle.
- The battery trolley must engage securely in the safety catch (72).
- · Lower the pallet truck slightly to move it.

 The battery is now removed and can be taken to the charging station for charging.



→

Battery assembly is the reverse order.

Release the retaining hook (72) using your foot. Insert the rollers of the battery replacement trolley into the battery compartment guides and push the battery into the battery compartment.



WARNING!

After inserting the battery close the battery lock and then lower the pallet truck.

5.5 Removal and installation using a worktable for crane loading (○)

↑ CAUTION!

Trapping hazard

Trapping hazard when replacing the battery.

- ▶When replacing the battery do not reach between the battery and the chassis.
- ► Wear safety shoes.

Battery removal and installation

Requirements

 
- Park the truck securely, see "Parking the truck securely" on page 105.
- Battery exposed, see "Exposing the battery" on page 52.
- Battery disconnected.

Tools and Material Required


- Side table
- Battery trolley with six rollers
- Pallet truck with a fork length of 1360 mm
- Crane lifting gear

Procedure


 Push the hand pallet truck with the worktable as far as the stop (68) underneath the battery.



- Raise the worktable and the pallet truck as far as the stop (70).
- · Undo the battery lock (63).

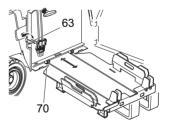

- Pull the battery (71) out by its handle.
- The battery trolley must engage securely in the safety catch (72).
- Strap the crane lifting harness to the battery container. The hooks must be fitted in such a way that when the crane lifting harness is slackened, they do not fall onto the battery cells.
- Lift out the battery with the crane. The battery replacement trolley remains secured to the worktable via the safety catches (72).

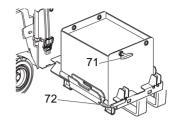

The battery is now removed and can be taken to the charging station for charging.

→

Battery assembly is the reverse order.

Release the retaining hook (72) using your foot. Insert the rollers of the battery replacement trolley into the battery compartment guides and push the battery into the battery compartment.



WARNING!

After inserting the battery close the battery lock and then lower the pallet truck.

5.6 Removal and installation using a fork shoe (O)

↑ CAUTION!

Trapping hazard

Trapping hazard when replacing the battery.

- ▶When replacing the battery do not reach between the battery and the chassis.
- ► Wear safety shoes.

Battery removal and installation

Requirements

- Truck parked securely, see "Parking the truck securely" on page 105.
- Battery exposed, see "Exposing the battery" on page 52.
- Battery disconnected.
- Battery lock released.


Tools and Material Required

- Fork shoe
- Second fork lift truck with a capacity to match the battery weight. The battery weights are indicated on the battery data plate.
- Battery trolley with two rollers
- Battery with cable guard (73) (○)
- Charging station intended for the battery type (60) (○)

- · Place the fork shoe onto the forks of a second lift truck and secure it to the fork carriage with a chain (74).
- · Tilt the mast forward.




- Move the fork shoe up to the stop (75) underneath the battery.
- · Raise the fork carriage until the battery is resting on the forks.

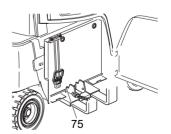






- Pull out the battery as far as the stop (76) on the truck chassis.
- · Raise the fork carriage.
- Tilt the mast back fully and bring the battery to the charging station to be charged.

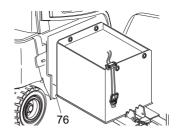

• Place the battery carefully on the charging station (60).

 The battery is now removed and positioned securely for charging.



Battery installation is the reverse order.

Make sure the battery trolley rollers are inserted into the guides in the battery compartment.

5.7 Removal and installation using a roller conveyor (O)

↑ CAUTION!

Trapping hazard

Trapping hazard when replacing the battery.

- ▶When replacing the battery do not reach between the battery and the chassis.
- ► Wear safety shoes.

Battery removal and installation

Requirements

- Park the truck securely, see "Parking the truck securely" on page 105.
- Battery exposed, see "Exposing the battery" on page 52.
- Battery disconnected.
- Battery lock released.

Tools and Material Required

- External roller guided replacement device

Procedure



 
Note the replacement device manufacturer's instructions.

· Bring the external replacement device up to the truck.



- · Pull the battery out with the external replacement device and transport it to the charging station for charging.
- · Deposit the battery securely.

The battery is now removed.



Battery assembly is the reverse order.



WARNING!

After inserting the battery close the battery lock.

5.8 Hook-on battery door removal and installation (O)

↑ CAUTION!

Trapping hazard

Trapping hazard when removing and installing the battery door.

- ▶When removing and installing the battery door do not put your hands between the door and the chassis.
- ▶Wear safety shoes.



Only for trucks with a roller conveyor.

Battery door removal


Requirements

- Park the truck securely, see "Parking the truck securely" on page 105.
- Battery disconnected.

Procedure

- · Open the battery door by moving the handle (77) up.
- · Lift the battery door slightly to the outside.
- · Pull the battery door up
- · Put the battery door down securely.

The battery door is now removed.

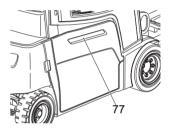

Battery door assembly

 
Requirements

- Park the truck securely, see "Parking the truck securely" on page 105.
- Battery disconnected.

Procedure

- Insert the battery door in the receptacles (78).
- · Push the battery door onto the truck.
- · Push the battery door down and engage it in the bracket (79).

The battery door is now assembled.



 \rightarrow If the battery door is not closed correctly, the truck will not be released for travel. Information message (1918) is displayed.

E Operation

1 Safety Regulations for the Operation of the Forklift Truck

Driver authorisation

The truck may only be used by suitably trained personnel, who have demonstrated to the proprietor or his representative that they can drive and handle loads and have been authorised to operate the truck by the proprietor or his representative.

Operator's rights, obligations and responsibilities

The operator must be informed of his duties and responsibilities and be instructed in the operation of the truck and shall be familiar with the operating instructions.

Unauthorised use of truck

The operator is responsible for the truck during the time it is in use. The operator must prevent unauthorised persons from driving or operating the truck. Do not carry passengers or lift other people.

Damage and faults

The supervisor must be informed immediately of any damage or faults to the truck or attachment. Trucks which are unsafe for operation (e.g. wheel or brake problems) must not be used until they have been rectified.

Repairs

The operator must not carry out any repairs or alterations to the truck without authorisation and the necessary training to do so. The operator must never disable or adjust safety mechanisms or switches.

Hazardous area

Λ

WARNING!

Risk of accidents/injury in the hazardous area of the truck

A hazardous area is defined as the area in which people are at risk due to travel or lifting operations of the truck, its load handler or the load. This also includes the area within reach of falling loads or lowering/falling operating equipment.

- Instruct unauthorised persons to leave the hazardous area.
- ▶ In case of danger to third parties, give a warning signal in good time.
- ▶If unauthorised persons are still within the hazardous area, stop the truck immediately.



WARNING!

Falling objects can cause accidents

Falling objects can injure the operator while the truck is being operated.

► The operator must remain within the protected area of the overhead guard while the truck is being operated.

Safety devices, warning signs and warning instructions

Safety devices, warning signs (see "Indication Points" on page 34) and warning instructions in the present operating instructions must be strictly observed.




CAUTION!

Reduced headroom can cause injuries

Trucks with reduced headroom are equipped with a warning label within the operator's line of sight.


- ▶The max. recommended body size indicated on this warning sign must be observed.
- ▶ The headroom is also reduced when you wear a protective helmet.

2 Displays and Controls

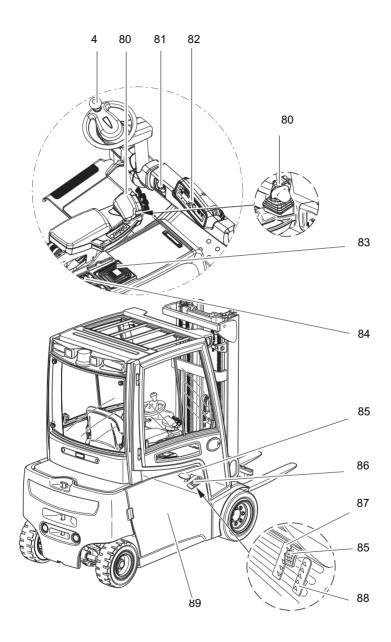


Item	Control / display		Function
4	Steering wheel	•	Steering the industrial truck.
80	80 Solo-Pilot		Controls the following functions:
	Multi-Pilot	0	- Fwd/rev. travel direction - Load handler lift / lower - Mast forward / reverse tilt - "Horn" button - Sideshifter left / right (○) - Auxiliary hydraulics (○)
81	Key switch	•	Switches control current on and off. Removing the key prevents the truck from being switched on by unauthorized personnel.
	ISM Access Module	0	Switches the truck on.
	Code lock		
82	Dashboard control panel	•	Displays the battery capacity, service hours, errors, key warning indicators, wheel position and travel direction.
83	Emergency Disconnect switch		Switches power supply on and off.
84	Armrest / side pocket control panel	•	Switches electric options on and off
85	Brake pedal	•	Provides infinitely variable braking control.
86	Accelerator pedal	•	Provides infinitely variable travel speed control
87	Twin pedal control "Reverse" accelerator pedal	0	The truck travels forward when the accelerator pedal is applied. Provides infinitely variable travel speed.
88	Twin pedal control "Forward" accelerator pedal	0	The truck reverses when the accelerator pedal is applied. Provides infinitely variable travel speed.
89	On-board charger	0	Charges the truck

^{*}If the truck is equipped with an ISM access module refer to the "ISM Access Module" operator manual.

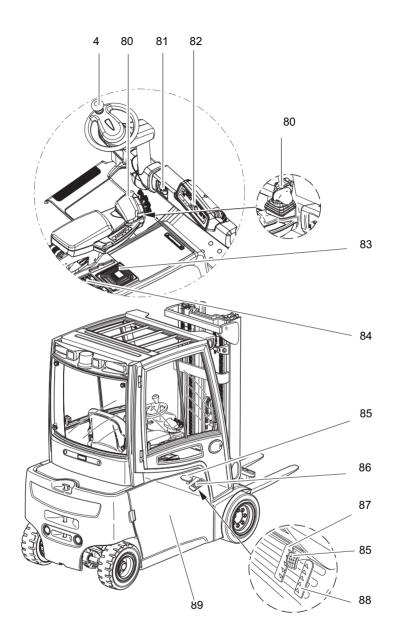


Item	Control / display		Function
90	Travel direction switch (not available with dual pedal control)	•	Selects travel direction / neutral position.
91	Lever	•	Lever for operating the hydraulic functions.
92	"Horn" button	•	Activates an audible warning.
93	Additional hydraulic function release button	0	Activates the additional hydraulic functions or hydraulics that require acknowledgement.
94	Button	0	Hydraulic auxiliary function control button.

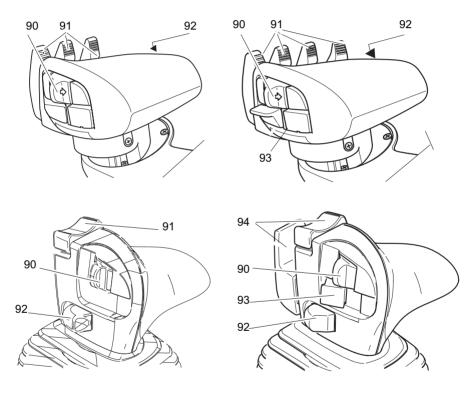

2.1 Control panel with display unit


The control panel display unit shows the operating data, the battery charge, the service hours and error details and information. Pictograms in the left top section of the dashboard control panel act as warning indicators.

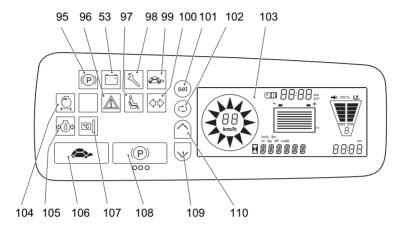

Item		Control / display		Function
95	(P)	Parking brake display	•	Comfort feature, displayed when the parking brake indicator (95) lights up.
				Truck prevented from rolling away but not parked securely.
				Parking brake is automatically activated after a set time (1 - 60 sec) when the truck stops. The parking brake is automatically released when the accelerator pedal is applied.
96	\triangle	WARNING	•	WARNING - Flashes for faults, an audible warning sounds. - Flashes when battery capacity is less than 10 %
53		Battery warning indicator	•	Not used

Item		Control / display		Function
97	<u>`</u>	Seat switch warning indicator	•	Seat switch not closed — Truck operational, but driver's seat not occupied
				Time monitoring expired Restart the truck
		Seat belt lock warning indicator (flashing symbol)	0	Truck operational, seat belt lock not closed
98	3	Service display	•	Service interval exceeded (1000 operating hours) or annual FEM test due (flashing indicator).
99	>	Slow travel speed indicator lamp	•	Slow travel speed activated (max. travel speed 6 km/h)
100	\$\$	Travel direction display indicator lamp	0	Right / left indicator lamps activated
101	set	Set key	•	Confirms the entries
102	(2)	Toggle button	•	Changes the display between "Time / Residual Run Time"
103		Display	•	Displays the operating data (see "Display" on page 87)
104	ð			Not used
105	=()=			Not used
106	~	Slow travel button	•	Switches slow travel on and off
107	°C	Warning indicator Controller and motor overtemperature	•	Not used

Item		Control / display		Function
108	(P)	Yellow LEDs under the parking brake button and	•	Secure parking of truck. The parking brake is activated when the truck is switched on or
95	Parking brake indicator light up simultaneously			when the truck is switched on or when the parking brake button (108) is pressed. Yellow LEDs under the parking brake button (108) and the parking brake indicator (95) light up simultaneously. Travel is not enabled when the accelerator pedal is pressed. Travel is enabled by pressing the parking brake button (108).
109	\bigcirc	Program selector	•	Selects the operating program (moves down a level in the operating program list.)
110		Program selector	•	Selects the operating program (moves up a level in the operating program list.)

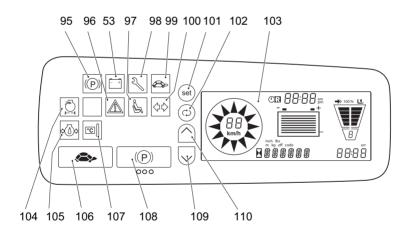



*Five operating programs with different performance levels are available to adapt the travel and operating functions to the application at hand. Starting from operating program 1 (limited acceleration and speed together with sensitive application of the operating functions), the performance levels increase to program 5 (maximum performance for high throughput levels). If necessary the operating programs can also be adapted or restricted to suit the customer. Contact the manufacturer's customer service department.


2.2 Armrest control panel switch (O)

	Function	
	Work lights	
/////		
	Front windscreen wipers	
	Press 1x > intermittent,	
	2x > fast,	
	− 3x > off	
	 Hold down on the button > Switch on the windscreen 	
	washing system	
	Rear windscreen wiper	
	Press 1x > intermittent,	
	2x > fast,	
	- 3x > off	
	 Hold down on the button > Switch on the windscreen 	
	washing system	
	Sideshift centre position	
L		
	Lift cutout override	

2.3 Side compartment control panel switch (O)

	Function	
	Rear window heating	
	Beacon	
	Truck lighting	
P	Parking light	
HAZARD	Warning indicator	
T T	Lift cutout override	

2.4 Display

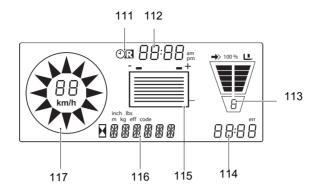

Item	Function		
111	Remaining time in the format hours : minutes		
	Remaining charge time (○)		
112	Time display (hours : minutes)		
113	Operating program display		
	 Displays the travel program in use 		
114	Error display:		
	 If an error (Err) or a warning (Inf) occurs, the error or info code is displayed. 		
	 If several errors occur they are displayed alternately at 1.5 second intervals. A warning sounds. 		
115	Battery capacity display		
	 Battery discharge status 		
	 Charge status display for on-board charger (○) 		
116	Hourmeter display		
117	Travel direction, speed and wheel position display		
	 Indicates the pre-selected travel direction (forward or reverse) or the position of the steered wheels. 		
	 Flashing direction arrow = no travel direction selected 		

2.4.1 Battery discharge indicator

NOTE

Full discharge can damage the battery

The standard setting for the battery discharge indicator is based on standard batteries. When using maintenance-free batteries (gel batteries), the display must be reset.

- ▶This adjustment should only be made by the manufacturer's customer service department.
- ▶ The battery discharge indicator shows the battery's residual capacity.
- ▶ Charge the battery, see "Charging the battery" on page 53.


The battery charge status is shown on the truck display via a battery symbol (115). When a battery is discharged to the permissible discharge level, the battery symbol (115) is displayed empty.

2.4.2 Battery discharge monitor

If the residual capacity falls below the required level, lifting is inhibited and the travel speed is reduced. An message appears in the display. Lifting is only released when the battery connected is at least 40% charged.

In order to complete the lift cycle, the key switch must be turned off and on again. Lifting is then enabled for 30 to 40 seconds.

2.4.3 Residual time display

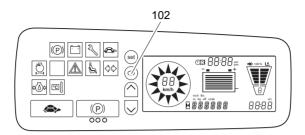

Setting the residual time display

Procedure

- Press the toggle switch (102) for 3 seconds. This toggles the display between the time and the residual time or the remaining charge time for an on-board charger (○).
- Press the Shift key (102) for 8 seconds until the residual time display menu is shown.
- Press the set key (102) to return to normal operating mode.

The time remaining to reach the residual capacity is displayed.

2.4.4 Hourmeter

The service hours are counted when the truck is switched on and the seat switch is closed.

3 Preparing the Truck for Operation

3.1 Checks and operations to be performed before starting daily operation

Λ

WARNING!

Damage and other truck or attachment (optional equipment) defects can result in accidents.


If damage or other truck or attachment (optional equipment) defects are discovered during the following checks, the truck must be taken out of service until it has been repaired.


- ▶ Report any defects immediately to your supervisor.
- ► Mark defective truck and take out of service.
- ▶ Do not return the industrial truck to service until you have identified and rectified the fault.

Checks before daily operation


Procedure

- Visually inspect the entire truck (in particular wheels, wheel bolts and load handler) for damage.
- Check the fork stop (118) and fork retainer (119).
- Visually inspect the hydraulic system in the visible area for damage and leaks.
- · Make sure the driver's seat is locked in position.
- Test the horn and reversing buzzer (O) where applicable.
- Check that the capacity plate and warning labels are legible.
- · Test the controls and displays.
- · Test the steering.
- Check the steer angle display (○), turn the steering wheel in both directions as far as the stop and check that the wheel position is displayed on the control panel.
- · Make sure the load chains are evenly tensioned.
- Test the seat belt. (The belt should jam when extracted suddenly.)
- Test the seat switch: when the driver's seat is vacated it should not be possible to activate the hydraulic functions.
- Test the restraint system (○).
- Test the Drive Control (○).
 - Raise the fork carriage without load beyond the reference point on the mast. The slow travel symbol lights up on the display.
 - Slowly apply the accelerator pedal on a clear route with good visibility. The maximum speed should be reduced to walking pace (3 km/h).
- Test the lift/lower, tilt and if applicable the attachment hydraulic control functions.
- Check the accelerator pedal can move freely while the parking brake is applied (108 and 95 lit simultaneously) and the truck is idling, by pressing it several times.
- Visually inspect the battery attachment and cable connections.
- · Check the battery lock is present and working.

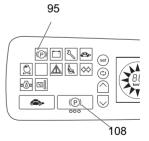

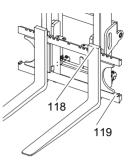

- On trucks with lateral battery removal, check the left and right stops (64) in the battery compartment for damage.
- Check the fluid level of the window washer system, see "Preparing the truck for operation" on page 103.

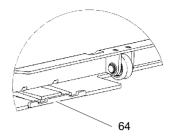

3.2 Entry and exit

Procedure

- Open the cab door (○).
- To enter and exit the cab, hold onto the handle (120).



An additional step is provided for the driver position extension (\bigcirc).

 
3.3 Trucks with reduced headroom (O)

 
MARNING!

An unsuitable workplace can damage your health

Failure to observe the recommended body size can cause stress and endanger the operator and may lead to lasting ill health due to an unhealthy posture and excessive strain on the operator.

- ▶The operating company must ensure that truck operators do not exceed the maximum body size indicated.
- ► The operating company must check that the operators can sit in a normal and upright position without having to strain.





3.4 Setting up the operator position

M WARNING!

Accidents can occur if the driver's seat, steering column and armrest are not engaged

The driver's seat, steering column and armrest can accidentally adjust during travel and therefore cannot be operated safely.

▶ Do not adjust the driver's seat, steering column or armrest while travelling.

Procedure

- Before starting to travel, adjust the driver's seat, steering column and armrest (if necessary) so that all the controls are within reach and can be applied without having to strain.
- Adjust the visibility aid equipment (mirrors, camera systems etc.) so that the working environment can be clearly seen.

3.4.1 Adjusting the driver's seat

↑ WARNING!

Risk of accidents and damage to health

An incorrectly adjusted driver's seat can result in accidents and damage to health.

- ▶ Do not adjust the driver's seat while travelling.
- ▶ The driver's seat should lock in position after adjustment.
- ▶ Check and adjust the individual driver's seat setting before starting up the truck.
- ► Hold the weight setting lever only by the recess, do not reach through underneath the lever.

Adjusting the driver's weight

 
NOTE

To achieve optimal seat cushioning the driver's seat must be set to the driver's weight.

Set the driver's weight when the seat is occupied.

Procedure

- Fold out the weight adjustment lever (121) as far as it will go in the arrow direction
- Move the weight adjustment lever (121) up and down to set the seat to a higher weight.
- Move the weight adjustment lever (121) up and down to set the seat to a lower weight.



· After setting the weight, move the lever (121) back in full.

The driver's weight is now set.


Adjusting the backrest

Procedure

- Sit on the driver's seat.
- Pull the lever (124) to adjust the backrest.
- · Adjust the backrest tilt.
- Release the lever (124) again. The backrest is locked.

The backrest is now set.

Hold the weight setting lever (121) only by the recess, never reach through underneath the lever

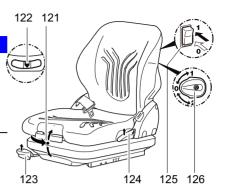

Adjusting the seat position


Λ

CAUTION!

An unsecured driver's seat can cause injury

An unsecured driver's seat can slide out of its guide during travel, resulting in accidents.

- ►The driver's seat must be locked in position.
- ▶ Do not adjust the driver's seat while travelling.

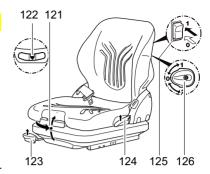

Procedure

- · Sit on the driver's seat.
- Pull up the driver's seat locking lever123 in the direction of the arrow.
- · Push the driver's seat forwards or backwards to the desired position
- Engage the driver's seat locking lever (123) in position.

The seat position is now correctly set.

Switching the seat heating on and off

Procedure

Press the seat heating switch (125).
 Switch setting 1 = Seat heating on.
 Switch setting 0 = Seat heating off.

Adjusting the lumbar vertebrae support (O)

Procedure

• Turn the hand wheel (126) to the required position.


Position 0 = no warping in lumbar vertebrae area.

Position 1 = increasing warping in upper lumbar vertebrae area.

Position 2 = increasing warping in lower lumbar vertebrae area.

The lumbar vertebrae support is now set.

3.4.2 Adjusting the steering column

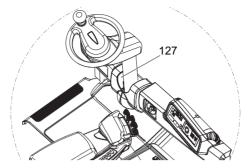


Adjusting the steering column

Procedure

- Release the steering column stop (127).
- · Set the steering column to the required position (height and angle).
- Fix the steering column stop (127) in position.

The steering column is now positioned.

3.4.3 Adjusting the arm rest

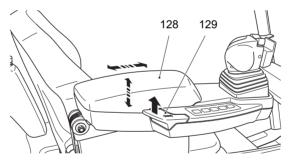

Adjusting the arm rest

Procedure

- Pull up the lock (129) and hold it in this position.
- Move the armrest (128) vertically and horizontally.
- Release the lock (129) at the desired position.
- Push the armrest slightly forward or back until it locks in position.

The armrest is now positioned.

3.5 Seat Belt

↑ WARNING!

Travelling without a seat belt increases the risk of injury.

Accidents or personal injury can result if the seat belt is not worn or is modified.

- ▶ Always put the seat belt on before starting the industrial truck.
- ▶ Do not modify the seat belt.
- ▶ Damaged or non-operational seat belts must be replaced by trained personnel.
- ▶ Seat belts must always be replaced after an accident.
- ▶ Only original spare parts must be used for retrofits or repairs.
- ▶ Report any defects immediately to your supervisor.
- ▶ Remove the truck from service until a functional seat belt has been fitted.



Protect the seat belt from contamination (e.g. cover it when the truck is idle) and clean it regularly. Frozen belt locks or pulleys must be thawed out and dried to prevent them from freezing up again.

The temperature of the warm air should not exceed +60 °C!

Starting the industrial truck on steep slopes

The automatic blocking system locks the belt in the retractor when the truck is positioned on a steep slope. This prevents the belt from being pulled out of the retractor.

→

Carefully drive the truck off the slope and then put on the belt.

⚠ DANGER!

A faulty seat belt can cause injury

Using a faulty seat belt can result in injury.

- ▶ Only operate the truck with the seat belt intact. A faulty seat belt should be replaced immediately.
- ▶ The truck must remain decommissioned until a functional seat belt has been fitted.

Checking the seat belt

Procedure

- · Check the attachment points for wear and damage.
- · Check the cover for damage.
- Pull the belt out fully from the retractor and check for damage (loose seams, fraying and nicks).
- Test the belt buckle and make sure the belt returns correctly into the retractor.

Check the automatic locking system

Procedure

- · Park the truck on a level surface.
- · Jerk the seat belt out suddenly.

The locking system should prevent the belt from coming out.

The seat belt has now been checked.

4 Industrial Truck Operation

4.1 Safety regulations for truck operation

Δ

WARNING!

Electromagnetic influence can result in accidents

Strong magnets can cause electronic components such as Hall sensors to become damaged, resulting in accidents.

▶ Do not use magnets in the operating area of the truck. Exceptions to this rule are commercial, weak clamping magnets for attaching notices.

Travel routes and work areas

Only use lanes and routes specifically designated for truck traffic. Unauthorised third parties must stay away from work areas. Loads must only be stored in places specially designated for this purpose.

The truck must only be operated in work areas with sufficient lighting to avoid danger to personnel and materials. Additional equipment is necessary to operate the truck in areas of insufficient lighting.

Λ

DANGER!

Do not exceed the permissible surface and point loading on the travel lanes. At blind spots get a second person to assist.

The driver must ensure that the loading dock /dock leveller cannot be removed or come loose during loading/unloading.

NOTE

Loads must not be deposited on travel or escape routes, in front of safety mechanisms or operating equipment that must be accessible at all times.

Travel conduct

The operator must adapt the travel speed to local conditions. The truck must be driven at slow speed when negotiating bends or narrow passageways, when passing through swing doors and at blind spots. The operator must always observe an adequate braking distance between the forklift truck and the vehicle in front and must be in control of the truck at all times. Abrupt stopping (except in emergencies), rapid U turns and overtaking at dangerous or blind spots are not permitted. Do not lean out or reach beyond the working and operating area.

Do not use a mobile phone or walkie-talkie without a handsfree device while operating the truck.

Hazardous situations

If the truck is about to tip over, do not loosen the seat belt. The operator must not jump off the truck. The operator must lean his upper body over the steering wheel and hold on with both hands. Tilt your body in the opposite direction of fall.

Travel visibility

The operator must look in the direction of travel and must always have a clear view of the route ahead. If the truck is carrying loads that affect visibility, the truck must travel against the load direction. If this is not possible, a second person must walk alongside the truck as a lookout to observe the travel route while maintaining eye contact with the operator. Proceed only at walking pace and with particular care. Stop the truck as soon as you lose eye contact.

Negotiating slopes and inclines

Negotiating slopes and inclines up to 15% is only permitted if they are specifically designed as travel routes, are clean and have a non-slip surface and providing they can be safely travelled along in accordance with the truck's technical specifications. The truck must always be driven with the load facing uphill. The industrial truck must not be turned, operated at an angle or parked on inclines and slopes. Inclines must only be negotiated at slow speed, with the driver ready to brake at any moment. Particular care is required when travelling near slopes and guay walls.

Negotiating lifts, loading ramps and docks

Lifts may only be negotiated if they have sufficient capacity, are suitable for driving on and authorised for truck traffic by the owner. The driver must satisfy himself of the above before entering these areas. The truck must enter lifts with the load in front and must take up a position which does not allow it to come into contact with the walls of the lift shaft. Persons riding in the lift with the forklift truck must only enter the lift after the truck has come to a rest and must leave the lift before the truck. The driver must ensure that the loading ramp / dock cannot move or come loose during loading / unloading.

Type of loads to be carried

The operator must make sure that the load is in a satisfactory condition. Loads must always be positioned safely and carefully. Use suitable precautions to prevent parts of the load from tipping or falling down. Prevent liquid loads from sloshing out.

Inflammable liquids (e.g. fused metal etc.) may only be transported with suitable auxiliary equipment. Contact the manufacturer's customer service department.



For safety instructions on the nature of loads to be carried with attachments, see "Lifting, transporting and depositing loads" on page 116.

Towing trailers

The truck may only be used occasionally to tow trailers, see "Towing trailers" on page 135

4.2 Preparing the truck for operation

Switching on the truck

Requirements

 For checks and operations to be performed before starting daily operation, see "Checks and operations to be performed before starting daily operation" on page 90.


Procedure

- Unlock the Emergency Disconnect switch (83) to do this
 - Press the rocker in (1) and pull it up until you feel the Emergency Disconnect switch engaging.
- Insert the key in the key switch (81) and turn it clockwise as far as it will go to the "I" position.
- Test the brake pedal and parking brake (108 and 95 lit simultaneously).

Truck is operational. The display (103) shows the remaining battery capacity.



When you have pulled the EMERGENCY DISCONNECT and turned the key switch to the right, the truck carries out a self test for approx. 3-4 seconds (tests the controllers and motors). During this time the truck cannot move or lift. If the accelerator or a lift mechanism lever is applied during this time, an information message will be displayed.

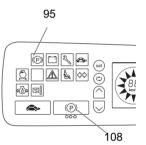


81

103

83

4.3 Setting the time

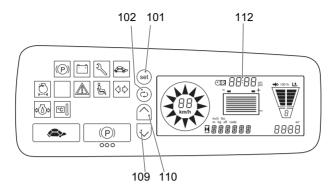

Setting the time

Procedure

- Press the toggle switch (102) for 3 seconds. This toggles the display between the time and the residual time or the remaining charge time for an on-board charger (○).
- Press the toggle key (102) for 8 seconds until the set clock time menu is displayed.
- Set the time with the Up (110) and Down (109) keys.
- Confirm with the SET key (101).
- Set the minutes with the Up (110) and Down (109) keys.
- Press the set key (102) to return to normal operating mode.

The time is now set.

→

Keep pressing the Up and Down keys to set the time and to change between 24 hour and 12 display (SET HOUR 24 H <-> SET HOUR 12 H).


4.4 Parking the truck securely

↑ WARNING!

An unsecured truck can cause accidents

Parking the truck on an incline, without the brakes applied or with a raised load / load handler is dangerous and is strictly prohibited.

- ► Always park the truck on a level surface. In special cases the truck may need to be secured with wedges.
- ► Always fully lower the mast and load handler.
- ▶ Tilt the mast forward.
- ▶ Always apply the parking brake button before parking the truck.
- ► Choose a place to park where no other people are at risk of injury from lowering forks
- ▶ Do not park and abandon a truck on an incline.

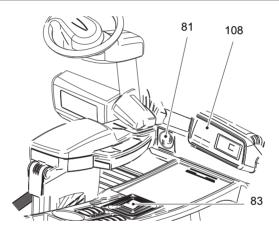

Park the truck securely

Procedure

- · Apply the parking brake button (108).
- Turn the key in the key switch (81) to the "0" position.
- Remove the key from the key switch (81).
- · Press the Emergency Disconnect switch (83) down.

The truck is now parked securely.

4.5 Emergency Disconnect

Λ

CAUTION!

Applying maximum braking can result in accidents

Applying the Emergency Disconnect switch during travel will cause the truck to decelerate to a halt at maximum force. This may cause the load to slide off the load handler. There is a higher risk of accidents and injury.

- ▶ Do not use the Emergency Disconnect switch as a service brake.
- ▶ Use the Emergency Disconnect switch during travel only in emergencies.

Λ

CAUTION!

Faulty or non-accessible Emergency Disconnect switches can cause accidents

A faulty or non-accessible Emergency Disconnect switch can cause accidents. In dangerous situations the operator cannot bring the truck to a halt in time by applying the Emergency Disconnect switch.


- ▶ The operation of the Emergency Disconnect switch must not be affected by any objects placed in its way.
- ▶ Report any defects on the Emergency Disconnect switch immediately to your supervisor.
- ► Mark defective truck and take out of service.
- ► Do not return the industrial truck to service until you have identified and rectified the fault.

Applying the Emergency Disconnect

Procedure

· Press the Emergency Disconnect (83).

All electrical functions are deactivated. The truck brakes to a halt.

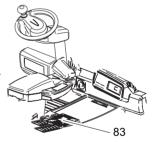

Releasing the Emergency Disconnect

Procedure

Press the rocker in (1) and pull the Emergency Disconnect switch (83) up until you
feel the Emergency Disconnect (83) switch engaging.

All electrical functions are enabled and the truck is operational again (assuming the truck was operational before the Emergency Disconnect was pressed).

4.6 Travel

MARNING!

Improper travel can result in accidents

- ▶ Do not get up from the driver's seat during travel.
- ▶ Do not drive the truck unless your are wearing a seat belt and the panels and doors are properly locked.
- ▶ Do not lean out of the truck while travelling.
- ► Make sure that the travel area is clear.
- ▶ Adapt your travel speed to the route conditions in the work area and the load.
- ▶ Tilt the mast back and raise the fork carriage approx. 200 mm.
- ► Make sure you have sufficient visibility when reversing.

Travel


Requirements

 Truck prepared for operation, see "Preparing the truck for operation" on page 103.

Procedure

- Release the parking brake, to do this press the parking brake button (108).
- Select the travel direction with the travel direction switch (90).
- Select the travel speed if necessary, to do this press the slow travel button (106) or the program selector (109/110).
- Raise the load handler approx. 200 mm.
- · Tilt the mast back.
- Apply the accelerator pedal (86). The travel speed is governed by the accelerator (86).

The truck travels in the direction selected.

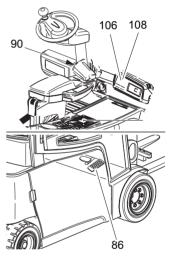

Dual pedal (optional equipment)

Requirements

 System prepared for operation, see "Preparing the truck for operation" on page 103

Procedure



For trucks with a dual pedal the travel direction is selected via the accelerator pedals (87;88). When the driver leaves the truck, the truck is automatically set to "Neutral".

- Press the brake pedal gently to enable travel and operating functions.
- Release the parking brake, to do this press the parking brake button (108).
- · Raise the load handler approx. 200 mm.
- · Tilt the mast back.
- Apply the accelerator pedal (87) to travel forward. The travel speed is governed by the accelerator (87).
- Apply the accelerator pedal (88) to reverse. The travel speed is governed by the accelerator (88).

The truck travels in the direction selected.

Changing direction during travel


Procedure

• Set the travel direction switch (90) to the opposite direction while travelling.

The truck decelerates until it starts to travel in the opposite direction.



When the truck changes direction it can start travelling at high speed in the opposite direction unless the accelerator pedal is released in time. Changing direction results in braking deceleration

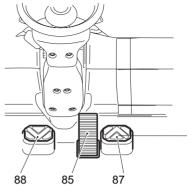

4.7 Steering

Requirements

- Truck ready for operation, see "Preparing the truck for operation" on page 103

Procedure

- To negotiate a right-hand bend:
 - Turn the steering wheel clockwise to match the desired steering radius.
- To negotiate a left-hand bend:
 - Turn the steering wheel anti-clockwise to match the desired steering radius.

4.8 Brakes

The truck can brake in three different ways:

- Service brake
- Coasting brake

and for secure parking:

- Parking brake

Accident risk

The brake pattern of the truck depends largely on the ground conditions.

- The operator must take into account the travel route conditions when braking.
- ▶ Brake with care to prevent the load from slipping.
- ▶ Allow for increased braking distance when travelling with an attached load.
- ▶ Use the service brake in emergencies.

4.8.1 Service brake

Braking with the service brake

Procedure

• Depress the brake pedal (85) until you feel the brake pressure.

The truck decelerates depending on the brake pedal position.





4.8.2 Coasting brake

Braking with the coasting brake

Procedure

· Take your foot off the accelerator pedal (86).

The truck decelerates.

Immediately after the battery has been charged the brake power of the coasting brake may reduce of their own accord after long periods of application, e.g. ramp operation.

- ▶The operator must instruct people to leave the hazardous area.
- ▶ The operator must perform test braking.

4.8.3 Parking brake

↑ DANGER!

Accident risk

- ► The parking brake will hold the truck with maximum load on a clean ground surface, on inclines of up to 15%.
- ▶ Do not park and abandon the truck on an incline.
- ▶ Applying the parking brake during travel will cause the truck to brake to a halt at maximum force. This may cause the load to slide off the forks. There is a greater risk of accidents and injury.

The parking brake has two functions:

- Truck prevented from rolling away (parking brake automatically activated) When the truck stops the parking brake is automatically activated after a set time (1 - 60 sec), prevents the truck from rolling away and the parking brake indicator (95) lights up. When the accelerator pedal is applied the parking brake is automatically released and the parking brake indicator (95) goes out.

This function of the parking brake prevents the truck from rolling away on inclines up to a maximum of 15%. The truck accelerates when the accelerator pedal is applied.

 Park the truck securely (parking brake activated by parking brake button (108))


Pressing the parking brake button (108) disables travel. The truck is parked securely and the yellow LEDs under the parking brake button (108) light up. When the parking brake button (108) is pressed again the parking brake is released, travel is enabled and the yellow LEDs under the parking brake button (108) go out. This function of the parking brake ensures that the truck is parked securely. The truck will not accelerate when the accelerator pedal is applied.

When the truck is switched on the parking brake is activated, travel is enabled and the yellow LEDs under the parking brake button (108) light up. When the parking brake button (108) is pressed the parking brake is released and the yellow LEDs under the parking brake button (108) go out.

Procedure

- Apply the parking brake button (108) .
- Yellow LEDs under the parking brake button (108) and the parking brake indicator (95) light up simultaneously.
- When the yellow LEDs under the parking brake button (108) light up travel is not enabled.

The truck is securely positioned when the yellow LEDs under the parking brake button (108) and the parking brake display (95) light up.

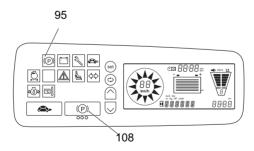

Item		Control / display		Function
95	(P)	Parking brake indicator	•	Comfort feature, displayed when the parking brake indicator (95) lights up.
				Truck prevented from rolling away but not parked securely.
				Parking brake is automatically activated after a set time (1 - 60 sec) when the truck stops. The parking brake is automatically released when the accelerator pedal is applied.
108	(P)	Yellow LEDs under the parking brake button and	•	Secure parking of truck. The parking brake is activated
95	P	Parking brake indicator light up simultaneously	•	when the truck is switched on or when the parking brake button (108) is pressed. Yellow LEDs under the parking brake button (108) and the parking brake indicator (95) light up simultaneously. Travel is not enabled when the accelerator pedal is pressed. Travel is enabled by pressing the parking brake button (108).

The parking brake comfort feature is automatically activated after a set time (1 - 60 sec) after the truck stops. The factory setting is 5 sec.


The time setting can only be adjusted by the manufacturer's customer service department.

4.9 Adjusting the forks

Unsecured and incorrectly adjusted forks can cause accidents

Before adjusting the forks make sure the retaining bolts (119) are fitted.

- ► Adjust the forks so that both forks are equidistant from the outside edge of the fork carriage.
- ► Engage the locking pin in a groove to prevent the forks from moving accidentally.
- ►The load centre of gravity must be located centrally between the forks.

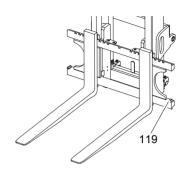

Adjusting the forks

Requirements

 Park the truck securely, see "Parking the truck securely" on page 105.

Procedure

 
in a slot.

- · Lift up the locking lever (130).
- Push the forks (131) into the correct position on the fork carriage (132).
- **→**

To lift the load securely, the forks (131) must be spread as far apart as possible and positioned centrally with respect to the fork carriage. The load centre of gravity must be centrally aligned between the forks

Lift the locking lever down (130) and move the forks until the locking pin engages

The forks are now adjusted.



4.10 Replacing the forks

MARNING!

Unsecured forks can cause injury

You can injure your legs when replacing the forks.

- ▶ Never pull the forks towards your body.
- ► Always push the forks away from your body.
- ► Secure heavy forks with lifting slings and a crane before pushing them down from the fork carriage.
- ► After replacing the forks fit the retaining bolts (119) and make sure the bolts are seated correctly. Retaining bolt torque: 85 Nm.

Replacing the forks


Requirements

 Load handler lowered and forks not touching the ground.

Procedure

- Disassemble the retaining bolts (119).
- · Loosen the fork stop (118).
- · Carefully push the forks off the fork carriage.

The forks are now dismantled from the fork carriage and can be replaced.

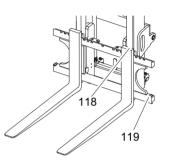

4.11 Lifting, transporting and depositing loads

MARNING!

Unsecured and incorrectly positioned loads can cause accidents.

Before lifting a load the operator must make sure that it has been correctly palletised and does not exceed the truck's capacity.

- ▶ Instruct other people to move out of the hazardous area of the truck. Stop working with the truck if people do not leave the hazardous area.
- ▶ Only carry loads that have been correctly secured and positioned. Use suitable precautions to prevent parts of the load from tipping or falling down.
- ▶ Do not transport loads other than on the authorised load handler.
- ▶ Damaged loads must not be transported.
- ▶ If the stacked load obscures forward visibility, then you must reverse the truck.
- ▶ Do not exceed the maximum loads specified on the capacity plate.
- ▶ Check the fork spread before lifting the load and adjust if necessary.
- Insert the forks as far as possible underneath the load.

Lifting loads

Requirements

- Load correctly palletised.
- Fork spread for the pallet checked and adjusted if necessary.
- Load weight matches the truck's capacity.
- Forks evenly loaded for heavy loads.

Procedure

- · Drive the truck carefully up to the pallet.
- · Set the mast vertical.
- Slowly insert the forks into the pallet until the fork shank touches the pallet.
- · Raise the load handler.
- Reverse carefully and slowly until the load is outside the storage area. Make sure
 you have enough clear space to reverse into.

NOTE

Loads must not be deposited on travel or escape routes, in front of safety mechanisms or operating equipment that must be accessible at all times.

Transporting loads

Requirements

- Load raised correctly.
- Load handler lowered for transport (approx. 150 200 mm above the ground).
- Mast tilted back fully.

Procedure

- · Accelerate and decelerate sensitively.
- Adapt your travel speed to the conditions of the route and the load you are transporting.
- Watch out for other traffic at crossings and passageways.
- · Always travel with a lookout at blind spots.
- On slopes and inclines always carry the load facing uphill, never approach at an angle or turn.

 
Depositing loads

Requirements

- Storage location suitable for storing the load.

Procedure

- · Set the mast vertical.
- Drive the truck carefully up to the storage location.
- Carefully lower the load handler so that the forks are clear of the load.



• Carefully remove the forks from the pallet.

The load is deposited.

· Lowers the load handler.

4.12 Operating the lift mechanism and integrated attachments

↑ WARNING!

Operating the lifting device and integrated attachments can be hazardous

Other people can be injured in the truck's hazardous area.

The hazardous area is defined as the area in which people are at risk from the truck movement, the load handler, attachments etc. This also includes areas which can be reached by falling loads or lowering operating equipment.

Apart from the operator (in the normal operating position) there should be no other people in the truck's hazardous area.

- ▶ Instruct other people to move out of the hazardous area of the truck. Stop working with the truck if people do not leave the hazardous area.
- ▶If people do not leave the hazardous area despite the warning, prevent the truck from being used by unauthorised people.
- ▶ Only carry loads that have been correctly secured and positioned. Use suitable precautions to prevent parts of the load from tipping or falling down.
- ▶ Do not exceed the maximum loads specified on the capacity plate.
- ▶ Do not stand underneath a raised load handler.
- ▶ Do not stand on the load handler.
- ▶ Do not lift other people on the load handler.
- ▶Do not reach through the mast.
- ▶ The controls should only be operated from the driver's seat, and never suddenly.
- ▶ The operator must be trained to handle the lift mechanism and the attachments.

4.12.1 Operating the lift mechanism with the SOLO PILOT

Lifting and lowering


Requirements

 To prepare the truck for operation, see "Preparing the truck for operation" on page 103

Procedure

- Pull the Solo-Pilot lever (133) in direction H to raise the load.
- Push the Solo-Pilot lever (133)in direction S to lower the load.

The load is now raised / lowered

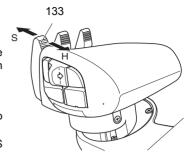

→

When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral.

Tilting the mast forward / backward


Requirements

 To prepare the truck for operation, see "Preparing the truck for operation" on page 103

Procedure

- Pull the Solo-Pilot lever (134) in direction R to tilt the mast back.
- Push the Solo-Pilot lever (134) in direction V to tilt the mast forward.

The mast is now tilted back / forward

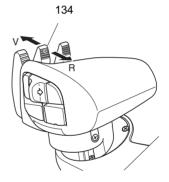

→

When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral.

Positioning the integrated sideshift (option)


Requirements

 Truck prepared for operation, see "Preparing the truck for operation" on page 103.

Procedure

- Pull the SOLO-PILOT lever (135) in direction R to move the load handler to the right (from the driver's viewpoint).
- Push the SOLO-PILOT lever (135) in direction V to move the load handler to the left (from the driver's viewpoint).

The sideshifter is now positioned.

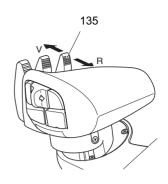

→

When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral.

Positioning the forks with an integrated fork positioner (option)

Λ

CAUTION!

Do not use the fork positioner to clamp loads.

Requirements

 Truck prepared for operation, see "Preparing the truck for operation" on page 103.

Procedure

- Press the toggle switch (136) and at the same time pull the SOLO-PILOT (133) in direction Z: the forks will move towards each other.
- Press the toggle switch (136) and at the same time push the SOLO-PILOT (133) in direction A: the forks will spread apart.

The forks are now positioned.

Synchronising the alignment of the fork tines with an integrated fork positioner (optional equipment)

Requirements

- Truck prepared for operation, see "Preparing the truck for operation" on page 103.
- The fork tines are no longer aligned.


Procedure

- Press the toggle switch (136) and at the same time push the SOLO-PILOT (133) in direction A and spread the fork tines apart as far as they will go.
- Press the toggle switch (136) and at the same time pull the SOLO-PILOT (133) in direction Z and bring the fork tines as close to each other as they will go.

The fork tines are now synchronised.



When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral

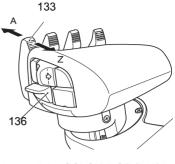

133

136

4.12.2 Operating the lift mechanism with the Multi Pilot

 
Lifting and lowering


Requirements

 To prepare the truck for operation, see "Preparing the truck for operation" on page 103

Procedure

- Pull the Multi-Pilot (80) in direction H to raise the load.
- Push the Multi Pilot (80) in direction S to lower the load.



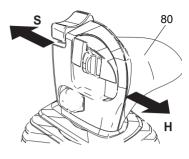



When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral.

Tilting the mast forward / backward


Requirements

 Truck prepared for operation, see "Preparing the truck for operation" on page 103.

Procedure

- Push the Multi-Pilot lever (80) in direction V to tilt the mast forward.
- Push the Multi-Pilot lever (80) in direction R to tilt the mast back.

The mast is now tilted back / forward.

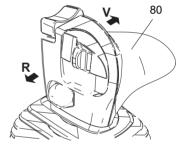



When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral.

Positioning the integrated sideshift (option)


Requirements

 Truck prepared for operation, see "Preparing the truck for operation" on page 103.

Procedure

- Press the button (137) to the left to move the load handler to the left (from the driver's viewpoint).
- Press the button (137) to the right to move the load handler to the right (from the driver's viewpoint).

The sideshifter is now positioned.

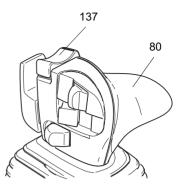

→

When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral.

Positioning the forks with an integrated fork positioner (option)



CAUTION!

Do not use the fork positioner to clamp loads.


Requirements

 Truck prepared for operation, see "Preparing the truck for operation" on page 103.

Procedure

- Press the (138) button while at the same time pressing the (93) button, the forks will spread apart.
- Pull the (138) button while at the same time pressing the (93) button, the forks will
 move together.

The forks are now positioned.

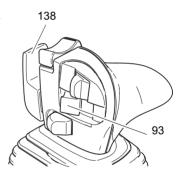

Synchronising the alignment of the fork tines with an integrated fork positioner (optional equipment)

Requirements

- Truck prepared for operation, see "Preparing the truck for operation" on page 103.
- The fork tines are no longer aligned.


Procedure

- Press the (138) button whiel at the same time pressing the (93) button, the forks will spread apart.
- Pull the (138) button while at the same time pressing the (93) button, the forks will
 move together.

The fork tines are now synchronised.



When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral.

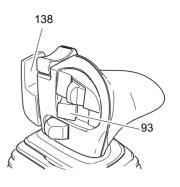

4.13 Safety instructions for operating additional attachments



Optionally, trucks can be fitted with one or more auxiliary hydraulic functions to operate attachments. The auxiliary hydraulics are indicated with ZH1, ZH2 and ZH3.

Auxiliary hydraulic functions for exchangeable equipment are fitted with replacement couplings on the fork carriage. To fit exchangeable equipment see "Fitting additional attachments" on page 133.

Λ

DANGER!

Attaching exchangeable equipment can result in accidents.

Other people can be damaged by attaching exchangeable equipment. Use only exchangeable equipment which has been deemed safe after a risk analysis carried out by the owner.

- ▶Only use attachments with a CE mark.
- ▶ Only use attachments that have been designed by the attachment manufacturer for use with the respective industrial truck.
- ▶ Only use attachments that have been fitted for the purpose by the owner.
- ► Make sure the operator has been instructed in the use of the attachment and that he uses it for its correct purpose.
- ▶ Re-assess the residual capacity of the truck and if it has been altered, attach an additional capacity plate to the truck.
- ▶ Note the attachment manufacturer's operating instructions.
- ▶ Only use attachments that do not restrict visibility in the travel direction.



If visibility in the travel direction is impaired, the operating company must determine and apply suitable measures to ensure the safe operation of the truck. A lookout may have to be used or certain hazardous areas may have to be cordoned off. The truck can also be equipped with optional visual aids such as a camera system or mirrors. Travelling with visual aids requires plenty of practice at slow speed.

Safety instructions for sideshifter and fork positioner attachments

↑ WARNING!

Restricted visibility and reduced tilt resistance can cause accidents

When using sideshifters and fork positioners, the change in centre of gravity can result in reduced lateral tilt resistance and accidents. Note that this affects visibility as well.

- Adapt the travel speeds to the visibility and load.
- ► Make sure you have sufficient visibility when reversing.

Safety instructions for clamping attachments (e.g. baling clamps, barrel clamps, grabs etc.)

Falling loads can cause accidents

This can result in malfunctions and the load can fall accidentally.

- ► Clamping attachments may only be added to trucks which have a button to enable additional hydraulic functions.
- ► Clamping attachments must only be operated on trucks will auxiliary hydraulics ZH1. ZH2 or ZH3.
- ▶When connecting the attachment make sure that the hydraulic lines of the attachment are connected to the right ports, see "Fitting additional attachments" on page 133.

Safety instructions for rotary attachments

MARNING!

A non-centred load centre of gravity can result in accidents

When using rotary devices and non-centred loads, the centre of gravity can be displaced from the centre with a high risk of accidents.

- Adapt the travel speed to the load.
- Lift the load from the centre.

Safety instructions for telescopic attachments

MARNING!

Accident risk from increased tipover hazard and reduced residual capacity

There is a greater risk of tipover with extended telescopic attachments.

- ▶ Do not exceed the maximum loads specified on the capacity plate.
- ▶ Only use the telescopic function for stacking and retrieving.
- ▶ Retract the telescopic attachment fully during transport.
- ► Adapt the travel speed to changed load centre of gravity.

Safety instructions for attachments when transporting suspended loads

MARNING!

Swinging loads and a reduced residual capacity can result in accidents.

Transporting hanging loads can reduce the stability of the truck.

- ► Adapt the travel speed to the load, less than walking pace.
- ► Secure swinging loads for example with lifting slings.
- ▶ Reduce the residual capacity and have it certified by a expert.
- ▶ If the truck is to be operated with hanging loads, proof of sufficient safety distance under local operating conditions must be obtained from a specialist assessor.

Safety instructions for using loading buckets as attachments

↑ WARNING!

Increased mast loading can cause accidents.

▶When carrying out the daily checks and operations before starting, see "Checks and operations to be performed before starting daily operation" on page 90, check in particular check the fork carriage, mast rails and mast rollers for damage.

Fork extension safety instructions

↑ WARNING!

Unsecured and oversized fork extensions can cause accidents.

- ▶ For fork extensions with an open cross sectional area, carry only loads that are resting along the entire length of the fork extension.
- ▶ Use only fork extensions with the same fork cross section and minimum fork length of the truck and which comply with the details on the fork extension data plate.
- ▶ The basic fork length must be at least 60% of the length of the fork extension.
- ▶ Lock the fork extensions onto the basic forks.
- ► When carrying out the daily checks and operations before starting, see "Checks and operations to be performed before starting daily operation" on page 90, check also the fork extension lock.
- ► Mark any fork extensions with an incomplete or faulty lock and take them out of service.
- ▶ Do not use trucks with an incomplete or faulty fork extension lock. Replace the fork extension.
- ▶ Only restore the fork extension to service when the fault has been rectified.
- ▶Use only fork extensions which are free of dirt and foreign bodies near the entry opening point. Clean the fork extensions as required.

4.14 Operating additional attachments for the SOLO-PILOT

↑ WARNING!

Incorrect symbols can cause accidents

Symbols on controls that do not depict the function of the attachments can cause accidents.

- ▶ Mark the controls with symbols that indicate their function.
- ► Specify the attachments' direction of movement in accordance with ISO 3691-1 so that they match the controls' direction of movement.


4.14.1 Solo Pilot with control of ZH1 hydraulic port

Depending on the attachments used the lever (135) is assigned the function of the attachment. Levers that are not required are void. For connections see "Fitting additional attachments" on page 133.

Procedure

 Operating the hydraulic port ZH1: Move the lever (135) in direction V or R.

The attachment's function is performed.

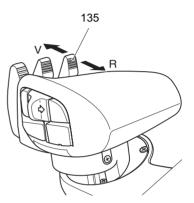

4.14.2 Solo Pilot with control of ZH1 and ZH2 hydraulic ports




Depending on the attachments used the lever / button (133, 135, 136) is assigned the function of the attachment. Unused levers have no function. For connections see "Fitting additional attachments" on page 133.

Procedure

- Operating the hydraulic port ZH1:
 Move the lever (135) in direction V or R.
- Operating the hydraulic port ZH2:
 Press the toggle switch (136) and at the same time move the lever (133) in the V or R direction.

The attachment's function is performed.

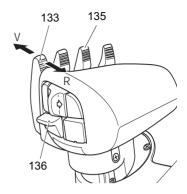

4.14.3 Solo Pilot with control of ZH1, ZH2 and ZH3 hydraulic ports




Depending on the attachments used the levers / buttons (133, 135, 136, 139) are assigned the respective functions. Unused levers have no function. For connections see "Fitting additional attachments" on page 133.

Procedure

- Operating the hydraulic port ZH1:
 Move the lever (135) in direction V or R.
- Operating the hydraulic port ZH2:
 Move the lever (139) in direction V or R.
- Operating the hydraulic port ZH3:
 Press the toggle switch (136) and at the same time move the lever (133) in the V or R direction.

The attachment's function is performed.

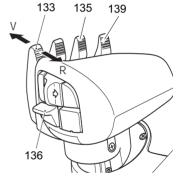

4.15 Operating additional attachments for the Multi Pilot

↑ WARNING!

Incorrect symbols can cause accidents

Symbols on controls that do not depict the function of the attachments can cause accidents.

- ▶ Mark the controls with symbols that indicate their function.
- ► Specify the attachments' direction of movement in accordance with ISO 3691-1 so that they match the controls' direction of movement.


4.15.1 Multi Pilot with control of ZH1 hydraulic port

Depending on the attachments used the (137) button is assigned the function of the attachment. Unused levers have no function. For connections see "Fitting additional attachments" on page 133.

Procedure

 Operating hydraulic port ZH1: Press the (137) button to the left or right.

The attachment performs its operation.

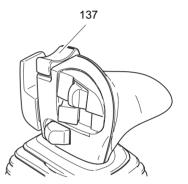

4.15.2 Multi Pilot with control of ZH1 and ZH2 hydraulic ports




Depending on the attachments used the lever / button (137,138,93) is assigned the function of the attachment. Unused levers have no function. For connections see "Fitting additional attachments" on page 133.

Procedure

- Operating hydraulic port ZH1:
 Press the (137) button to the left or right.
- Operating hydraulic port ZH2: Push or pull the (138) lever while at the same time pressing the (93) button.

The attachment performs its operation.

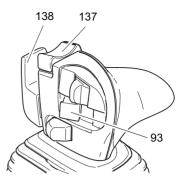

4.15.3 Multi Pilot with control of ZH1, ZH2 and ZH3 hydraulic ports




Depending on the attachments used the levers / buttons (137, 138, 93) are assigned the respective functions. Unused levers have no function. For connections see "Fitting additional attachments" on page 133.

Procedure

- Operating hydraulic port ZH1: Press the (137) button to the left or right.
- Operating hydraulic port ZH2: Push or pull the lever (138).
- Operating hydraulic port ZH3:
 Push or pull the (138) lever while at the same time pressing the (93) button.

The attachment performs its operation.

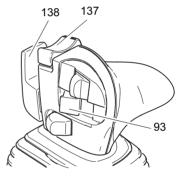

4.16 Fitting additional attachments

Incorrectly connected attachments can cause accidents.

Attachments with incorrectly connected hydraulic attachments can result in accidents.

- ► Attachments must only be assembled and commissioned by trained, specialist personnel.
- ▶ Observe the manufacturer's operating instructions.
- ▶ Before starting, check the fasteners are positioned correctly and securely and make sure they are complete.
- ▶ Before starting, make sure the attachment is working correctly.

Connecting attachments hydraulically

Requirements

- Non-pressurised hydraulic hoses.
- The exchange ports on the truck are marked ZH1, ZH2 and ZH3.
- Attachment directions of movement defined to match the controls' direction of movement.

Procedure


- · Non-pressurised hydraulic hoses
 - · Switch off the truck and wait a few minutes.
- · Attach the plug connector and engage it in position.
- · Mark the controls with symbols that indicate their function.

The attachment is now hydraulically connected.

M WARNING!

Hydraulic ports for clamping attachments

- ► Clamping attachments may only be added to trucks which have a button to enable additional hydraulic functions.
- ►On trucks with auxiliary hydraulics ZH2 the clamping function should only be attached to the coupling pair marked ZH2.
- ►On trucks with auxiliary hydraulics ZH3 the clamping function should only be attached to the coupling pair marked ZH3.

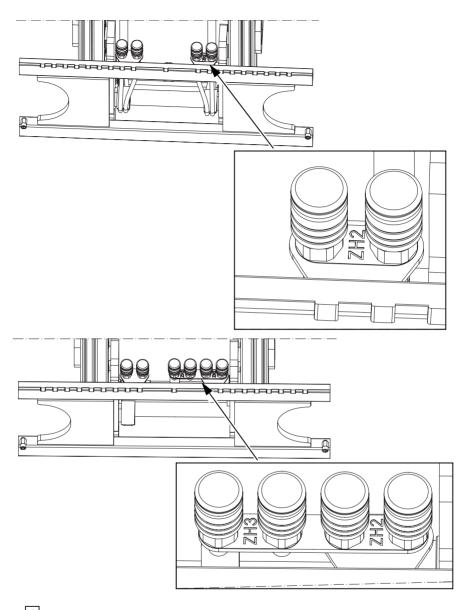

Spilled hydraulic oil must be set using a suitable agent and disposed of in accordance with environmental regulations.

If hydraulic oil comes into contact with the skin, wash it off immediately with soap and water. If it comes into contact with the eyes rinse them immediately with flowing water and call for a doctor.

5 Towing trailers

△ DANGER!

Inappropriate speeds and excessive trailer loads can be dangerous

If you do not adapt your speed and / or use an excessive trailer load, the truck can pull apart when cornering and braking.

- ▶ The truck should only be used occasionally to tow trailers.
- ▶The overall weight of the trailer should not exceed the capacity indicated on the capacity plate, see "Identification points and data plates" on page 34. If a load is also transported on the load handler, the trailer load must be reduced by the same amount.
- ▶ Do not exceed the maximum speed of 5 km/h km/h.
- ► A truck must not be continually operated with trailers.
- ▶ Do not use supporting loads.
- ▶ Towing must only be performed on level, secure travel routes.
- ► The owner must test trailer operation with the permissible tow load by means of a trial run under the applicable operating conditions on site.

Attaching the trailer

Λ

CAUTION!

Trapping hazard

There is a trapping risk when you attach a trailer.

- ▶ Follow the instructions of the coupling manufacturer if using special trailer couplings.
- ▶ Secure the trailer to prevent it from rolling away before coupling it.
- ▶ Do not get caught between the truck and the tiller when coupling the trailer.
- ▶ The tiller must be horizontal, tilted down by no more than 10° and never facing up.

Attaching the trailer


Requirements

- Truck and trailer are on a level surface.
- Trailer prevented from rolling away.

Procedure

- Push the tow pin (140) down and turn it 90°.
- Pull the tow pin up and insert the tiller of the trailer into the opening.
- Insert the tow pin, push it down, turn it 90 degrees and engage it.

The trailer is now attached to the truck.

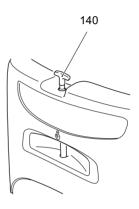

6 Optional equipment

6.1 CanCode keypad

CanCode keypad

The keypad consists of 10 digit keys, a Set key and a \bigcirc key.

The O key indicates the follow operating statuses via a red / green LED:

- Code lock function (starting up the truck).
- Setting and changing parameters.

6.1.1 Code lock

When the correct code is entered, the truck is ready for use. You can allocate an individual code to each truck, operator or group of operators. When originally supplied from the factory, the code is indicated on a sticker. Change the master and operator codes when using the truck for the first time.

When the truck is originally supplied, the operator code for the driver's display and CANCODE (\bigcirc) is 2-5-8-0.


Commissioning

Procedure

· Enter the code.

When you enter the correct operator code the LED (145) turns green. If the LED (145) flashes red this means the wrong code has been entered. Try again.

The truck is switched on

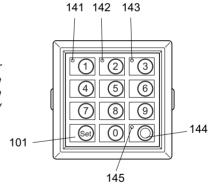

The Set key (101) has no function in operating mode.

Switching the truck off

Procedure

· Press the O key.

Truck is switched off.

The truck can switch off automatically after a set time. To do this the relevant code lock parameters must be entered, see "Parameter Settings" on page 138. This additional safety mechanism in no way discharges the owner from his obligation to prevent the truck from being used by unauthorized parties before leaving the truck. The owner must therefore apply the power-down key each time the truck is left.

6.1.2 Parameter Settings

To change the access code you must enter the master code.

The master code factory setting is 7-2-9-5. Change the master code the first time you use the truck.

Changing the truck settings

Procedure

- Press the O key (144).
- · Enter the master code.
- · Enter the three-digit parameter number.
- Confirm with the SET key (101).
- Enter the setting as per parameter list.
 If the entry is incorrect, the LED (145) of the O key (144) turns red.
 - · Enter the parameter number again.
 - · Enter the setting again or change it.
- · Confirm with the SET key (101).
- Repeat the procedure for other parameters.
- Then press the O key (144).

The settings are now saved.

Parameter list

000	Change master code: The length (4-6 digits) of	0000 - 9999	7295	. ==
	the master code also determines the length of the operator code (4-6 digits). Provided the operator codes are programmed, only new codes of the same length can be entered. If you wish to change the code length, you must first delete all the operator codes.	or 00000 - 99999 or 000000 - 999999	7250	 (LED 141 flashes) Enter current code confirm (Set 101) (LED 142 flashes) Enter new code confirm (Set 101) (LED 143 flashes) Repeat new code confirm (Set 101)
001	Add code (max. 250)	0000 - 9999 or 00000 - 99999 or 000000 - 999999	2580	- (LED 142 flashes) Code entry - confirm (Set 101) - (LED 143 flashes) repeat code entry - confirm (Set 101)
002	Change code	0000 - 9999 or 00000 - 99999 or 000000 - 999999		- (LED 141 flashes) Enter current code - confirm (Set 101) - (LED 142 flashes) Enter new code - confirm (Set 101) - (LED 143 flashes) repeat code entry - confirm (Set 101)
003	Delete code 141-143 are located in k	0000 - 9999 or 00000 - 99999 or 000000 - 999999		- (LED 142 flashes) Enter a new code - confirm (Set 101) - (LED 143 flashes) repeat code entry - confirm (Set 101)

No.	Function	Setting range	Standard setting	Procedure				
004	Delete code log (deletes all codes)	3265		3265 = deleteother entries = do not delete				
010	Automatic timeout	00-31	00	 00 = No timeout 01 - 30 = Timeout in minutes 31 = Timeout after 10 seconds 				
LEDs	LEDs 141-143 are located in keypads 1-3.							

Keypad event messages

The LED (145) flashes red to indicate the following events:

- New master code is already in use.
- New code is already the master code
- Code to be changed does not exist
- Attempt to change the code to one that already exists.
- Attempt to delete a code that does not exist
- Code memory full.

6.2 Assistance systems

The Access, Drive and Lift Control systems help the driver operate the truck with regard to safety regulations, see "Safety regulations for truck operation" on page 100 of the present operating instructions.

Travel conduct

The operator must adapt the travel speed to local conditions. The truck must be driven at slow speed when negotiating bends or narrow passageways, when passing through swing doors and at blind spots. The operator must always observe an adequate braking distance between the forklift truck and the vehicle in front and must be in control of the truck at all times. Abrupt stopping (except in emergencies), rapid U turns and overtaking at dangerous or blind spots are not permitted. Do not lean out or reach beyond the working and operating area.

6.2.1 Access Control

The truck is only released for operation if:

- 1)The operator is seated.
- 2)The truck is switched on via the key switch (ISM \bigcirc / CanCode \bigcirc).
- 3)He is wearing the seat belt.
- If the driver vacates the seat for a short while, the truck can be operated again when he returns (seat occupied) and puts the seat belt back on again, without having to apply the key switch again.
- If travel is not enabled, the seat switch warning indicator (97) lights up. Items 1 to 3 must be performed again in the order listed.

6.2.2 Drive Control

This option restricts the travel speed of the truck irrespective of the steer angle. From a factory-set lift height the maximum travel speed is reduced to walking pace (approx. 3 km/h) and the slow travel indicator is activated. When the forks fall below this height, the truck accelerates at reduced levels to the speed prescribed by the accelerator pedal to prevent sudden acceleration when changing from slow travel to normal travel. Normal acceleration is only activated again when the speed prescribed by the accelerator pedal has been reached.



In addition to the daily checks before starting, see "Checks and operations to be performed before starting daily operation" on page 90 the driver must carry out the following checks:

- Lift the empty load handler beyond the reference lift height and check if the slow travel display lights up.
- Steering when the truck is stationary: check if the steering wheel display is working.

6.2.3 Lift Control

This option includes Drive Control and also monitors and controls the mast functions:

Tilt speed reduction as a function of the lift height (from approx. 1,5 m lift height).

 If the load handler is lowered below the limit height, the tilt speed increases up to the level specified by the control lever.

Optional:

- Tilt angle display.
- Pressing the sideshift centre position switch (see "Side compartment control panel switch (○)" on page 86) moves the sideshifter automatically to the centre position.

In addition to the daily checks before starting, the driver must carry out the following checks:

Procedure

- Lift the empty load handler beyond the reference lift height and check if the slow travel display lights up and the tilt speed is clearly reduced.
- · Steering at idle: check if the steering wheel display is working.
- · Check the tilt angle display by tilting forward and back.

6.3 Steel cab

For trucks fitted with a steel cabin, both doors can be closed.

An open door can cause accidents (146)

- ▶ Do not travel with an open door (146). When opening the door make sure there is nobody in the door's swing range.
- ► Always close the door tightly and make sure it is locked.
- ► Closing the door does not release the driver from his responsibility to wear a seat belt, see "Seat Belt" on page 98.

↑ CAUTION!

Cabin doors can pose a trapping hazard


You can trap hands or feet when the cab doors are opened and closed.

► Make sure there is nothing between the cab chassis / leg well and the cab doors when the doors are opened and closed.

Opening and closing the door

Procedure

- To unlock the cabin door turn the key anticlockwise.
- To lock the cabin door turn the key clockwise.
- To open the cabin door, unlock the door and pull out the handle (147).

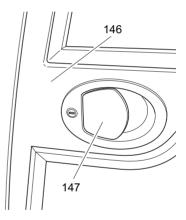

Sliding windows 6.4

↑ CAUTION!


An unlocked sliding window can cause accidents

▶The sliding windows must be locked at all times.

Opening and closing the windows

Procedure

- Push the lock (149) up.
- · Move the window forward or back.
- Insert the lock in the stop (148).

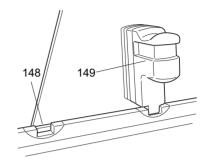


6.5 Automatic / mechanical folding gate

↑ CAUTION!

A faulty folding gate can cause accidents

- ▶ Never use the truck with a nonfunctional folding gate. Have the folding gate checked by authorised specialist personnel after an accident. Do not modify the folding gate.
- ► Closing the folding gate does not release the driver from his responsibility to wear a seat belt, see "Seat Belt" on page 98.

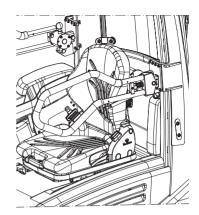

Hazardous situations

If the truck is about to tip over, do not loosen the seat belt. The operator must not jump off the truck. The operator must lean his upper body over the steering wheel and hold on with both hands. Tilt your body in the opposite direction of fall.

Mechanical folding gate operation

Procedure

- To open, push the left gate in and at the same time lift it up.
- When the gate is released, it automatically moves forward and locks in position.

Automatic folding gate operation

Procedure


- To open, push the left gate in and at the same time lift it up. This prevents the truck from travelling.
- Travel is activated again when the system has been closed.

6.6 Panel door

↑ CAUTION!

An open door can cause accidents (146)

- ► Do not travel with an open door (146). When opening the door make sure there is nobody in the door's swing range.
- ► Always close the door tightly and make sure it is locked.
- ► Closing the door does not release the driver from his responsibility to wear a seat belt, see "Seat Belt" on page 98.

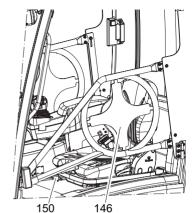

Requirements

 On trucks with a door monitoring sensor, travel is only enabled when the panel door is closed (○).

Procedure

- Pull the handle (150) towards the operator position, the door swings open.
- Pull the door (146) towards the operator; the door closes.

6.7 Operator position extension

⚠ DANGER!

Altering the tilt resistance can be dangerous

The lateral tilt resistance reduces with a higher truck centre of gravity.

The height above the overhead guard (h_6) increases by 300 mm, see "Dimensions" on page 22.

► Adapt the travel speed of the truck, in particular when cornering.

For entry and exit see "Entry and exit" on page 93.

6.8 Adjusting the driver's seat

Adjusting the backrest extension

↑ CAUTION!

Accident risk when adjusting the backrest during travel

▶ Do not adjust the backrest extension while travelling.

Procedure

- The backrest extension height can be adjusted by changing the detent.
- Pull the backrest up and lock it in place to extend the backrest.
- Push the backrest down and lock it in place to shorten the backrest.

Adjusting the swivel seat


Procedure

- Pull the locking lever (151) back while simultaneously turning the seat to the required position.
- · Engage the lock.


The swivel seat is not adjusted and locked in position.

→

Operate the truck only when the swivel seat is locked in position.

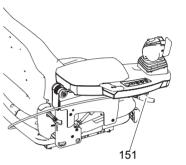

6.9 Heating

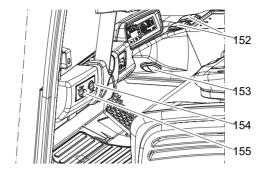

Item	Designation
152	Body / window nozzles
153	Foot compartment jet
154	Temperature controller
155	Fan settings

Heating operation

Procedure

- · Press the switch (155) to switch on the fan.
- Set the nozzles (152,153) to the required position.
- Turn the temperature controller (154) to the right to increase the cab temperature.
- Turn the temperature controller (154) to the left to decrease the cab temperature.



Regular servicing is required to ensure the heating can work at a consistently high level, see "Maintenance checklist EFG 213-220" on page 197 or see "Maintenance checklist EFG 316-320" on page 208.

Replacing the air conditioning filter


Requirements

- Filter contaminated

Procedure

- · Loosen the screws (156).
- · Remove the panel (157).
- · Replace the filter.
- · Attach the panel (157).
- Tighten the screws (156).

The filter cassette is now replaced.

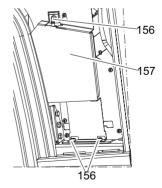

6.10 Removable load backrest

↑ CAUTION!


Trapping hazard and heavy load backrest weight

- ► Wear safety gloves and safety shoes when carrying out this operation.
- Two people are required to remove and attach the load backrest.

Load backrest disassembly

Procedure

- Loosen the screws (158).
- · Remove the load backrest from the fork carriage and put it down securely.
- · Fit the fork retaining screws.

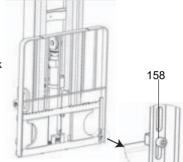

Load backrest assembly

Procedure

- Attach the load backrest to the top rail of the fork carriage.
- Fit the bolts and tighten them with a torque wrench.
- **|→**| Torque = 85 Nm

6.11 Lift cutout override

 \rightarrow


A lift cutout device can be factory fitted when working in areas of restricted height. This interrupts lifting.

To continue lifting:

Procedure

- · Press the lift cutout override button (see "Side compartment control panel switch (○)" on page 86).
- Pull the control lever (133).

Lift cutout is deactivated until the button is pressed again or the fork carriage is lowered below the height limit setting.

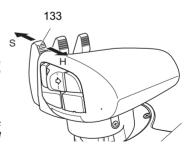


6.12 Fire extinguisher

Procedure

• Open the fasteners (159)



• Pull the fire extinguish out of its bracket To operate, refer to the illustrations on the fire extinguisher

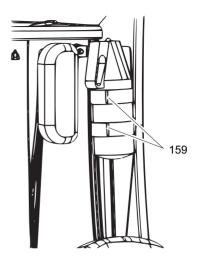


6.13 Tilt angle display

NOTE

The current tilt angle is shown in an additional display that is attached on the right of the dashboard.

- The green LED (160) indicates the vertical position to the ground.

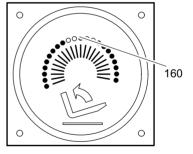

6.14 Rockinger coupling with hand lever or remote control




Refer to the instructions for towing trailers, see "Towing trailers" on page 135.

↑ CAUTION!

Incorrectly coupled trailers can cause accidents

- ► Make sure the coupling is engaged securely before starting the truck.
- ► The contro pin (163) must be flush with the control sleeve (164).

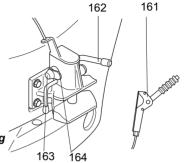

Rockinger coupling operation (attaching trailers)

Procedure

- · Prevent the trailer from rolling away.
- · Adjusting the trailer pull rod to the height of the coupling.
- Pull the hand lever (162) / remote control (161) (\bigcirc) up.
 - The remote control (161) (\bigcirc) is located in the overhead guard, depending on the truck model.
 - · Slowly reverse the truck until the coupling engages.
 - Push the hand lever (162) / remote control (161) (○) down.

Rockinger coupling operation (disconnecting trailers)

Procedure

- · Prevent the trailer from rolling away.
- Pull the hand lever (162) / remote control (161) (O) up.
- · Drive the truck forward.
- Push the hand lever (162) / remote control (161) (○) down.


6.15 Camera system

⚠ CAUTION!

Accident risk from hidden work areas

- ▶ The camera system acts as an aid to assist safe operation.
- ▶ Practice travelling and working with the camera system.
- ▶ Align the camera so that the hidden work area can be seen.
- **→**

When using the camera to reverse, the monitor automatically switches on when you engage reverse gear.

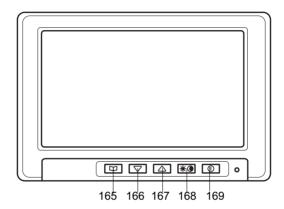

Using the camera system

- Press the button (169) on the monitor to switch the camera system on or off.
- Press the button (168) to lighten or darken the screen (day / night settings).
- Press the button (165) to open the menu.
- →

Pressing the button several times changes the menu item (contrast, brightness, colour saturation, language, video, light reflection) or quits the menu.

Adjusting the menu items

- Press the button (167) to go one step forward.
- Press the button (166) to go one step back.
- Clean a dirty screen or vent slots with a soft cloth or brush.

6.16 Control layout "N"

MARNING!

Persons standing under or on a raised load handler are at risk of accidents

Do not allow anyone to stand under or on a raised load.

- ▶ Do not stand on the load handler.
- ▶ Do not lift any persons on the load handler.
- ▶ Instruct other people to move out of the hazardous area of the truck.
- ▶ Do not stand underneath a raised and unsecured load handler.



With control layout "N", the lift and tilt functions are swapped compared with the standard operation. The Multipilot must only be operated from the driver's seat. The operator must be trained to handle the lift mechanism and the attachments.

NOTE

► The lift/lower and tilt speeds are determined by the inclination of the Multipilot. Do not deposit the load handler suddenly to avoid damaging the load and the racking.

Lifting

Procedure

- Push the Multipilot to the right (direction H) to raise the load.
- Push the Multipilot to the left (direction S) to lower the load.

Tilting

Λ

CAUTION!

Trapping hazard from inclined mast


► When tilting the mast back, keep all parts of your body from between the mast and the front wall.

Procedure

- Push the Multipilot forward (direction V) to tilt the load forward.
- Pull the Multipilot back (direction R) to tilt the load back.



When the limit position for the operation has been reached (there will be a noise from the pressure relief valve) release the lever. The lever will revert automatically to neutral.

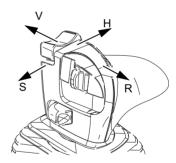

7 Troubleshooting

7.1 Troubleshooting

This chapter enables the operator to localize and rectify basic faults or the results of incorrect operation himself. When trying to locate a fault, proceed in the order shown in the remedy table.



If, after carrying out the following remedial action, the truck cannot be restored to operation or if a fault in the electronics system is displayed with a corresponding error code, contact the manufacturer's service department.

Troubleshooting must only be performed by the manufacturer's customer service department. The manufacturer has a service department specially trained for these tasks.

In order for customer services to react quickly and specifically to the fault, the following information is essential:

- Truck serial number
- Error number on the display unit (if applicable)
- Error description
- Current location of truck.

Info messages

Display	Meaning			
1901	Accelerator pedal pressed during power-up			
1904	No travel direction selected when accelerator pedal applied			
1908	Seat switch not closed. Truck operational, but driver's seat not occupied.			
1909	Accelerator pressed while parking brake applied			
5915	Truck not operational, battery door open (○)			
1917	Accelerator pedal and brake pedal pressed simultaneously			
1918	Truck operational but cabin door open (○)			
2951	Hydraulic function applied during power-up			
5990	Electrolyte level too low (O)			
5409	Battery temperature too high (○)			
5393	Battery cell faulty (○)			

Fault	Possible Cause	Action
Truck does not start	 Battery connector not plugged in. Emergency Disconnect switch pressed. Key switch set to O. Battery charge too low. Battery door open / onboard charger active. Faulty fuse. 	 Check battery connector and plug in if necessary. Unlock the Emergency Disconnect button. Set the key switch to "I". Check battery charge, charge battery if necessary. Finish charge / close battery door. Check the fuses.
Load cannot be lifted	 Truck not operational. Hydraulic oil level too low. Battery discharge monitor has switched off. Faulty fuse. Load is too heavy. 	 Carry out all measures listed under "Truck does not start". Check hydraulic oil level. Charge the battery Check the fuses (○). Note the maximum capacity, see "Data plate" on page 36.
Fault displays	 Truck not operational. 	Press the EMERGENCY DISCONNECT isolator or turn key switch to 0, after approx. 3 seconds try to perform the desired operation again

7.2 Operating the truck without its own drive system


7.2.1 Towing the truck

↑ WARNING!

Accident risk

Other people can be injured if the truck is towed incorrectly.

- ▶ Only use vehicles to tow the truck which have sufficient tow and brake forces for the trailer load without its own braking system.
- ► Always use a pull rod to tow.
- ► Always tow the truck at walking pace.
- ▶ Do not park the truck with the parking brake released.
- ▶ One person must be seated in the recovery truck to steer it and one person must be seated on the towed truck.

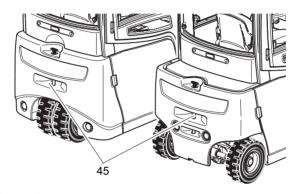

Towing the truck

Requirements

- Park the truck securely.
- Disconnect the battery.

Procedure

- Connect the pull rod to the trailer coupling (45) of the towing truck and attach it to the truck to be towed.
- · Release the parking brake.
- · Tow the truck to its destination.
- · Apply the parking brake.
- · Undo the tow connection.

The truck has now reached its destination.

7.2.2 Release the parking brake.

Λ

WARNING!

Uncontrolled truck movement


When the brakes are released the truck must be parked securely on a level surface, since the brakes are no longer effective.

- ▶ Do not release the parking brake on slopes or inclines.
- ▶ Apply the parking brake again when you reach your destination.
- ▶ Do not park the truck with the parking brake released.

Release the parking brake.

Requirements

- Turn the Emergency Disconnect switch and key switch off.
- Disconnect the battery.
- Prevent the truck from rolling away.
- Remove the floor plate by undoing the floor plate mounting screws.

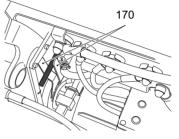

Tools and Material Required

 Auxiliary tool (172) removed from the document compartment in the backrest of the truck.

Procedure

- Place the auxiliary tool (172) on the lever (170) with the recesses (171) (chamfer (173) facing the operator).
- Pull the lever (170) forward (forks direction) or backward (towards the operator position) and lock it in position. The lever should engage. The drive wheels are no longer blocked / braked by the brake.
- Tow the truck to its destination using the pull rod.


The truck has now reached its destination.

Applying the parking brake

Procedure

- Place the auxiliary tool (172) on the lever (170) with the recesses (171) (chamfer (173) facing the operator).
- Restore the lever (172) to the centre "travel position". The drive wheels are no longer blocked / braked by the brake
- · Assemble the floorboard.


Park the truck securely.

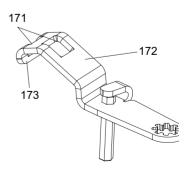

7.2.3 Steering the truck when the electric/hydraulic steering has failed



The truck cannot be steered if the steering hydraulic system or the truck electronics are damaged.

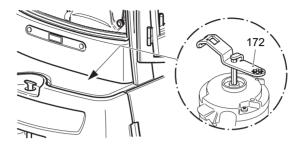

Steering the truck when the electric/hydraulic steering has failed

Requirements

- Turn the Emergency Disconnect switch and key switch off.
- Disconnect the battery.
- Prevent the truck from rolling away.
- Release the parking brake.

Tools and Material Required

 Auxiliary tool (172) removed from the document compartment in the backrest of the truck.

Procedure

- Undo the sensor connector above the motor shaft (pull the red unlocking lever) and place the auxiliary tool (172) on the Allen screw.
- Turn the drive to the required steering position.
- Tow the truck to its destination using the pull rod, see "Towing the truck" on page 156.

The truck has now reached its destination.

7.3 **Emergency lowering**




The mast can be lowered manually if a fault occurs in the hydraulic system.

MARNING!

Lowering the mast can result in injuries

- Instruct other people to move out of the hazardous area of the truck during emergency lowering.
- Never stand underneath a raised load handler.
- ▶ Only operate the emergency lowering valve when standing next to the truck.
- ▶ Emergency lowering of the mast cannot be applied when the load handler is in the
- ▶ Report any defects immediately to your supervisor.
- ▶ Tag out and decommission a faulty lift truck.
- ▶Only return the truck to service when you have identified and rectified the fault.

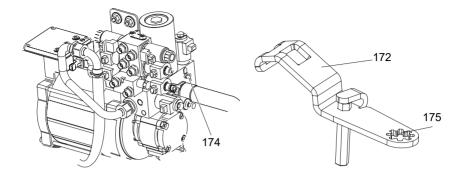

Mast emergency lowering

Requirements

- Load handler is not in the rack.
- Turn the Emergency Disconnect switch and key switch off.
- Disconnect the battery.

Tools and Material Required

 Auxiliary tool (172) removed from the document compartment in the backrest of the truck.

Procedure

- Place the auxiliary tool (172) on the emergency lowering valve (174) with the recess (175).
- Slowly turn the emergency lowering valve (174) in the forks direction; the mast and load handler will lower.
- Turn the emergency lowering valve (174) anti-clockwise as far as the stop; the lowering process stops.

The mast is now lowered.



Only return the truck to service when you have identified and rectified the fault.

F Industrial Truck Maintenance

1 Operational Safety and Environmental Protection

The checks and servicing operations contained in this chapter must be performed in accordance with the maintenance checklist service intervals.

MARNING!

Risk of accidents and component damage

Any modification to the truck, in particular the safety mechanisms, is prohibited.

Exception: Owners should only make changes or have changes made to powered industrial trucks if the truck manufacturer is no longer operating in the field and there is no successor to the business: owners must however:

- Ensure that the changes to be made are planned, tested and performed by a specialist engineer in industrial trucks taking safety into account.
- keep permanent graphic records of the plans, tests and completion of the changes
- carry out and have authorised the respective changes to the capacity data plates, decals and stickers as well as the operator and service manuals.
- attach permanent and clearly visible marking to the truck indicating the types of changes made, the date of the changes and the name and address of the organisation responsible for the work.

NOTE

Only original spare parts are subject to the manufacturer's quality control. To ensure safe and reliable operation, use only the manufacturer's spare parts.



On completion of inspection and service work, carry out the operations listed in the "Recommissioning the truck after cleaning or maintenance work" section (see "Restoring the truck to service after maintenance and repairs" on page 190).

2 Maintenance Safety Regulations

Maintenance and repair personnel



The manufacturer has a service department specially trained for these tasks. A maintenance contract with the manufacturer will ensure trouble-free operation.

Truck maintenance and repair work must only be carried out by specially trained personnel. The following operations are assigned to the following target groups.

Customer Services

Customer Services are specially trained in the use of the truck and are able to carry out maintenance and repairs independently. Customer Services are aware of the relevant standards, guidelines and safety regulations as well as potential risks.

Operating company

The maintenance personal of the operating company has the technical expertise and experience to perform the activities in the maintenance check list for the operating company. The maintenance and repair work to be performed by the operating company are also written down, see "Industrial Truck Maintenance" on page 161.

2.1 Consumables and used parts

↑ CAUTION!

Consumables and used parts are an environmental hazard

Used parts and consumables must be disposed of in accordance with the applicable environmental protection regulations. To change the oil contact the manufacturer's customer service department, who have been specially trained for this task.

▶ Note the safety regulations when handling these materials.

2.2 Wheels



WARNING!

The use of tyres that do not match the manufacturer's specifications can result in accidents.

The quality of tyres affects the stability and performance of the truck.

Uneven wear affects the truck's stability and increases the stopping distance.

- ▶When replacing tyres make sure the truck is not skewed.
- ▶ Always replace tyres in pairs, i.e. left and right at the same time.



When replacing rims and tyres fitted at the factory, only use the manufacturer's original spare parts. Otherwise the manufacturer's specifications cannot be ensured.

2.3 Lift Chains

Non-lubricated and incorrectly cleaned lift chains can cause accidents

Lift chains are safety-critical parts. They must not contain any serious contamination. Lift chains and pivot pins must always be clean and well lubricated.

- ► Lift chains should only be cleaned with paraffin derivatives e.g. petroleum or diesel fuels.
- ▶ Do not clean lift chains with high pressure jets or chemical cleaning agents.
- Immediately after cleaning, dry the lift chain with compressed air and apply a chain spray.
- ► Always lubricate a chain when it is discharged.
- ▶ Lubricate a lift chain with particular care around the pulleys.

MARNING!

Diesel fuel can be hazardous

- ▶ Diesel fuel can cause irritation if it comes into contact with the skin. Rinse any affected areas thoroughly.
- ▶ If it comes into contact with the eyes rinse them immediately with flowing water and call for a doctor.
- ► Wear safety gloves when handling diesel fuels.

2.4 Hydraulic system

↑ WARNING!

Brittle hydraulic hose lines can cause accidents

The hoses must be replaced every six years. The manufacturer's customer service department is specially trained to carry out these operations.

▶ Observe the date of manufacturer on the hydraulic hoses.

M WARNING!

Leaky hydraulic systems can result in accidents

Hydraulic oil can escape from leaky and faulty hydraulic systems.

- ▶ Report any defects immediately to your supervisor.
- ► Mark defective truck and take out of service.
- ▶ Do not return the industrial truck to service until you have identified and rectified the fault.
- ▶ Remove any spilled hydraulic immediately with an appropriate bonding agent.
- ▶The bonding agent / consumable mixture must be disposed of in accordance with regulations.

MARNING!

Holes or hairline cracks in the hydraulic hoses can cause injury and infection

Pressurised hydraulic oil permeating through fine holes or hairline cracks in the hydraulic hoses can penetrate the skin, causing severe injury.

- ► Call for a doctor immediately if you are injured.
- ▶ Do not touch pressurised hydraulic hoses.
- ▶ Report any defects immediately to your supervisor.
- ► Mark defective truck and take out of service.
- ► Do not return the industrial truck to service until you have identified and rectified the fault.
- ▶ Remove any spilled hydraulic immediately with an appropriate bonding agent.
- ▶The bonding agent / consumable mixture must be disposed of in accordance with regulations.

3 Lubricants and Lubrication Schedule

3.1 Handling consumables safely

Handling consumables

Consumables must always be handled correctly. Follow the manufacturer's instructions

↑ WARNING!

Improper handling is hazardous to health, life and the environment

Consumables can be flammable.

- ▶ Keep consumables away from hot components and naked flames.
- ► Always keep consumables in prescribed containers.
- ► Always fill consumables in clean containers.
- ▶ Do not mix up different grades of consumable. The only exception to this is when mixing is expressly stipulated in the operating instructions.

↑ CAUTION!

Spilled consumables can cause slipping and endanger the environment

Risk of slipping from spilled consumables. The risk is greater when combined with water.

- ▶ Do not spill consumables.
- ▶ Spilled consumables must be removed immediately with an appropriate bonding agent.
- ▶The bonding agent / consumable mixture must be disposed of in accordance with regulations.

WARNING!

Improper handling of oils can be hazardous

Oils (chain spray / hydraulic oil) are flammable and poisonous.

- ▶ Dispose of used oils in accordance with regulations. Store used oil safely until it can be disposed of in accordance with regulations.
- ▶ Do not spill oil.
- ▶ Spilled oils must be removed immediately with an appropriate bonding agent.
- The mixture consisting of the bonding agent and oil must be disposed of in accordance with regulations.
- ▶ Observe national regulations when handling oils.
- ► Wear safety gloves when handling oils.
- ▶ Prevent oil from coming into contact with hot motor parts.
- ▶ Do not smoke when handling oil.
- ▶ Avoid contact and digestion. If you swallow oil do not induce vomiting but seek medical assistance immediately.
- ► Seek fresh air after breathing in oil fumes or vapours.
- ▶ If oil has come into contact with your skin, rinse your skin with water.
- ▶ If oil has come into contact with your eyes, rinse them with water and seek medical assistance immediately.
- ▶ Replace oil-soaked clothing and shoes immediately.


↑ CAUTION!


Consumables and used parts are an environmental hazard

Used parts and consumables must be disposed of in accordance with the applicable environmental protection regulations. To change the oil contact the manufacturer's customer service department, who have been specially trained for this task.

Note the safety regulations when handling these materials.

3.2 Lubrication Schedule

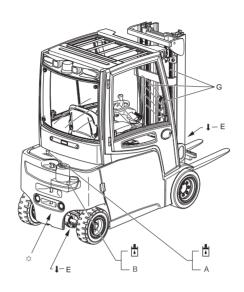

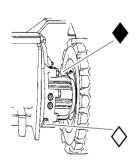

▼	Contact surfaces	ξ3	Hydraulic oil drain plug
Ţ	Grease nipple	•	Transmission oil filler neck
•	Hydraulic oil filler neck	♦	Transmission oil drain plug

3.3 Consumables

Code	Order no.	Package quantity	Capacity	Description	Used for
A	51 132 827*	51		Jungheinrich hydraulic oil	Hydraulic system
	50 426 072	201	440AH= 18L	HLPD 32 1)	
	50 429 647	201	550AH= 20.5L	HLPD 22 2)	
	50 124 051	51	660AH= 24L	HV 68 3)	
	51 082 888	51		Plantosyn 46 HVI (BIO hydraulic oil)	
В	51 132 827*	51		Jungheinrich hydraulic oil	Steering (EFG 316-
	50 426 072	201		HLPD 32 1)	
	50 429 647	201	2.5	HLPD 22 2)	
	50 124 051	51		HV 68 3)	320)
	51 082 888	51		Plantosyn 46 HVI (BIO hydraulic oil)	
Е	50 157 382	1kg		Lubrication grease K-L 3N 3)	Steer axle (EFG 316- 320)
G	29 201 280	400ml		Chain spray	Chains
N	50 468 784	11	2 x 0.35 l	Transmission oil, Shell Spirax MA 80 W	Gear unit

¹⁾ Valid for temperatures -5/+30 °C 2) Valid for temperatures -20/-5 °C 3) Valid for temperatures +30/+50 °C



*The trucks are factory-equipped with a special manufacturer's hydraulic oil (the Jungheinrich hydraulic oil with a blue colouration) or the Plantosyn 46 HVI bio hydraulic oil. This special hydraulic oil can only be obtained from the manufacturer's customer service department. The use of named alternative hydraulic oils is not prohibited but may lead to a decline in functionality. This hydraulic oil may be mixed with one of the named alternative hydraulic oils.

Λ

WARNING!

Industrial trucks are factory-equipped with "HLP D22/32" hydraulic oil or "+ 2% Plantosyn 46 HVI" BIO hydraulic oil.

You cannot change from "Plantosyn 46 HVI" BIO hydraulic oil to the manufacturer's hydraulic oil. The same applies to changing from the manufacturer's hydraulic oil to "Plantosyn 46 HVI" bio hydraulic oil.

Do not mix the Plantosyn 46 HVI bio hydraulic oil with the manufacturer's hydraulic oil or one of the named alternative hydraulic oils.

Grease guidelines

Code	Saponification	Dew point °C	Worked penetration at 25 °C	NLG1 class	Application temperature °C
Е	Lithium	185	265 - 295	2	-35/+120

4 Maintenance and repairs

4.1 Preparing the truck for maintenance and repairs

All necessary safety measures must be taken to avoid accidents when carrying out maintenance and repairs. The following preparations must be made:

Procedure

- Park the truck securely, see "Parking the truck securely" on page 105.
- · Fully lower the load handler.
- Disconnect the battery to prevent the truck from being switched on accidentally.

4.2 Lifting and jacking up the truck safely

MARNING!

A truck tipover can cause accidents

In order to raise the truck, use only suitable lifting gear at the points specially provided for this purpose.

- ▶ Note the weight of the truck on the data plate.
- ► Always use a jack with a minimum capacity of 2500 kg kg.
- ▶ Raise the unladen truck on a level surface.
- ► When raising the truck, take appropriate measures to prevent it from slipping or tipping over (e.g. wedges, wooden blocks).

Raising and jacking up the truck securely

Requirements

 Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).

Tools and Material Required

- Jack
- Hard wooden blocks

Procedure

- __ Place the jack against the contact point.
 - Jack contact point, see "Identification points and data plates" on page 34.
 - · Raise the truck.
 - · Support the truck with hard wooden blocks.
 - · Remove the jack.

The truck is now securely raised and jacked up.

4.3 Opening the rear panel

Opening the panel


Requirements

 Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).

Procedure

- Undo the two quick release fasteners (176).
 - · Pull the rear panel back and remove it.

The rear panel is now open. The fuses and other electrical components can now be reached.

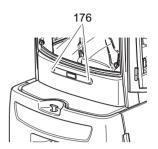

Closing the panel

Procedure

- · Place the rear panel in position.
 - · Secure two quick release fasteners (176).

The rear panel is now closed.

4.4 Checking the wheel attachments.

MARNING!

Using different tyres can cause accidents

The quality of tyres affects the stability and performance of the truck.

- ▶ The diameter of the wheels must differ by no more than 15 mm.
- ▶ Always replace tyres in pairs. After replacing the tyres check the wheel nuts are secure after 10 service hours.
- ▶ Always use tyres of the same make, model and profile.

Checking the wheel attachment

Requirements

 Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).

Tools and Material Required

- Torque wrench

Procedure

 Torque the wheel nuts (177) crosswise with a torque wrench, for torques see "Tyre type" on page 30.

The wheel attachment is now checked.

When using pneumatic tyres check the air pressure, for the air pressure see "Tyre type" on page 30



4.5 Replacing wheels

MARNING!

A truck tipover can cause accidents

In order to raise the truck, use only suitable lifting gear at the points specially provided for this purpose.

- ▶ Note the weight of the truck on the data plate.
- ► Always use a jack with a minimum capacity of 2500 kg kg.
- ▶ Raise the unladen truck on a level surface.
- ► When raising the truck, take appropriate measures to prevent it from slipping or tipping over (e.g. wedges, wooden blocks).

MARNING!

Falling wheels can cause injury

- ▶ The wheels of the truck are very heavy. A single wheel can weigh up to 150 kg.
- ▶ Always replace wheels with a suitable tool and protective equipment.

Dismantle the wheels

Requirements

 Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).


Tools and Material Required

- Jack
- Hard wooden blocks
- Mounting lever
- Torque wrench

Procedure

- Place the jack against the contact point.
- Jack contact point, see "Identification points and data plates" on page 34.
 - · Raise the truck.
 - · Support the truck with hard wooden blocks.
 - Undo the wheel attachment (177).
 - Disassemble the wheel, using a suitable mounting lever if necessary.

The wheel is now disassembled.

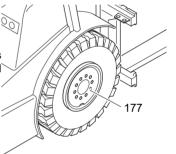

Fitting the wheels

Procedure

- Assemble the wheel, using a suitable mounting lever if necessary.
- · Fit the wheel attachment.
- · Remove the hard wooden blocks.
- · Lower the truck.
- Torque the wheel attachment (177) crosswise with a torque wrench, for torques see "Tyre type" on page 30.

The wheel is now assembled.



When using pneumatic tyres check the air pressure, for the air pressure see "Tyre type" on page $30\,$



4.6 Hydraulic system

⚠ CAUTION!

The hydraulic oil is pressurised during operation and is a hazard to health and to the environment.

- ▶ Do not touch pressurised hydraulic lines.
- ▶ Dispose of used oil in accordance with regulations. Store used oil safely until it can be disposed of in accordance with regulations.
- ▶ Do not spill hydraulic oil.
- ▶ Remove any spilled hydraulic immediately with an appropriate bonding agent.
- ▶The bonding agent / consumable mixture must be disposed of in accordance with regulations.
- ▶ Observe national regulations when handling hydraulic oil.
- ► Wear safety gloves when handling hydraulic oil.
- ▶ Prevent hydraulic oil from coming into contact with hot motor parts.
- ▶ Do not smoke when handling hydraulic oil.
- ► Avoid contact and digestion. If you swallow oil do not induce vomiting but seek medical assistance immediately.
- ▶ Seek fresh air after breathing in oil fumes or vapours.
- ▶ If oil has come into contact with your skin, rinse your skin with water.
- ► If oil has come into contact with your eyes, rinse them with water and seek medical assistance immediately.
- ▶ Replace oil-soaked clothing and shoes immediately.

↑ CAUTION!

Consumables and used parts are an environmental hazard

Used parts and consumables must be disposed of in accordance with the applicable environmental protection regulations. To change the oil contact the manufacturer's customer service department, who have been specially trained for this task.

▶ Note the safety regulations when handling these materials.

4.6.1 Checking the hydraulic oil level

Checking the hydraulic oil level and adding hydraulic oil

Requirements

- Park the truck on a level surface.
- Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).
- Open the panel, see "Opening the rear panel" on page 173

Procedure


 Visually inspect the hydraulic oil level on the hose.



If the reservoir is filled sufficiently, the hose will be full approx. 1 cm from the bottom.

 Add hydraulic oil if through the oil filler neck (178) until the oil can be seen in the hose.

The hydraulic oil level is now checked.

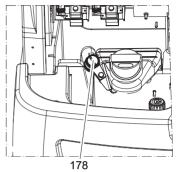

Λ

CAUTION!

The use of unsuitable hydraulic oils can cause damage

Trucks with bio hydraulic oil have a warning notice on the hydraulic reservoir: "Add hydraulic oil only".

▶Use only BIO hydraulic oil.



4.7 Replacing the hydraulic oil filter

 
Replace oil filter

Requirements

 Park the truck securely, see "Parking the truck securely" on page 105

Procedure

- Unscrew the hydraulic oil filter cap (179). The filter element is located on the cap.
- Replace the filter insert; if the O ring is damaged it will also need to be replaced.
 Apply a thin layer of oil to the O ring on assembly.
- Refit the cap with the new filter element in place.




Requirements

- Park the truck on a level surface.
- Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).
- Panel open, see "Opening the rear panel" on page 173

Procedure

- Untwist the breather filter lid (180).
- Replace the breather filter.

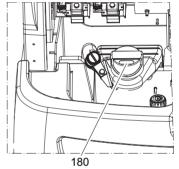



Collect any spilled hydraulic oil. Dispose of the hydraulic oil and hydraulic oil filter and fuel in accordance with environmental regulations.

4.9 Check the gear oil level

↑ CAUTION!

Consumables and used parts are an environmental hazard

Used parts and consumables must be disposed of in accordance with the applicable environmental protection regulations. To change the oil contact the manufacturer's customer service department, who have been specially trained for this task.

▶ Note the safety regulations when handling these materials.

Check the gear oil level

Requirements

- Park the truck securely, see "Parking the truck securely" on page 105

Tools and Material Required

- Oil sump

Procedure

- · Place the oil sump underneath the transmission
- · Unscrew the oil dipstick (182).
- Check gear oil level, top up if necessary through the filler hole (181). |→| The oil level should reach the bottom mark of the oil check hole (182).

The transmission oil level is now checked.

Draining the oil

Procedure

- · Drain oil at operating temperature.
- Place the oil sump underneath transmission
- · Unscrew the oil drain plug (183) and drain the transmission oil.



To ensure swift and complete draining of the transmission oil. unscrew the dipstick (182).

The oil is now drained.

181 183

Adding oil

Procedure

- Insert the oil drain plug (183).
- Unscrew the oil control screw (182) and add new gear oil in the filler hole (181).

The oil has now been added.

4.10 Heating

Replacing the air conditioning filter


Requirements

- Filter contaminated

Procedure

- · Loosen the screws (156).
- Remove the panel (157).
- · Replace the filter.
- · Attach the panel (157).
- Tighten the screws (156).

The filter cassette is now replaced.

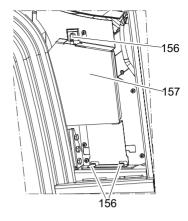


Regular servicing is required to ensure the heating can work at a consistently high level, see "Maintenance checklist EFG 213-220" on page 197 or see "Maintenance checklist EFG 316-320" on page 208.

4.11 Adding window washer system fluid

Procedure

- Make sure there is sufficient window fluid in the container (184).
- · If necessary top up with anti-freeze.

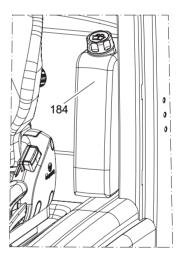

4.12 Checking electrical fuses

MARNING!

Electric currents can cause accidents

Make sure the electrical system is voltage-free before starting work on it. Before starting maintenance on the electrical system:

- ▶ Park the truck securely (see "Parking the truck securely" on page 105).
- ▶ Press the Emergency Disconnect.
- ▶ Disconnect the battery.
- ▶ Remove any rings or metal bracelets etc. before working on electrical components.

↑ CAUTION!

The use of incorrect fuses can cause fire and damage components

The use of incorrect fuses can damage the electrical system and result in fire. The safety and functionality of the truck cannot be ensured.

▶ Use only fuses with the prescribed rated current, see "Fuse ratings" on page 183.

Checking electrical fuses

Requirements


 Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).

Procedure

- Open the rear cover of the truck, see "Opening the rear panel" on page 173.
- · Remove the electrical system cap.
- Check condition and rating of the fuses in accordance with the table.
- · Replace any damaged fuses in accordance with the table.
- · Close the electrical system cap.
- · Close the rear cover of the truck.

The electrical fuses are now checked.

4.12.1 Fuse ratings

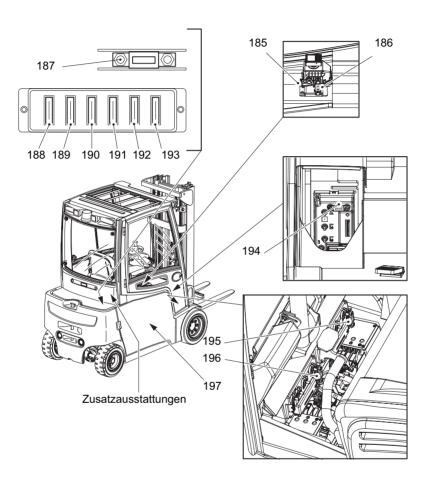

EMERGENCY DISCONNECT fuses

Item	Description	Electric circuit	Rating / type
185	F4	Main contactor control fuse	5 A
186	F8	Positive wire main fuse	425 A

Electrical system fuses


Item	Description	Electric circuit	Rating / type
187	F1	Overall control circuit fuse	63 A
188	3F10	Steering threephase controller fuse	40 A
189	F23	Control fuse 48 V	5 A
190	7F1	Magnetic brake control fuse	7.5 A
191	1F9	Traction / lift electronics control fuse	5 A
192	4F1	Horn control fuse	3 A
193	F18	Power on contactor control fuse	3 A

Traction and lift controller fuses

Item	Description	Electric circuit	Rating / type
194	2F1	Hydraulic motor fuse	250 A
195	1F2	RH drive motor fuse	250 A
196	1F1	LH drive motor fuse	250 A

On-board charger fuse

Item	Description	Electric circuit	Rating / type
197	F10	On-board charger fuse	170 A

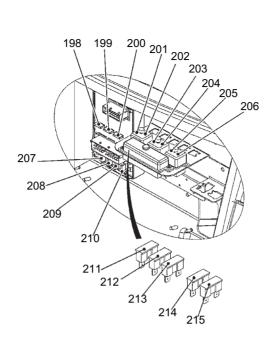

Options fuses

Item	Component	Electric circuit	Rating / type
198	9F1	Window wiper control fuse	5A
199	9F33	Window washer pump fuse	5A
200	9F14	Rear window wiper control fuse	5A
201	7F3	DC/DC converter control fuse	20A
202	7F4	DC/DC converter control fuse	20A
203	5F1	Search lights control fuse	10A
204	4F14	Strobe light control fuse	5A
205	F14	48 volt heater fuse	40A
206	F14.1	24 volt heater fuse	15A
207	5F11	Front LH work lights fuse	5A
57	5F11.1	Front RH work lights fuse	5A
209	5F11.2	Rear LH work lights fuse	- 5A
209	5F3.1	LH reverse lights fuse	
210	5F11.3	Rear RH work lights fuse	5A
210	5F3.2	RH reverse lights fuse	
211	5F5	Illumination control fuse	15A
212	4F4	Beacon control fuse	5A
213	9F2	Seat heating control fuse	5A
214	9F5	Window heating fuse	7.5A
215	F24	Output card fuse	20A

4.13 Cleaning

4.13.1 Cleaning the truck

Λ

CAUTION!

Fire hazard

Do not use flammable liquids to clean the industrial truck.

- ▶ Disconnect the battery before starting cleaning work.
- ► Carry out all necessary safety measures to prevent sparking before cleaning (e.g. by short-circuiting).

\wedge

CAUTION!

Risk of component damage when cleaning the truck

Cleaning with a pressure washer can result in malfunctions due to humidity.

- ► Cover all electronic system assemblies (controllers, sensors, motors etc.) before cleaning the truck with a pressure washer.
- ▶ Do not hold the jet of the pressure washer by the marked points to avoid damaging them (see "Identification points and data plates" on page 34).
- ▶ Do not clean the truck with pressurised water.

Cleaning the truck

Requirements

 Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).

Tools and Material Required

- Water-based solvents
- Sponge or cloth

Procedure

- Clean the surface of the truck with water-based solvents and water. Use a sponge or cloth to clean.
- In particular, clean the following areas:
 - Windows
 - All walk-on areas
 - · Oil filler ports and their surroundings
 - Grease nipples (before lubrication)
- Dry the truck after cleaning, e.g. with compressed air or a dry cloth.
- Carry out all the tasks in the section "Recommissioning the truck after cleaning or maintenance work" (see "Restoring the truck to service after decommissioning" on page 193).

The truck is now clean.

4.13.2 Cleaning the electrical system assemblies

↑ CAUTION!

Risk of electrical system damage

Cleaning the assemblies (controllers, sensors, motors etc.) of the electronic system with water can damage the electrical system.

- ▶ Do not clean the electrical system with water.
- ► Clean the electrical system with weak suction or compressed air (use a compressor with a water trap) and not a conductive, anti-static brush.

Cleaning the electrical system assemblies

Requirements

 Prepare the truck for maintenance and repairs (see "Preparing the truck for maintenance and repairs" on page 171).

Tools and Material Required

- Compressor with water separator
- Non-conductive, antistatic brush

Procedure

- Expose the electrical system, see "Opening the rear panel" on page 173.
- Clean the electrical system assemblies with weak suction or compressed air (use a compressor with a water trap) and not a conductive, anti-static brush.
- Fit the electrical system panel, see "Opening the rear panel" on page 173.
- Carry out all the tasks in the section "Recommissioning the truck after cleaning or maintenance work" (see "Restoring the truck to service after decommissioning" on page 193).

The electrical system assemblies are now clean.

4.14 Working on the electrical system

MARNING!

Electrical current can cause accidents

Make sure the electrical system is voltage-free before starting work on it. The capacitors in the controller must be completely discharged. The capacitors are completely discharged after approximately 10 minutes. Before starting maintenance on the electrical system:

- ▶ Only suitably trained electricians may operate on the truck's electrical system.
- ▶ Before working on the electrical system, take all precautionary measures to avoid electric shocks.
- ▶ Park the truck securely (see "Parking the truck securely" on page 105).
- ▶ Disconnect the battery.
- ▶ Remove any rings, metal wrist bands etc.

4.15 Restoring the truck to service after maintenance and repairs

Procedure

- Thoroughly clean the truck, see "Cleaning" on page 186.
- Lubricate the truck according to the lubrication schedule, see "Lubrication Schedule" on page 168.
- Clean the battery, grease the terminals and connect the battery.
- Charge the battery, see "Charging the battery" on page 53.
- Replace transmission oil. Condensation water could have formed.
- Replace hydraulic oil. Condensation water could have formed.
- The manufacturer's customer service department is specially trained to carry out these operations.
 - Start up the truck, see "Preparing the Truck for Operation" on page 90.

5 Decommissioning the industrial truck

If the truck is to be out of service for more than a month, it must be stored in a frostfree and dry room. All necessary measures must be taken before, during and after decommissioning as described hereafter.

When the truck is out of service it must be jacked up so that all the wheels are clear of the ground. This is the only way of ensuring that the wheels and wheel bearings are not damaged.



Jack up the truck, see "Lifting and jacking up the truck safely" on page 172.

If the truck is to be out of service for more than 6 months, agree further measures with the manufacturer's customer service department.

Prior to decommissioning 5.1

Procedure

- Thoroughly clean the truck, see "Cleaning" on page 186.
- · Prevent the truck from rolling away accidentally.
- · Check the hydraulic oil level and replenish if necessary, see "Checking the hydraulic oil level" on page 178.
- Apply a thin layer of oil or grease to any non-painted mechanical components.
- Lubricate the truck according to the lubrication schedule, see "Lubrication Schedule" on page 168.
- Charge the battery, see "Charging the battery" on page 53.
- Disconnect the battery, clean it and grease the terminals.
- In addition, follow the battery manufacturer's instructions.

5.2 **During decommissioning**

NOTE

Full discharge can damage the battery

Self-discharge can cause the battery to fully discharge. Full discharge shortens the useful life of the battery.

▶ Charge the battery at least every 2 months.



Charge the battery, see "Charging the battery" on page 53.

5.3 Restoring the truck to service after decommissioning

Procedure

- Thoroughly clean the truck, see "Cleaning" on page 186.
- Lubricate the truck according to the lubrication schedule, see "Lubrication Schedule" on page 168.
- Clean the battery, grease the terminals and connect the battery.
- Charge the battery, see "Charging the battery" on page 53.
- Replace transmission oil. Condensation water could have formed.
- Replace hydraulic oil. Condensation water could have formed.
- The manufacturer's customer service department is specially trained to carry out these operations.
 - Start up the truck, see "Preparing the Truck for Operation" on page 90.

6 Safety tests to be performed at intervals and after unusual incidents



Perform a safety check in accordance with national regulations. The manufacturer recommends the truck be checked to FEM guideline 4.004. The manufacturer has a service department specially trained for these tasks.

The truck must be inspected at least annually (refer to national regulations) or after any unusual event by a qualified inspector. The inspector shall assess the condition of the system from purely a safety viewpoint, without regard to operational or economic circumstances. The inspector must be sufficiently instructed and experienced to be able to assess the condition of the truck and the effectiveness of the safety mechanisms based on the technical regulations and principles governing the inspection of forklift trucks.

A thorough test of the truck must be undertaken with regard to its technical condition from a safety aspect. The truck must also be examined for damage caused by possible improper use. A test report shall be produced. The test results must be kept for at least the next 2 inspections.

The proprietor is responsible for ensuring that faults are immediately rectified.



A test plaque is attached to the truck as proof that it has passed the safety inspection. This plaque indicates the due date for the next inspection.

7 Final de-commissioning, disposal



Final de-commissioning or disposal of the truck in must be performed in accordance with the regulations of the country of use. In particular, regulations governing the disposal of batteries, consumables and electronic and electrical systems must be observed.

The truck must only be disassembled by trained personnel in accordance with the procedures as specified by the manufacturer.

8 Human vibration measurement



Vibrations that affect the operator over the course of the day are known as human vibrations. Excessive human vibrations will cause the operator long term health problems. The European "2002/44/EC/Vibration" operator directive has therefore been established to protect operators. To help operators to assess the application situation, the manufacturer offers a service of measuring these human vibrations.

9 Servicing and Inspection

⚠ WARNING!

Risk of accident due to neglected maintenance

Failure to perform regular servicing can lead to truck failure and poses a potential hazard to personnel and equipment.

▶Thorough and expert servicing is one of the most important requirements for the safe operation of the industrial truck.

The application conditions of an industrial truck have a considerable impact on component wear. The following service intervals are based on single-shift operation under normal operating conditions. They must be reduced accordingly if the equipment is to be used in conditions of extreme dust, temperature fluctuations or multiple shifts.

NOTE

To prevent damage due to wear, the manufacturer recommends an on-site application analysis to agree on appropriate service intervals.

The following maintenance checklist lists the activities to be performed and the respective intervals to be observed. Maintenance intervals are defined as:

W = Every 50 service hours, at least weekly

A = Every 500 service hours

B = Every 1000 service hours, or at least annually

C = Every 2000 service hours, or at least annually

= Standard maintenance interval

* = Cold store maintenance interval (in addition to standard maintenance interval)

→ ,

"W" maintenance-interval activities should be performed by the operating company.

During the run-in period, after approx. 100 service hours, the owner must check the wheel nuts/bolts and re-tighten if necessary.

10 Maintenance checklist EFG 213-220

10.1 Operating company

10.1.1 Standard equipment

Brak	ng	W	Α	В	С
1	Test brakes.				

Elect	rical System	W	Α	В	С
1	Test warning and safety devices in accordance with operating instructions.	•			
2	Test Emergency Disconnect switch.	•			

Powe	er Supply	W	Α	В	С
1	Check battery cable connections are secure, grease terminals if necessary.	•			
2	Check battery and battery components.	•			
3	Check acid level and add demineralised water if necessary.	•			
4	Check battery connector for damage, test it and make sure it is secure.	•			

Trave	el	W	Α	В	С
1	Check the wheels for wear and damage. Make sure they are tight and check the compressed air if necessary.	•			

Chas	sis and Superstructure	W	Α	В	С
1	Check doors and/or covers.	•			
2	Check labels are legible and complete.	•			
3	Check overhead guard and / or cab are secure and check for damage.	•			
4	Test driver's seat restraint system and check for damage.	•			

Hydra	aulic Operations	W	Α	В	C
1	Check load chain lubrication and lubricate if necessary.	•			
2	Check running surfaces of the mast for wear and damage, and lubricate if necessary.	•			
3	Test hydraulic system.	•			
4	Check cylinders, hydraulic ports, lines and hoses for leaks and damage.	•			
5	Check hydraulic oil level and top up if necessary.	•			
6	Check forks or load handler for wear and damage.	•			

10.1.2 Optional equipment

Work lights

Elect	Electrical System		Α	В	С
1	Test lighting.	•			

Strobe light/beacon

Electi	rical System	W	Α	В	С
1	Test strobe light / beacon and check for damage.				

Heating

	Chas	sis and Superstructure	W	Α	В	С
	1	Test the heating.	•			
Ī	2	Check heating vent filter for contamination and clean if necessary.	•			

Clamping device

	Hydra	aulic Operations	W	Α	В	С
ĺ	1	Check attachment lubrication; clean and lubricate if necessary.	•			

Sideshifter

Hydra	aulic Operations	W	Α	В	С
1	Check attachment lubrication; clean and lubricate if necessary.	•			

Road traffic approval (StVZO)

Elect	rical System	W	Α	В	С
1	Test lighting.	•			

Telescopic forks

Hydra	aulic Operations	W	Α	В	С
1	Check attachment lubrication; clean and lubricate if necessary.	•			

Weather-proof system

ſ	Chas	sis and Superstructure	W	Α	В	С
Ī	1	Test the window heating and check for damage.	*			
	2	Test the doors and check for damage.	•			

Wiper/washer system

Chas	sis and Superstructure	W	Α	В	С
1	Check wiper water container for leaks and check volume, top up if necessary.	•			

Fork adjuster

Hydra	aulic Operations	W	Α	В	С	
1	Check attachment lubrication; clean and lubricate if necessary.					ı

Optional equipment

(Chas	sis and Superstructure	W	Α	В	С
	1	Check that optional equipment such as mirrors, storage compartments, grips, windscreen wipers and washing systems etc. are working correctly and check for damage.	•			

10.2 Customer service

10.2.1 Standard equipment

Brake	Brakes W		Α	В	С
1	Test brakes.			•	
2	Check magnetic brake air gap.			•	
3	Check brake mechanism, adjust and lubricate if necessary.			•	

Elect	rical System	W	Α	В	С
1	Test cable and motor attachments.			•	
2	Test warning and safety devices in accordance with operating instructions.			•	
3	Test displays and controls.			•	
4	Test micro switch and adjust if necessary.			•	
5	Test Emergency Disconnect switch.			•	
6	Check contactors and/or relays.			•	
7	Test fan and check for dirt and damage.			•	
8	Check fuse ratings.			•	
9	Carry out a frame leakage test.			•	
10	Check electric wiring for damage (insulation damage, connections). Make sure wire connections are secure.			•	

Powe	er Supply	W	Α	В	С
1	Check battery cable connections are secure, grease terminals if necessary.			•	
2	Check battery and battery components.			•	
3	Check acid density and battery voltage.			•	
4	Check battery connector for damage, test it and make sure it is secure.			•	
5	Check safety labelling is present.			•	

Trave	ıl	W	Α	В	С
1	Check transmission oil level or grease filling of the transmission and top up if necessary.			•	
2	Check transmission for noise and leakage.			•	
3	Note: Replace transmission oil after 10000 service hours.				
4	Check the wheels for wear and damage. Make sure they are tight and check the compressed air if necessary.			•	
5	Check wheel suspension and attachment.			•	

Chas	sis and Superstructure	W	Α	В	С
1	Check chassis and screw connections for damage.			•	
2	Check doors and/or covers.			•	
3	Check labels are legible and complete.			•	
4	Check attachment and setting function of the driver's seat.			•	
5	Check condition of the driver's seat.			•	
6	Check attachment of the counterweight.			•	
7	Check mast attachment / mounting.			•	
8	Check trailer coupling or tow mechanism stop.			•	
9	Check overhead guard and / or cab are secure and check for damage.			•	
10	Check operator mat and steps are non-slip and damage-free.			•	
11	Test driver's seat restraint system and check for damage.			•	

Hydr	aulic Operations	W	Α	В	С
1	Test "hydraulic" controls and make sure the labels are present, legible and complete.			•	
2	Test hydraulic controls and check they are assigned to the correct functions.			•	
3	Check cylinders and piston rods for damage and leaks, and make sure they are secure.			•	
4	Test hose guide and check for damage.			•	
5	Check settings and wear levels of slide pieces and stops and adjust the slide pieces if necessary.			•	
6	Check load chain setting and tension if necessary.			•	
7	Check load chain lubrication and lubricate if necessary.			•	
8	Check lateral clearance of the mast connections and the fork carriage.			•	
9	Visually inspect the mast rollers and check contact surface wear level.			•	
10	Check running surfaces of the mast for wear and damage, and lubricate if necessary.			•	
11	Test hydraulic system.			•	
12	Replace hydraulic oil filter, ventilation/discharge filter.			*	•
13	Check cylinders, hydraulic ports, lines and hoses for leaks and damage.			•	
14	Check that hydraulic ports, hose and pipe lines are secure, check for leaks and damage.			•	
15	Test emergency lowering system.			•	
16	Check hydraulic oil level and top up if necessary.			•	
17	Test relief valve and adjust if necessary.			•	
18	Replace hydraulic oil.			*	•
19	Check forks or load handler for wear and damage.			•	
20	Check tilt cylinders and mounting.			•	
		•			$\overline{}$

Agre	ed performance levels	W	Α	В	С
1	Carry out a test run with rated load, if necessary with a customer-specific load.			•	
2	Lubricate truck according to the lubrication schedule.			•	
3	Demonstration after servicing.			•	

Steering		W	Α	В	С
1	Test electric steering and its components.			•	
2	Check mechanical parts of steering column.			•	
3	Check steering block for wear and damage			•	

10.2.2 Optional equipment

Discharge strap

Elect	rical System	W	Α	В	С
1	Check anti-static discharge strap is present and not damaged.			•	

Audible warning devices

Elec	trical System	W	Α	В	С
1	Test the buzzer / warning alarm, check for damage and make sure it is secure.			•	

Trailer coupling

Chas	sis and Superstructure	W	Α	В	С
1	Check trailer coupling or tow mechanism stop.			•	

Aquamatik

Powe	er Supply	W	Α	В	С
1	Test Aquamatik plug, hose connections and float and check for leaks.			•	
2	Test flow indicator and check for leaks.			•	

Work Platform

Ну	/dra	aulic Operations	W	Α	В	С
•	1	Check attachment is properly secured to the truck and the supporting elements.			•	

Work lights

Elect	rical System	W	Α	В	С
1	Test lighting.				

Battery refill system

Powe	r Supply	W	Α	В	С
1	Test battery refill system and check for leaks.				

Battery replacement system

Powe	r Supply	W	Α	В	С
1	Check safety labels are present.			•	
2	Check lock is present and test it.			•	

Strobe light/beacon

Elect	rical System	W	Α	В	С
1	Test strobe light / beacon and check for damage.			•	

Data recorder

Elect	rical System	W	Α	В	С
1	Check data recorder is secure and check for damage.			•	

Radio data

Syste	em Components	W	Α	В	С
1	Test scanner and terminal, check for damage and make sure they are secure and clean.			•	
2	Check fuse ratings.			•	
3	Check wiring is secure and check for damage.			•	

On-board charger

Char	ger	W	Α	В	C
1	Check mains connector and mains cable.			•	
2	Test the immobiliser on trucks with an on-board charger.			•	
3	Check the wires and electrical connections are secure and not damaged.			•	
4	Carry out potential measurement on chassis while charging is in progress.			•	

Electrical optional equipment

Elec	trical System	W	Α	В	С
1	Test the electrical optional equipment and check for damage.			•	

Electrolyte recirculation

Po	wer Supply	W	Α	В	С
1	Replace air filter wadding.			•	
2	Check hose connections and test the pump.			•	

Overhead guard cover

Chas	ssis and Superstructure	W	Α	В	С
1	Check overhead guard cover is present, check for damage and make sure it is secure.			•	

Fire extinguisher

	Agree	ed performance levels	W	Α	В	С
Ī	1	Check fire extinguisher is present, secure and Check test interval.				•

Belt lock control

Chas	sis and Superstructure	W	Α	В	С
1	Test the belt lock control and check for damage.			•	

Heating

	Chas	sis and Superstructure	W	Α	В	С
ĺ	1	Test the heating.			•	
ĺ	2	Check heating vent filter for contamination and clean if necessary.			•	

Clamping device

Hydra	aulic Operations	W	Α	В	С
1	Test the acknowledgement key.			•	
2	Check axial play of the front and rear rollers and adjust if necessary.			•	
3	Check attachment is properly secured to the truck and the supporting elements.			•	
4	Test attachment, check settings and check for damage.			•	
5	Check sliding blocks are complete.			•	

Hydra	aulic Operations	W	Α	В	С
6	Check attachment bearing points, guides and stops for wear and damage, grease and clean these components.			•	
7	Check attachment lubrication; clean and lubricate if necessary.			•	
8	Check hydraulic ports and tighten if necessary.			•	
9	Check cylinder seals.			•	
10	Check cylinder piston rods and bushings.			•	

Crane hook

Hydra	aulic Operations	W	Α	В	С
- 1	Check attachment is properly secured to the truck and the supporting elements.			•	

Load backrest

Hydra	nulic Operations	W	Α	В	С
1	Check the load backrest for damage and make sure it is secure.			•	

Restraint system / SUN protector

	Elect	rical System	W	Α	В	С
Ī	1	Check electric wiring for damage (insulation damage, connections). Make sure wire connections are secure.			•	

Chas	sis and Superstructure	W	Α	В	С
1	Check electrical connections are secure and not damaged.			•	
2	Test travel cutout function.			•	
3	Make sure restraint system is complete, test operation and check for damage.			•	
4	Test restraint system sensor system and check for damage.			•	

Safety restraint system / SUN protector

Cha	ssis and Superstructure	W	Α	В	С
1	Make sure restraint system is complete, test operation and check for damage.			•	

Impact sensor

Elect	rical System	W	Α	В	С
1	Check impact sensor is secure and check for damage.			•	

Sideshifter

Hydra	aulic Operations	W	Α	В	С
1	Check axial play of the front and rear rollers and adjust if necessary.			•	
2	Check attachment is properly secured to the truck and the supporting elements.			•	
3	Test attachment, check settings and check for damage.			•	
4	Check sliding blocks are complete.			•	
5	Check attachment bearing points, guides and stops for wear and damage, grease and clean these components.			•	
6	Check attachment lubrication; clean and lubricate if necessary.			•	
7	Check hydraulic ports and tighten if necessary.			•	
8	Test the sideshifter, check settings and check for damage.			•	
9	Check cylinder seals.			•	
10	Check cylinder piston rods and bushings.			•	

Seat heating

Elect	rical System	W	Α	В	С
1	Check electric wiring for damage (insulation damage, connections). Make sure wire connections are secure.			•	

Road traffic approval (StVZO)

Elect	rical System	W	Α	В	С
1	Test lighting.			•	

Telescopic forks

Hydr	aulic Operations	W	Α	В	С
1	Check attachment is properly secured to the truck and the supporting elements.			•	
2	Test attachment, check settings and check for damage.			•	
3	Check attachment bearing points, guides and stops for wear and damage, grease and clean these components.			•	
4	Check attachment lubrication; clean and lubricate if necessary.			•	
5	Check hydraulic ports and tighten if necessary.			•	
6	Check cylinder seals.			•	
7	Check that hydraulic ports, hose and pipe lines are secure, check for leaks and damage.			•	
8	Check piston and piston rod for damage, check setting and adjust if necessary.			•	

Boom

Hydraulic Operations \\		W	Α	В	С
1	Check attachment is properly secured to the truck and the supporting elements.			•	

Video system

Sy	ste	m Components	W	Α	В	С
1	1	Check wiring is secure and check for damage.			•	
2	2	Test the camera, make sure it is secured and clean.			•	
3	3	Test the monitor, make sure it is secured and clean.			•	

Weigher sensors / switches

Elect	rical System	W	Α	В	С
1	Test weigher system and check for damage.			•	

Weather-proof system

Elect	rical System	W	Α	В	С
1	Check fuse ratings.			•	

	Chas	sis and Superstructure	W	Α	В	С
	1	Test the window heating and check for damage.			•	
Ī	2	Test the doors and check for damage.			•	

Wiper/washer system

(Chas	sis and Superstructure	W	Α	В	С
	1	Check wiper water container for leaks and check volume, top up if necessary.			•	
	2	Test windscreen wipers and check for damage, replace if necessary.			•	

Fork adjuster

Hydr	aulic Operations	W	Α	В	С
1	Check axial play of the front and rear rollers and adjust if necessary.			•	
2	Check attachment is properly secured to the truck and the supporting elements.			•	
3	Test attachment, check settings and check for damage.			•	
4	Check sliding blocks are complete.			•	
5	Check attachment bearing points, guides and stops for wear and damage, grease and clean these components.			•	

Hydra	aulic Operations	W	Α	В	С
6	Check attachment lubrication; clean and lubricate if necessary.			•	
7	Check hydraulic ports and tighten if necessary.			•	
8	Test the fork positioner and check for damage.			•	
9	Check cylinder seals.			•	
10	Check cylinder piston rods and bushings.			•	

Access module

Elec	trical System	W	Α	В	С
1	Test access module, check for damage and make sure it is secure.			•	

Optional equipment

Chas	sis and Superstructure	W	Α	В	С
1	Check that optional equipment such as mirrors, storage compartments, grips, windscreen wipers and washing systems etc. are working correctly and check for damage.			•	

Issued on: 02.01.2013 10:32:51

11 Maintenance checklist EFG 316-320

11.1 Operating company

11.1.1 Standard equipment

Brake	Brakes		Α	В	С
1	Test brakes.	•			

Elect	rical System	W	Α	В	С
1	Test warning and safety devices in accordance with operating instructions.	•			
2	Test Emergency Disconnect switch.	•			

Powe	er Supply	W	Α	В	С
1	Check battery cable connections are secure, grease terminals if necessary.	•			
2	Check battery and battery components.	•			
3	Check acid level and add demineralised water if necessary.	•			
4	Check battery connector for damage, test it and make sure it is secure.	•			

Trave	el .	W	Α	В	С
1	Check the wheels for wear and damage. Make sure they are tight and check the compressed air if necessary.	•			

Chas	sis and Superstructure	W	Α	В	С
1	Check doors and/or covers.	•			
2	Check labels are legible and complete.	•			
3	Check overhead guard and / or cab are secure and check for damage.	•			
4	Test driver's seat restraint system and check for damage.	•			

Hydr	aulic Operations	W	Α	В	С
1	Check load chain lubrication and lubricate if necessary.	•			
2	Check running surfaces of the mast for wear and damage, and lubricate if necessary.	•			
3	Test hydraulic system.	•			
4	Check cylinders, hydraulic ports, lines and hoses for leaks and damage.	•			
5	Check hydraulic oil level and top up if necessary.	•			
6	Check forks or load handler for wear and damage.	•			

11.1.2 Optional equipment

Work lights

Electi	rical System	W	Α	В	С
1	Test lighting.	•			

Strobe light/beacon

	rical System	W	Α	В	С
1	Test strobe light / beacon and check for damage.	•			

Heating

Chas	sis and Superstructure	W	Α	В	С
1	Test the heating.	•			
2	Check heating vent filter for contamination and clean if necessary.	•			

Clamping device

Hydra	aulic Operations	W	Α	В	С	
1	Check attachment lubrication; clean and lubricate if necessary.	•				

Sideshifter

Hydra	aulic Operations	W	Α	В	С	
1	Check attachment lubrication; clean and lubricate if necessary.	•				

Road traffic approval (StVZO)

Electrical System	W	Α	В	С
1 Test lighting.	•			

Telescopic forks

Hydra	nulic Operations	W	Α	В	С
1	Check attachment lubrication; clean and lubricate if necessary.				

Weather-proof system

	Chas	sis and Superstructure	W	Α	В	С
ĺ	1	Test the windscreen heating and check for damage.	*			
ĺ	2	Test the doors and check for damage.	•			

Wiper/washer system

Ch	ıas	sis and Superstructure	W	Α	В	С
1	1	Check wiper water container for leaks and check volume, top up if necessary.	•			

Fork adjuster

Hydra	aulic Operations	W	Α	В	С
1	Check attachment lubrication; clean and lubricate if necessary.	•			

Optional equipment

Cha	ssis and Superstructure	W	Α	В	С
1	Check that optional equipment such as mirrors, storage compartments, grips, windscreen wipers and washing systems etc. are working correctly and check for damage.	•			

11.2 Customer service

11.2.1 Standard equipment

Brake	es	W	Α	В	С
1	Test brakes.			•	
2	Check magnetic brake air gap.			•	
3	Check brake mechanism, adjust and lubricate if necessary.			•	

Elect	rical System	W	Α	В	С
1	Test cable and motor attachments.			•	
2	Test warning and safety devices in accordance with operating instructions.			•	
3	Test displays and controls.			•	
4	Test micro switch and adjust if necessary.			•	
5	Test Emergency Disconnect switch.			•	
6	Check contactors and/or relays.			•	
7	Test fan and check for dirt and damage.			•	
8	Check fuse ratings.			•	
9	Carry out a frame leakage test.			•	
10	Check electric wiring for damage (insulation damage, connections). Make sure wire connections are secure.			•	

Powe	er Supply	W	Α	В	С
1	Check battery cable connections are secure, grease terminals if necessary.			•	
2	Check battery and battery components.			•	
3	Check acid density and battery voltage.			•	
4	Check battery connector for damage, test it and make sure it is secure.			•	
5	Check safety labels are present.			•	

Trave	l .	W	Α	В	С
1	Check transmission oil level or grease filling of the transmission and top up if necessary.			•	
2	Check transmission for noise and leakage.			•	
3	Note: Replace transmission oil after 10000 service hours.				
4	Check the wheels for wear and damage. Make sure they are tight and check the compressed air if necessary.			•	
5	Check wheel suspension and attachment.			•	

Chas	sis and Superstructure	W	Α	В	С
1	Check chassis and screw connections for damage.			•	
2	Check doors and/or covers.			•	
3	Check labels are legible and complete.			•	
4	Check attachment and setting function of the driver's seat.			•	
5	Check condition of the driver's seat.			•	
6	Check attachment of the counterweight.			•	
7	Check mast attachment / mounting.			•	
8	Check trailer coupling or tow mechanism stop.			•	
9	Check overhead guard and / or cab are secure and check for damage.			•	
10	Check operator mat and steps are non-slip and damage-free.			•	
11	Test driver's seat restraint system and check for damage.			•	

Hydr	aulic Operations	W	Α	В	С
1	Test "hydraulic" controls and make sure the labels are present, legible and complete.			•	
2	Test hydraulic controls and check they are assigned to the correct functions.			•	
3	Check cylinders and piston rods for damage and leaks, and make sure they are secure.			•	
4	Test hose guide and check for damage.			•	
5	Check settings and wear levels of slide pieces and stops and adjust the slide pieces if necessary.			•	
6	Check load chain setting and tension if necessary.			•	
7	Check load chain lubrication and lubricate if necessary.			•	
8	Check lateral clearance of the mast connections and the fork carriage.			•	
9	Visually inspect the mast rollers and check contact surface wear level.			•	
10	Check running surfaces of the mast for wear and damage, and lubricate if necessary.			•	
11	Test hydraulic system.			•	
12	Replace hydraulic oil filter, ventilation/discharge filter.			*	•
13	Check cylinders, hydraulic ports, lines and hoses for leaks and damage.			•	
14	Check that hydraulic ports, hose and pipe lines are secure, check for leaks and damage.			•	
15	Test emergency lowering system.			•	
16	Check hydraulic oil level and top up if necessary.			•	
17	Test relief valve and adjust if necessary.			•	
18	Replace hydraulic oil.			*	•
19	Check forks or load handler for wear and damage.			•	
20	Check tilt cylinders and mounting.			•	

Agre	ed performance levels	W	Α	В	С
1	Carry out a test run with rated load, if necessary with a customer-specific load.			•	
2	Lubricate truck according to the lubrication schedule.			•	
3	Demonstration after servicing.			•	

Stee	ring	W	Α	В	С
1	Check the hydraulic oil level of the hydraulic steering.			•	
2	Test the hydraulic steering for leaks.			•	
3	Check steering hoses and lines.			•	
4	Check steering axle and steering knuckle for wear and damage.			•	
5	Check stub axle and adjust if necessary.			•	
6	Test electric / hydraulic steering and its components.			•	
7	Check mechanical parts of steering column.			•	

11.2.2 Optional equipment

Discharge strap

Electi	rical System	W	Α	В	С
1	Check anti-static discharge strap is present and not damaged.			•	

Audible warning devices

Elect	rical System	W	Α	В	С
1	Test the buzzer / warning alarm, check for damage and make sure it is secure.			•	

Trailer coupling

Chas	ssis and Superstructure	W	Α	В	С
1	Check trailer coupling or tow mechanism stop.			•	

Aquamatik

Powe	Power Supply 1 Test Aquamatik plug, hose connections and float and check for leaks		Α	В	С
1	Test Aquamatik plug, hose connections and float and check for leaks.			•	
2	Test flow indicator and check for leaks.			•	

Work Platform

Hydr	aulic Operations	W	Α	В	С
1	Check attachment is properly secured to the truck and the supporting elements.			•	

Work lights

Elect	rical System	W	Α	В	С
1	Test lighting.			•	

Battery refill system

Powe	r Supply	W	Α	В	С
1	Test battery refill system and check for leaks.			•	

Battery replacement system

Powe	r Supply	W	Α	В	С
1	Check safety labels are present.			•	
2	Check lock is present and test it.			•	

Strobe light/beacon

Elect	rical System	W	Α	В	С
1	Test strobe light / beacon and check for damage.				

Data recorder

Ele	trical System	W	Α	В	С
1	Check data recorder is secure and check for damage.				

Radio data

Syste	System Components 1 Test scanner and terminal, check for damage and make sure they are secure and clean.		Α	В	С
1	1			•	
2	Check fuse ratings.			•	
3	Check wiring is secure and check for damage.			•	

On-board charger

Char	ger	W	Α	В	С
1	Check mains connector and mains cable.			•	
2	Test the immobiliser on trucks with an on-board charger.			•	
3	Check the wires and electrical connections are secure and not damaged.			•	
4	Carry out potential measurement on chassis while charging is in progress.			•	

Electrical optional equipment

Elect	rical System	W	Α	В	С
1	Test the electrical optional equipment and check for damage.			•	

Electrolyte recirculation

	Powe	r Supply	W	Α	В	С
	1	Replace air filter wadding.			•	
Ī	2	Check hose connections and test the pump.			•	

Overhead guard cover

Chas	sis and Superstructure	W	Α	В	С
1	Check overhead guard cover is present, check for damage and make sure it is secure.			•	

Fire extinguisher

Agree	ed performance levels	W	Α	В	С
1	Check fire extinguisher is present, secure and Check test interval.				

Belt lock control

Chas	sis and Superstructure	W	Α	В	С
1	Test the belt lock control and check for damage.			•	

Heating

Chas	sis and Superstructure	W	Α	В	С
1	Test the heating.			•	
2	Check heating vent filter for contamination and clean if necessary.			•	

Clamping device

Hydra	aulic Operations	W	Α	В	С
1	Test the acknowledgement key.			•	
2	Check axial play of the front and rear rollers and adjust if necessary.			•	
3	Check attachment is properly secured to the truck and the supporting elements.			•	
4	Test attachment, check settings and check for damage.			•	
5	Check sliding blocks are complete.			•	
6	Check attachment bearing points, guides and stops for wear and damage, grease and clean these components.			•	
7	Check attachment lubrication; clean and lubricate if necessary.			•	
8	Check hydraulic ports and tighten if necessary.			•	
9	Check cylinder seals.			•	
10	Check cylinder piston rods and bushings.			•	

Crane hook

Hydr	aulic Operations	W	Α	В	С
1	Check attachment is properly secured to the truck and the supporting elements.			•	

Load backrest

Hydra	aulic Operations	W	Α	В	С
1	Check the load backrest for damage and make sure it is secure.			•	

Restraint system / SUN protector

Elect	rical System	W	Α	В	С
1	Check electric wiring for damage (insulation damage, connections). Make sure wire connections are secure.			•	

Chas	sis and Superstructure	W	Α	В	С
1	Check electrical connections are secure and not damaged.			•	
2	Test travel cutout function.			•	
3	Make sure restraint system is complete, test operation and check for damage.			•	
4	Test restraint system sensor system and check for damage.			•	

Safety restraint system / SUN protector

Chas	sis and Superstructure	W	Α	В	С
1	Make sure restraint system is complete, test operation and check for damage.			•	

Impact sensor

EI	ect	rical System	W	Α	В	С
	1	Check impact sensor is secure and check for damage.			•	

Sideshifter

Hydra	aulic Operations	W	Α	В	С
1	Check axial play of the front and rear rollers and adjust if necessary.			•	
2	Check attachment is properly secured to the truck and the supporting elements.			•	
3	Test attachment, check settings and check for damage.			•	
4	Check sliding blocks are complete.			•	
5	Check attachment bearing points, guides and stops for wear and damage, grease and clean these components.			•	
6	Check attachment lubrication; clean and lubricate if necessary.			•	
7	Check hydraulic ports and tighten if necessary.			•	
8	Test the sideshifter, check settings and check for damage.			•	
9	Check cylinder seals.			•	
10	Check cylinder piston rods and bushings.			•	

Seat heating

Elect	rical System	W	Α	В	С
1	Check electric wiring for damage (insulation damage, connections). Make sure wire connections are secure.			•	

Road traffic approval (StVZO)

Elect	rical System	W	Α	В	С
1	Test lighting.			•	

Telescopic forks

Hydr	aulic Operations	W	Α	В	C
1	Check attachment is properly secured to the truck and the supporting elements.			•	
2	Test attachment, check settings and check for damage.			•	
3	Check attachment bearing points, guides and stops for wear and damage, grease and clean these components.			•	

Hydra	aulic Operations	W	Α	В	С
4	Check attachment lubrication; clean and lubricate if necessary.			•	
5	Check hydraulic ports and tighten if necessary.			•	
6	Check cylinder seals.			•	
7	Check that hydraulic ports, hose and pipe lines are secure, check for leaks and damage.			•	
8	Check piston and piston rod for damage, check setting and adjust if necessary.			•	

Boom

Hydr	Hydraulic Operations		Α	В	С
1	Check attachment is properly secured to the truck and the supporting elements.			•	

Video system

Syste	System Components		Α	В	С
1	Check wiring is secure and check for damage.			•	
2	Test the camera, make sure it is secured and clean.			•	
3	Test the monitor, make sure it is secured and clean.			•	

Weigher sensors / switches

		W	Α	В	С
1	Test weigher system and check for damage.			•	

Weather-proof system

Elect	Electrical System		Α	В	С
1	Check fuse ratings.			•	

	Chas	sis and Superstructure	W	Α	В	С
Ī	1	Test the windscreen heating and check for damage.			•	
	2	Test the doors and check for damage.			•	

Wiper/washer system

Chas	sis and Superstructure	W	Α	В	С
1	Check wiper water container for leaks and check volume, top up if necessary.			•	
2	Test windscreen wipers and check for damage, replace if necessary.			•	

Fork adjuster

Hydra	Hydraulic Operations			В	С
1	Check axial play of the front and rear rollers and adjust if necessary.			•	
2	Check attachment is properly secured to the truck and the supporting elements.			•	
3	Test attachment, check settings and check for damage.			•	
4	Check sliding blocks are complete.			•	
5	Check attachment bearing points, guides and stops for wear and damage, grease and clean these components.			•	
6	Check attachment lubrication; clean and lubricate if necessary.			•	
7	Check hydraulic ports and tighten if necessary.			•	
8	Test the fork positioner and check for damage.			•	
9	Check cylinder seals.			•	
10	Check cylinder piston rods and bushings.			•	

Access module

Ele	Electrical System		Α	В	С
•	Test access module, check for damage and make sure it is secure.			•	

Optional equipment

Chassis and Superstructure		W	Α	В	С
1	Check that optional equipment such as mirrors, storage compartments, grips, windscreen wipers and washing systems etc. are working correctly and check for damage.			•	

Issued on: 02.01.2013 10:35:56

A Traction Battery Appendix

Contents

Α	Traction Battery Appendix	1
1	Correct Use and Application	2
2	Data plate	2
3	Safety Instructions, Warning Indications and other Notes	3
4	Lead acid batteries with armour plated cells and liquid electrolyte	4
4.1	Description	4
4.2	Operation	5
4.3	Servicing lead-acid batteries with armour plated cells	8
5	PzV and PzV-BS lead-acid batteries with sealed armour plated cells	9
5.1	Description	9
5.2	Operation	10
5.3	Servicing PzV and PzV-BS lead-acid batteries with sealed armour plated	
	cells	13
6	Aquamatik water replenishment system	14
6.1	Water replenishment system design	14
6.2	Functional Description	15
6.3	Adding water	15
6.4	Water pressure	15
6.5	Filling time	16
6.6	Water quality	16
6.7	Battery tubing	16
6.8	Operating temperature	16
6.9	Cleaning measures	17
6.10	Service mobile vehicle	17
7	Electrolyte circulation	18
7.1	Functional Description	18
8	Cleaning batteries	20
9	Storing the battery	22
10	Troubleshooting	22
11	Disposal	22

1 Correct Use and Application

Failure to observe the operating instructions, carrying out repairs with non-original spare parts, tampering with the battery or using electrolyte additives will invalidate the warranty.


Observe the instructions for maintaining the safety rating during operation for batteries in accordance with Ex I and Ex II (see relevant certification).

2 Data plate



1	Battery name
2	Battery type
3	Production week/year manf.
4	Serial number
5	Supplier number
6	Rated voltage
7	Rated capacity
9	Battery weight in kg
8	Number of cells
15	Electrolyte volume in litres
10	Battery number
11	Manufacturer
13	Manufacturer's logo
12	CE mark only for batteries beyond 75 volts
14	Safety instructions and warning information

3 Safety Instructions, Warning Indications and other Notes

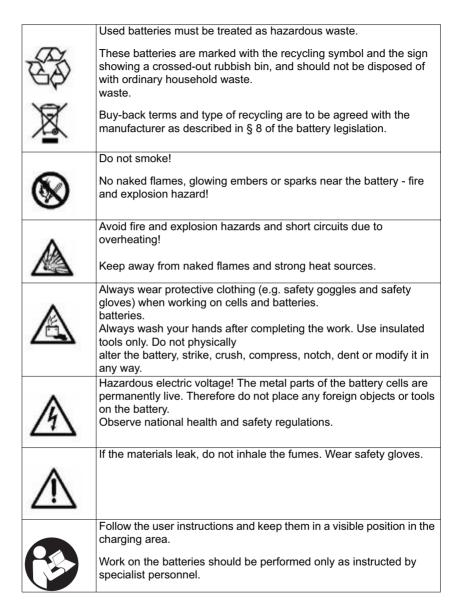

4 Lead acid batteries with armour plated cells and liquid electrolyte

4.1 Description

Jungheinrich traction batteries are lead acid batteries with armour plated cells and liquid electrolyte. The names of the traction batteries are PzS, PzB, PzS Lib and PzM.

Electrolyte

The rated density of the electrolyte assumes a temperature of 30°C and the rated electrolyte level is fully charged. Higher temperatures will reduce, lower temperatures will increase the electrolyte density. The adjustment factor is $\pm\,0.0007\,\text{kg/l}$ per K, e.g. electrolyte density 1.28 kg/l at 45°C corresponds to a density of 1.29 kg/l at 30°C.

The electrolyte must conform to DIN 43530 Part 2 purity regulations.

4.1.1 Battery nominal data

1.	Product	Traction battery
2.	Nominal voltage	2.0 V x no. of cells
3.	Rated capacity C5	See data plate
4.	Discharge current	C5/5h
5.	Nominal electrolyte density ¹	1.29 kg/l
6.	Nominal temperature ²	30 °C
7.	System rated electrolyte level	up to "Max" electrolyte level marking
	Limit temperature ³	55°C

- 1. Reached within the first 10 cycles.
- 2. Higher temperatures shorten the useful life, lower temperatures reduce the available capacity.
- 3. Not permissible as operating temperature.

4.2 **Operation**

4.2.1 Commissioning unfilled batteries



 
The operations required must be carried out by the manufacturer's customer service department or a customer service organisation authorised by the manufacturer.

4.2.2 Commissioning filled and charged batteries

Checks and operations to be performed before starting daily work

Procedure

- Make sure the battery is in physically good condition.
- Make sure the terminals are correct (positive to positive and negative to negative) and check that contacts on the battery terminal conducting system are secure.
- Check the terminal screw torques (M10 = 23 ±1 Nm) of the terminal conductors and connectors.
- · Charge up the battery.
- · Check the electrolyte level.



The electrolyte level must be above the cell baffle or the top of the separator.

· Add electrolyte with distilled water up to the nominal level.

Checks completed.

4.2.3 Discharging the battery



To achieve an optimum useful life avoid operational discharge of more than 80% of nominal capacity (full discharge). This corresponds to a minimum electrolyte density of 1.13 kg/l at the end of the discharge. Recharge a discharged battery immediately.

4.2.4 Charging the battery

M WARNING!

The gases produced during charging can cause explosions

The battery gives off a mixture of oxygen and hydrogen (electrolytic gas) during charging. Gassing is a chemical process. This gas mixture is highly explosive and must not be ignited.

- ► Always disconnect the charger and truck before connecting or disconnecting the charger and battery.
- ▶The charger must be adapted to the battery in terms of voltage, charge capacity and battery technology.
- ▶ Before charging, check all cables and plug connections for visible signs of damage.
- ▶ Ventilate the room in which the truck is being charged.
- ▶ Battery cell surfaces must remain exposed during charging in order to ensure sufficient ventilation, see truck operating instructions, chapter D, Charging the Battery.
- ▶ Do not smoke and avoid naked flames when handling batteries.
- ► Wherever an industrial truck is parked for charging there must be no inflammable material or consumables capable of creating sparks within a minimum distance of 2 m from the truck.
- ▶ Fire protection equipment must be available.
- ▶ Do not place any metallic objects on the battery.
- ► Always follow the safety regulations of the battery and charger station manufacturers.

NOTE

The battery must only be charged with DC current. All charging processes in accordance with DIN 41773 and DIN 41774 are permissible.

→

 
The electrolyte temperature rises by approx. 10 K during charging. Charging should therefore only begin when the electrolyte temperature is below 45°C. The electrolyte temperature of batteries must be at least +10°C before charging. Otherwise the battery will not charge correctly. Below 10°C the battery is insufficiently charged with standard charging systems.

Charging the battery

Requirements

- Electrolyte temperature min. 10°C to max. 45°C

Procedure



- Connect the battery to the switched off charger, ensuring the terminals are connect (positive to positive and negative to negative).
- · Switch on the charger.

Battery charged



Charging is considered to be complete when the electrolyte density and battery voltage remain constant for more than 2 hours.

Compensation charging

Compensation charging is used to ensure the useful life and maintain capacity after full discharge and repeated insufficient charging. The maximum compensation charge current is 5 A/100 Ah rated capacity.



Compensation charging should be carried out weekly.

Trickle charging

Battery trickle charging is partial charging that extends the daily application time. Higher average temperatures occur during trickle charging which reduce the useful life of the batteries.



Trickle charges should only be performed when the charge level is below $60\,\%$. Use replacement batteries instead of regular trickle charging.

4.3 Servicing lead-acid batteries with armour plated cells

 
Water quality



The quality of the water used to fill up electrolyte must correspond to purified or distilled water. Purified water can be produced through distillation or ion exchangers and is then suitable for the production of electrolyte.

4.3.1 Daily

- Charge the battery after each discharge.
- After charging, check the electrolyte level.
- If necessary, add purified water up to the rated level after charging.



4.3.2 Weekly

- After re-charging, carry out a visual inspection for dirt and physical damage.
- If the battery is charged regularly according to the IU characteristic, carry out a compensation charge.

4.3.3 Monthly

- Towards the end of the charging process measure and record the voltages of all the cells with the charger switched on.
- After charging measure and record the electrolyte density and the electrolyte temperature in all the cells.
- Compare the results with the previous ones.



If you find significant differences compared with the previous measurements or differences between the cells, contact the manufacturer's customer service department.

4.3.4 Annually

- Measure the truck insulation resistance in accordance with EN 1175-1.
- Measure the battery insulation resistance in accordance with EN 1987-1.



In accordance with DIN EN 50272-3 the battery insulation resistance should not be less than 50 Ω per volt of rated voltage.

5 PzV and PzV-BS lead-acid batteries with sealed armour plated cells

5.1 Description

PzV batteries are sealed batteries with fixed electrolytes, to which no water can be added over the entire lifespan of the battery. Relief valves are used as plugs which are destroyed when opened. During operation the same safety requirements apply to the sealed batteries as for batteries with liquid electrolyte. This is to avoid electric shock, explosion of the electrolyte charging gases or hazardous electrolyte burns if the cell vessels are destroyed.

PzV batteries are low gassing, but not gassing-free.

Electrolyte

The electrolyte is sulphuric acid which is fixed in gel. The density of the electrolyte cannot be measured.

5.1.1 Battery nominal data

1.	Product	Traction battery
2.	Nominal voltage	2.0 V x no. of cells
3.	Rated capacity C5	See data plate
4.	Discharge current	C5/5h
5.	Rated temperature	30 °C
	Limit temperature ¹	45°C, not permissible as operating temperature.
6.	Rated density of the electrolyte	Cannot be measured
7.	System rated electrolyte level	Cannot be measured

^{1.} Higher temperatures shorten the useful life, lower temperatures reduce the available capacity.

5.2 Operation

5.2.1 Commissioning

 
Checks and operations to be performed before starting daily work

Procedure

- · Make sure the battery is in physically good condition.
- Make sure the terminals are correct (positive to positive and negative to negative) and check that contacts on the battery terminal conducting system are secure.
- Check the terminal screw torques (M10 = 23 ±1 Nm) of the terminal conductors and connectors.
- · Re-charge the battery.
- · Charge the battery.

Check completed.

5.2.2 Discharging the battery



If the battery is discharged during operation by more than 80% of rated capacity the useful life of the battery will reduce significantly. Fully or partially discharged batteries must be re-charged immediately and not left unattended.

5.2.3 Charging the battery

→

MARNING!

The gases produced during charging can cause explosions

The battery gives off a mixture of oxygen and hydrogen (electrolytic gas) during charging. Gassing is a chemical process. This gas mixture is highly explosive and must not be ignited.

- ► Always disconnect the charger and truck before connecting or disconnecting the charger and battery.
- ▶The charger must be adapted to the battery in terms of voltage, charge capacity and battery technology.
- ▶ Before charging, check all cables and plug connections for visible signs of damage.
- ▶ Ventilate the room in which the truck is being charged.
- ▶ Battery cell surfaces must remain exposed during charging in order to ensure sufficient ventilation, see truck operating instructions, chapter D, Charging the Battery.
- ▶ Do not smoke and avoid naked flames when handling batteries.
- ► Wherever an industrial truck is parked for charging there must be no inflammable material or consumables capable of creating sparks within a minimum distance of 2 m from the truck.
- ▶ Fire protection equipment must be available.
- ▶ Do not place any metallic objects on the battery.
- ► Always follow the safety regulations of the battery and charger station manufacturers.

NOTE

Charging the battery incorrectly can result in material damage.

Incorrect battery charging can result in overloading of the electric wires and contacts, hazardous gas formation and electrolyte leakage from the cells.

- ► Always charge the battery with DC current.
- ►All DIN 41773 charging procedures are permitted in the format approved by the manufacturer.
- ► Always connect the battery to a charger that is appropriate to the size and type of the battery.
- ► If necessary have the charger checked by the manufacturer's customer service department for suitability.
- ► Do not exceed limit currents in the gassing area in accordance with DIN EN 50272-3.

 
Charging the battery

Requirements

- Electrolyte temperature between +15°C and 35°C

Procedure

- Open or take off the tray lid or covers from the battery compartment.
- Connect the battery to the switched off charger, ensuring the terminals are connect (positive to positive and negative to negative).
- · Switch on the charger.



Battery charged

Charging is considered to be complete when the electrolyte density and battery voltage remain constant for more than 2 hours.

Compensation charging

Compensation charging is used to ensure the useful life and maintain capacity after full discharge and repeated insufficient charging.

Compensation charging should be carried out weekly.

Trickle charging

Battery trickle charging is partial charging that extends the daily application time. Higher average temperatures occur during trickle charging which can reduce the useful life of the batteries.

- Trickle charges should only be performed when the charge level is below 50%. Use replacement batteries instead of regular trickle charging.
- Avoid trickle charging with PzV batteries.

5.3 Servicing PzV and PzV-BS lead-acid batteries with sealed armour plated cells

→ Do not add water!

5.3.1 Daily

- Charge the battery after each discharge.

5.3.2 Weekly

- Visually inspect for dirt and physical damage.

5.3.3 Every three months


- Measure and record the overall voltage.
- Measure and record the individual voltages.
- Compare the results with the previous ones.
- Carry out the measurements after full charging and subsequent resting for at least 5 hours.
- If you find significant differences compared with the previous measurements or differences between the cells, contact the manufacturer's customer service department.

5.3.4 Annually

- Measure the truck insulation resistance in accordance with EN 1175-1.
- Measure the battery insulation resistance in accordance with EN 1987-1.
- In accordance with DIN EN 50272-3 the battery insulation resistance should not be less than 50 Ω per volt of rated voltage.

6 Aquamatik water replenishment system

6.1 Water replenishment system design

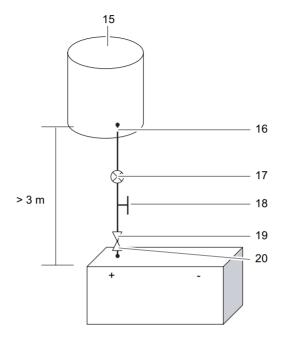

15	Water container
16	Tap connection with ball cock
17	Flow indicator
18	Shut-off cock
19	Locking coupling
20	Battery lock connector

6.2 Functional Description

The Aquamatik water replenishment system is used to adjust the rated electrolyte level automatically on traction batteries for industrial trucks.

The battery cells are interconnected through hoses and are attached to the water supply (e.g. water container) through a plug connection. When the shut-off cock is opened all the cells are filled with water. The Aquamatik plug controls the amount of water required and, at the relevant water pressures, ensures the water supply is shut off and the valve is closed securely.

The plug systems have an optical level indicator, a diagnostic port to measure the temperature and electrolyte density and a degassing port.

6.3 Adding water

Water should be added to the batteries just before the battery is fully charged. This ensures that the amount of water added is mixed with the electrolyte.

6.4 Water pressure

The water replenishment system must be operated with a water pressure in the water line of 0.3 bar - 1.8 bar. Any deviations from the permissible pressure ranges will affect the operation of the systems.

Water drop

Assembly height above battery surface is between 3 - 18 m. 1 m corresponds to 0.1 har

Pressure water

The pressure regulating valve is adjusted to suit the system and must lie between 0.3 - 1.8 bar.

6.5 Filling time

The filling time for a battery depends on the electrolyte level, the ambient temperature and the filling pressure. Filling ends automatically. The water supply line must be disconnected from the battery when the water has been filled.

6.6 Water quality

→

The quality of the water used to fill up electrolyte must correspond to purified or distilled water. Purified water can be produced through distillation or ion exchangers and is then suitable for the production of electrolyte.

6.7 Battery tubing

The tubing of the individual plugs is in accordance with the existing electric circuit. No changes should be made.

6.8 Operating temperature

Batteries with automatic water replenishment systems should only be stored in rooms with temperatures > 0°C, as otherwise the systems could freeze.

6.9 Cleaning measures

The plug systems must only be cleaned with purified water in accordance with DIN 43530-4. No parts of the plugs must come into contact with solvent-based materials or soap.

6.10 Service mobile vehicle

Mobile water filling vehicle with pump and filling gun to fill individual cells. The immersion pump in the container generates the necessary filling pressure. The service mobile must be at exactly the same height as the battery base.

7 Electrolyte circulation

7.1 Functional Description

Electrolyte circulation ensures the supply of air during charging to mix the electrolyte, thereby preventing any acid layer, shortening the charge time (charge factor approx. 1.07) and reducing the formation of gas during charging. The charger must be suitable for the battery and electrolyte circulation.

A pump in the charger produces the necessary compressed air which is introduced to the battery cells via a hose system. The electrolyte is circulated via the inlet air and the electrolyte density level is constant over the entire length of the electrode.

Pump

In the event of a fault, e.g. if the pressure control system responds for an unknown reason, the filters must be checked and replaced if necessary.

Battery connection

A hose is attached to the pump module which together with the charge leads is routed from the charger to the charging connector. The air is passed on to the battery via the electrolyte circulation coupling ducts in the connector. When routing make sure the hose is not bent.

Pressure monitoring module

The electrolyte circulation pump is activated when charging begins. The pressure monitoring module monitors the build up of pressure during charging. This ensures that the required air pressure is provided for electrolyte circulation charging.

In the event of malfunctions such as:

- Battery air coupling not connected to circulation module (if coupling is separate) or faulty.
- Leaky or faulty hose connections on battery or
- Intake filter contaminated
- a visual error message appears on the charger.


NOTE

If an installed electrolyte circulation system is seldom used or not used at all, or if the battery is subjected to severe temperature fluctuations, the electrolyte may flow back into the hose system.

► Attach a separate coupling system to the air inlet line, such as: locking coupling on the battery side and through-coupling on the air supply side.

Schematic illustration

Electrolyte circulation on the battery and air supply via the charger.

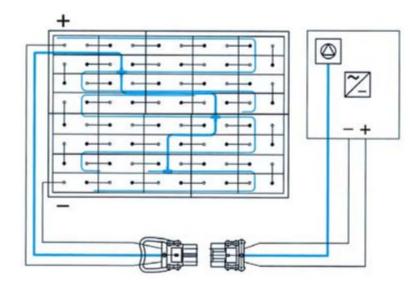

8 Cleaning batteries

Batteries and trays must be cleaned in order to

- maintain cell insulation and protect cells from ground or external conductive parts.
- Avoid damage from corrosion and stray currents.
- Avoid excessive and varying automatic discharge of the individual cells or block batteries due to stray currents.
- Avoid electric sparking due to stray currents.

When cleaning the batteries make sure that:

- The assembly site chosen for cleaning is close to a drainage system for processing the electrolytic rinsing water.
- All health and safety as well as water and waste disposal regulations are observed when disposing of used electrolyte or rinsing water.
- Protective goggles and clothing are worn.
- Cell plugs are not removed or opened.
- Clean the plastic components of the battery, in particular the cell containers, only with water or water-based cloths without any additives.
- After cleaning, the top of the battery is dried with suitable equipment, e.g. compressed air or cloths.
- Any fluid that has entered the battery box must be suctioned off and disposed of in accordance with the above-mentioned regulations.

Cleaning the battery with a high pressure cleaner

Requirements

- Cell connectors tight, plugged in securely
- Cell plugs closed

Procedure

- Follow the high pressure cleaner's user instructions.
- · Do not use any cleaning additives.
- Observe the permissible cleaning device temperature setting of 140°C.

 This generally ensures that the temperature does not exceed 60°C at a distance of 30cm behind the outlet nozzle.
 - Observe the maximum operating pressure of 50 bar.
 - Observe a minimum distance of 30 cm from the top of the battery.
 - The battery should be sprayed over its entire surface to avoid localised overheating.
- Do not clean one spot for more than 3 seconds with the jet to avoid exceeding the maximum battery surface temperature of 60°C.
 - After cleaning dry the battery surface with suitable materials e.g. compressed air or cleaning cloths.

Battery cleaned.

9 Storing the battery

NOTE

The battery should not be stored for longer than 3 months without charging as otherwise it will no longer be functional.

If the battery is to be taken out of service for a long period, it should be stored fully charged in a dry room protected from frost. To ensure the availability of the battery the following charges can be selected:

- Monthly compensation charge for PzS and PzB batteries or 3-monthly full charge for PzV batteries
- Trickle charge for a charge voltage of 2.23 volts x no. of cells for PzS, PzM and PzB batteries or 2.25 volts x no. of cells for PzV batteries.

If the battery is to be taken out of service for a long period (> 3 months), it should, as far as possible, be charged to 50% of its charge level and stored in a dry room protected from frost.

10 Troubleshooting

If any faults are found on the battery or charger, contact the manufacturer's customer service department immediately.



The operations required must be carried out by the manufacturer's customer service department or a customer service organisation authorised by the manufacturer.

11 Disposal

Batteries marked with the recycling symbol and the sign showing a crossed-out rubbish bin should not be disposed of with ordinary household waste.





Buy-back terms and type of recycling are to be agreed with the manufacturer as described in § 8 of the battery legislation.